

2012 - Mazda6 - Transmission/ Transaxle


CLUTCH MASTER CYLINDER REMOVAL/ INSTALLATION [G66M-R]

CAUTION:

- If clutch fluid gets on a painted surface, it will cause the paint to peel. Be careful not to spill clutch fluid on the painted surfaces. Wash off any spilled clutch fluid with water immediately.

NOTE:

- If clutch system-related hydraulic parts are removed, supply clutch fluid, bleed air, and inspect for fluid leakage after the installation.
1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 2. Remove the battery and battery tray. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 3. Remove the cowl panel. (See [COWL PANEL REMOVAL/ INSTALLATION](#).)
 4. Remove the PCM and the PCM bracket. (See [PCM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 5. Remove in the order indicated in the table.
 6. Plug the clutch pipe after removing it to avoid leakage.
 7. Install in the reverse order of removal.

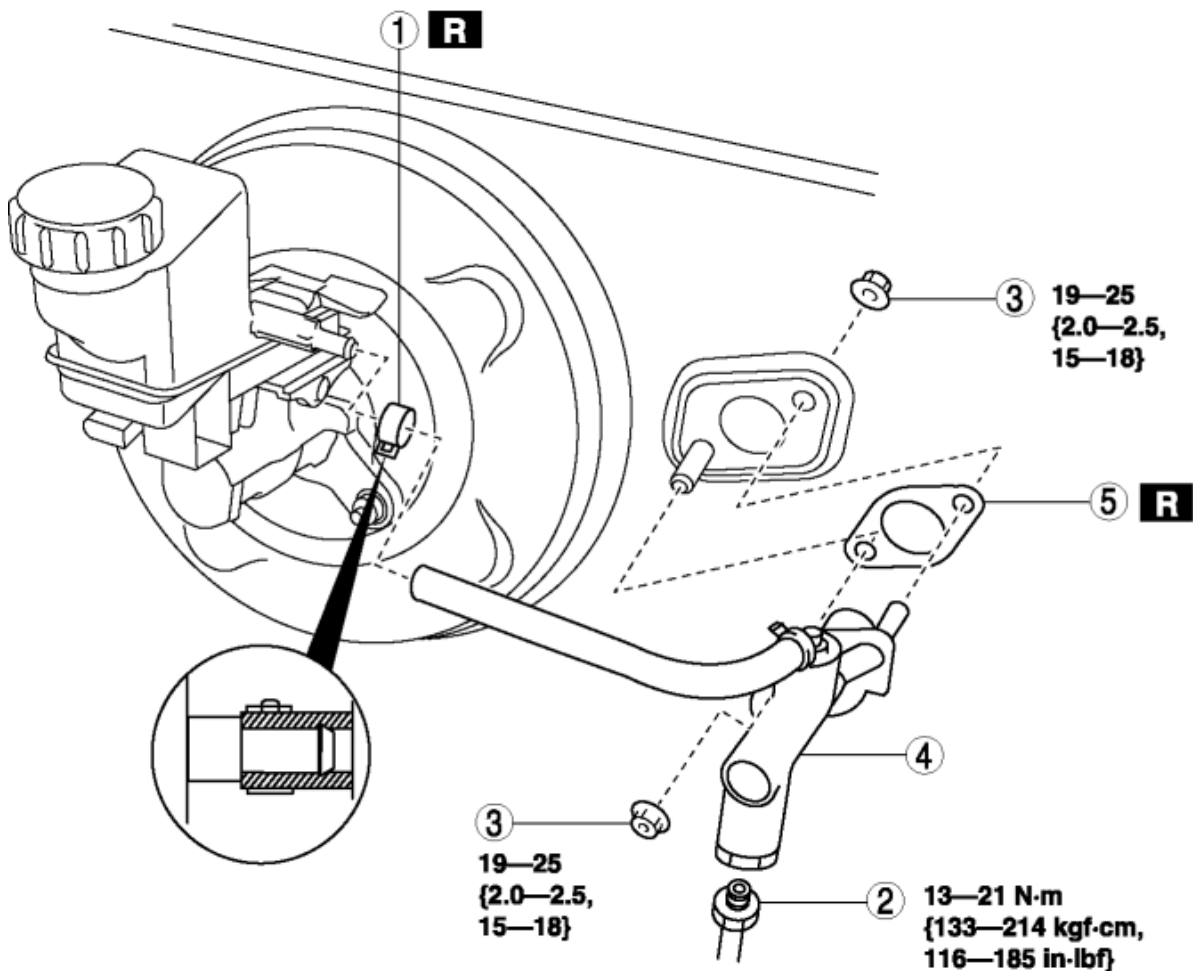

N·m {kgf·m, ft·lbf}

1	Clip
2	Clutch pipe
3	Nut
4	Clutch master cylinder
5	Gasket

2012 - Mazda6 - Transmission/ Transaxle


CLUTCH MASTER CYLINDER REMOVAL/ INSTALLATION [G66M-R]

CAUTION:

- If clutch fluid gets on a painted surface, it will cause the paint to peel. Be careful not to spill clutch fluid on the painted surfaces. Wash off any spilled clutch fluid with water immediately.

NOTE:

- If clutch system-related hydraulic parts are removed, supply clutch fluid, bleed air, and inspect for fluid leakage after the installation.
1. Disconnect the negative battery cable. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 2. Remove the battery and battery tray. (See [BATTERY REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 3. Remove the cowl panel. (See [COWL PANEL REMOVAL/ INSTALLATION](#).)
 4. Remove the PCM and the PCM bracket. (See [PCM REMOVAL/ INSTALLATION \[MZR 2.5\]](#).)
 5. Remove in the order indicated in the table.
 6. Plug the clutch pipe after removing it to avoid leakage.
 7. Install in the reverse order of removal.

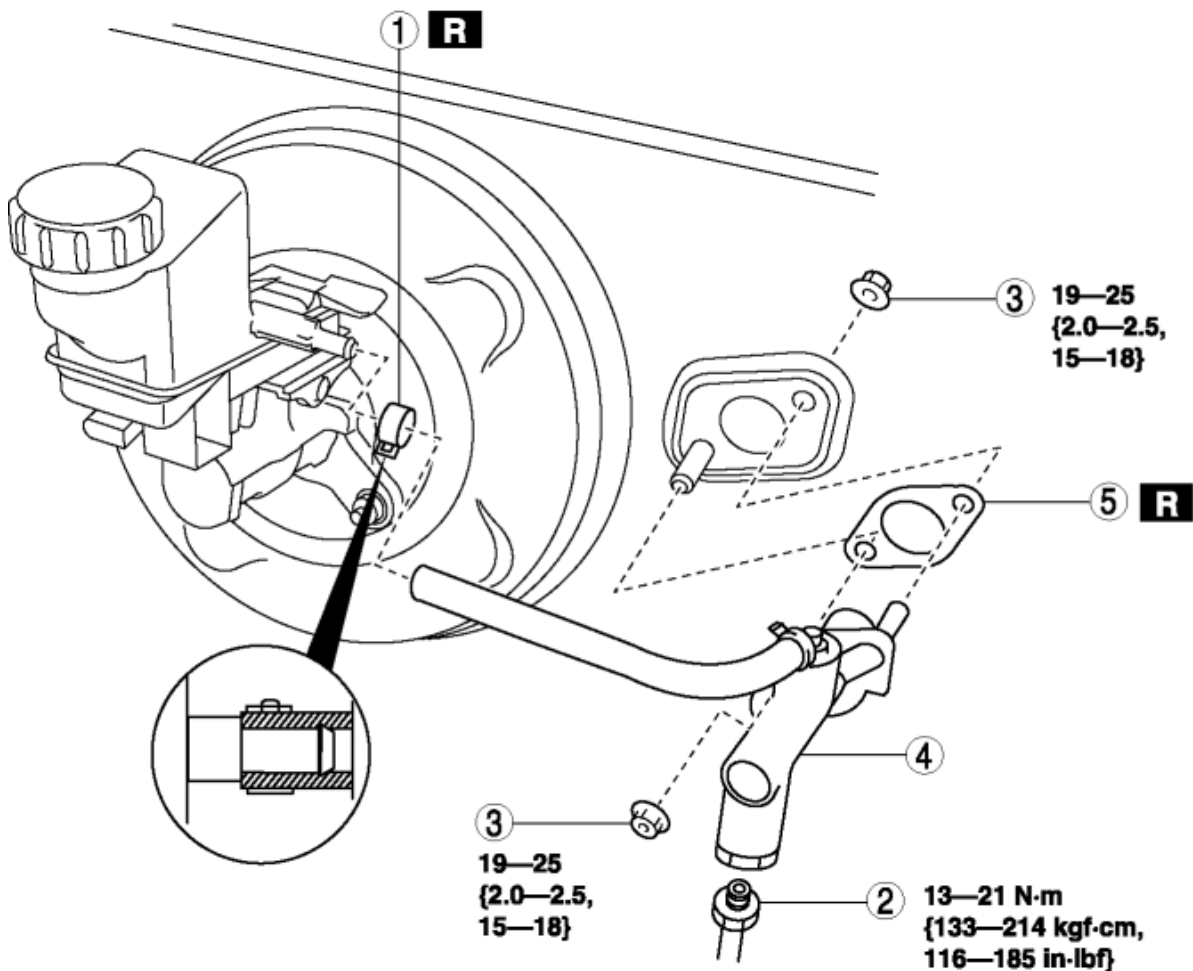

N·m {kgf·m, ft·lbf}

1	Clip
2	Clutch pipe
3	Nut
4	Clutch master cylinder
5	Gasket