


2012 - Mazda6 - Transmission/ Transaxle

CLUTCH RELEASE CYLINDER DISASSEMBLY/ ASSEMBLY [G66M-R]

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

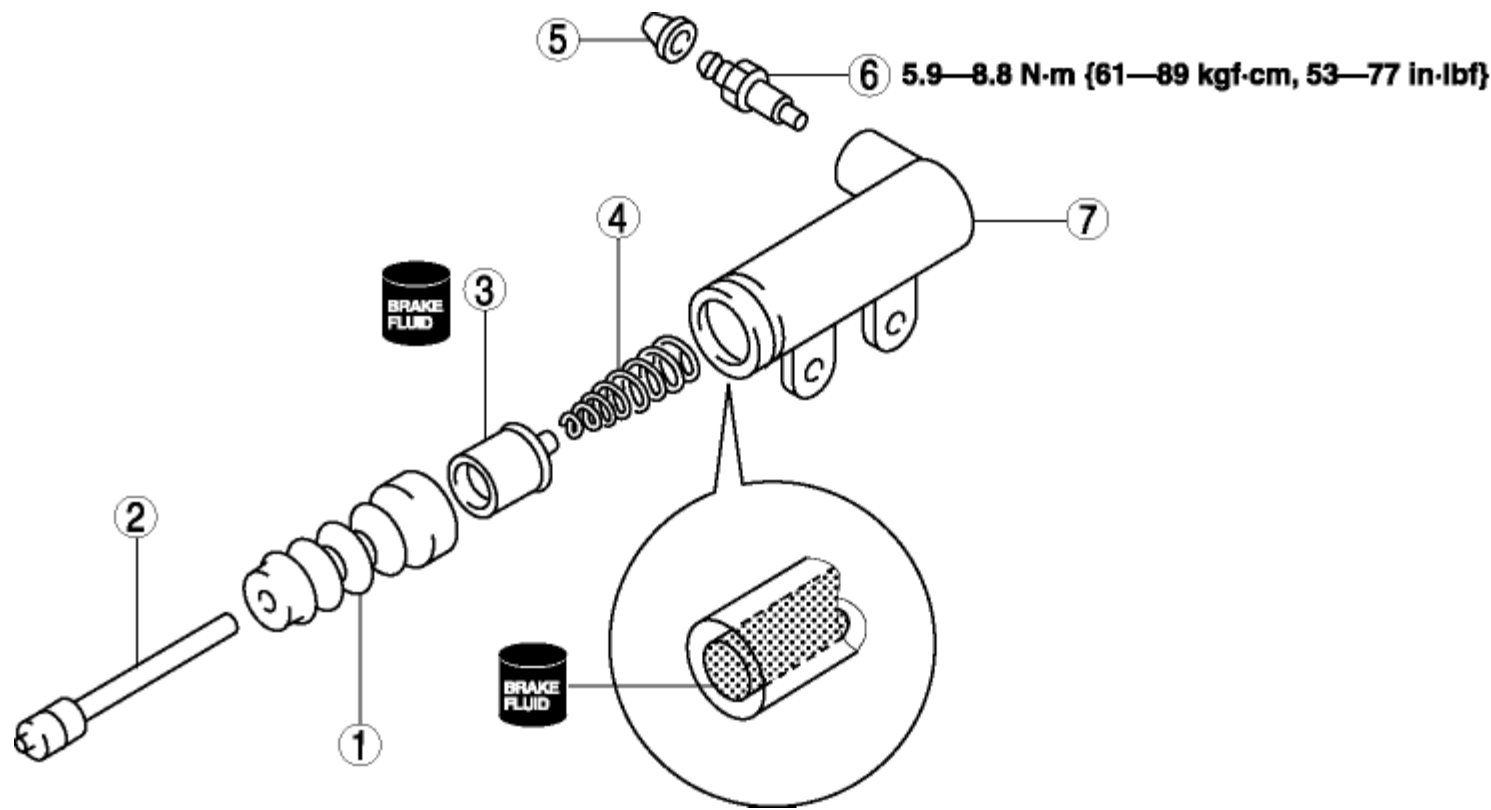


1	Boot
2	Push rod
3	Piston and cap
4	Return spring
5	Bleeder cap
6	Bleeder screw
7	Release cylinder body

2012 - Mazda6 - Transmission/ Transaxle

CLUTCH RELEASE CYLINDER DISASSEMBLY/ ASSEMBLY [G66M-R]

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

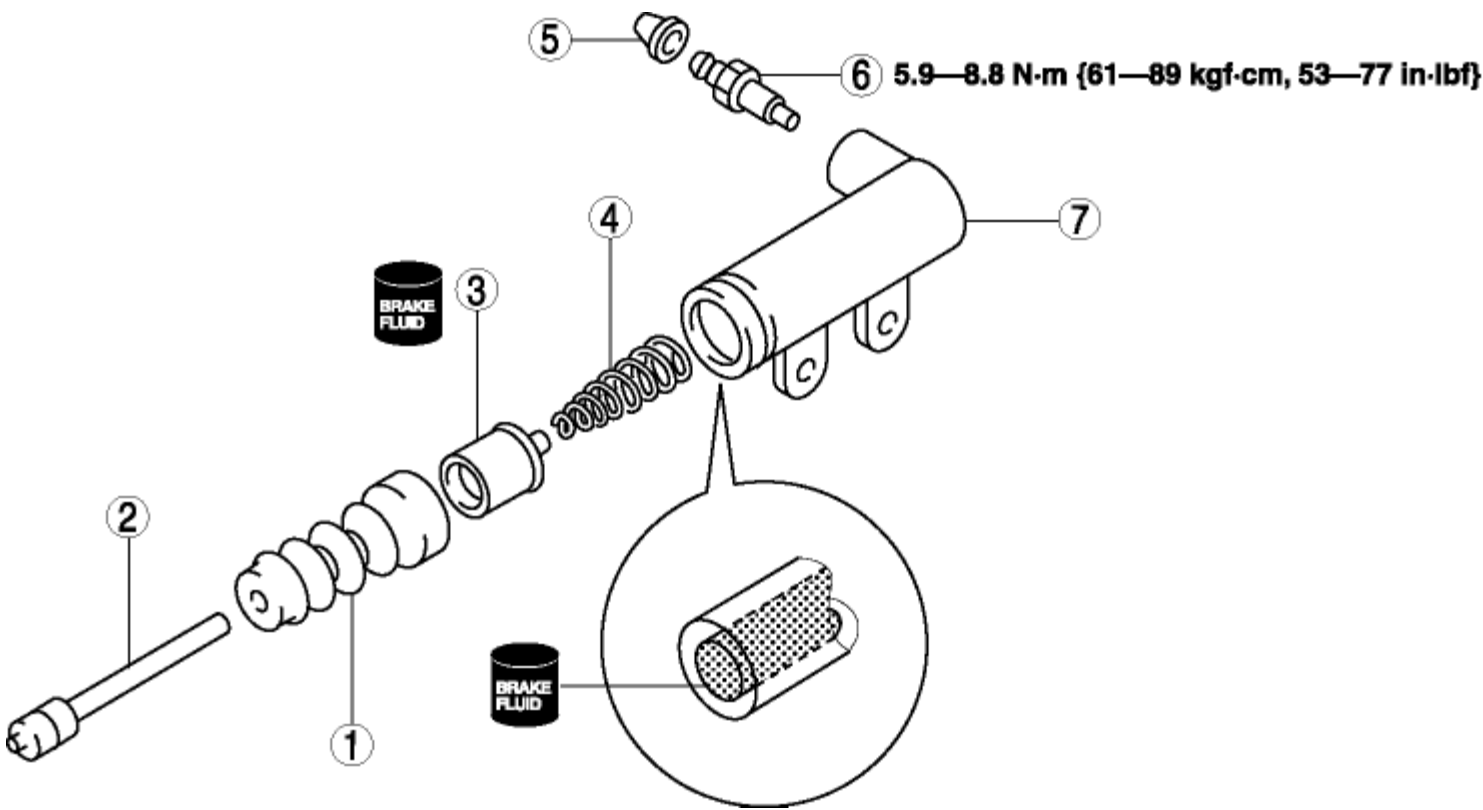

1	Boot
2	Push rod
3	Piston and cap
4	Return spring
5	Bleeder cap
6	Bleeder screw
7	Release cylinder body

