


2012 - Mazda6 - Transmission/ Transaxle

CLUTCH MASTER CYLINDER DISASSEMBLY/ ASSEMBLY [G66M-R]

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

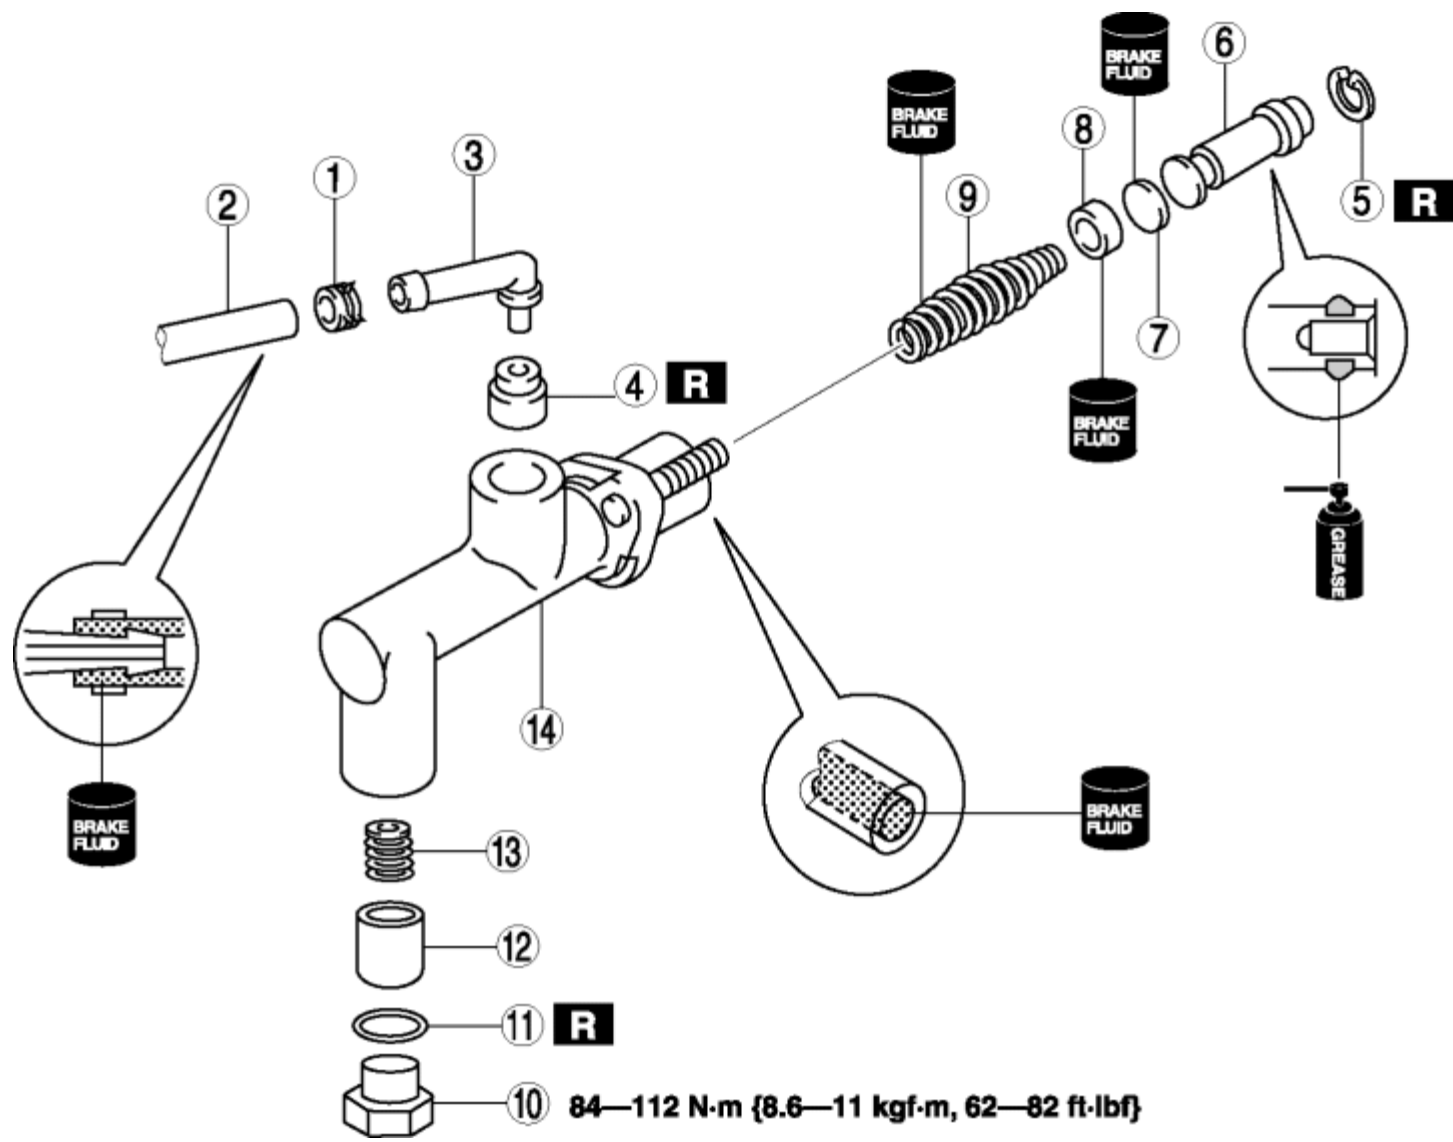


1	Clip
2	Hose
3	Joint

4	Bushing
5	Snap ring (See Snap Ring Disassembly/ Assembly Note.)
6	Piston and secondary cap component
7	Spacer
8	Primary cap
9	Return spring
10	Joint bolt
11	Gasket
12	One-way valve piston
13	One-way valve spring
14	Clutch master cylinder body

Snap Ring Disassembly/ Assembly Note

1. Hold the piston down using a cloth-wrapped pin punch.

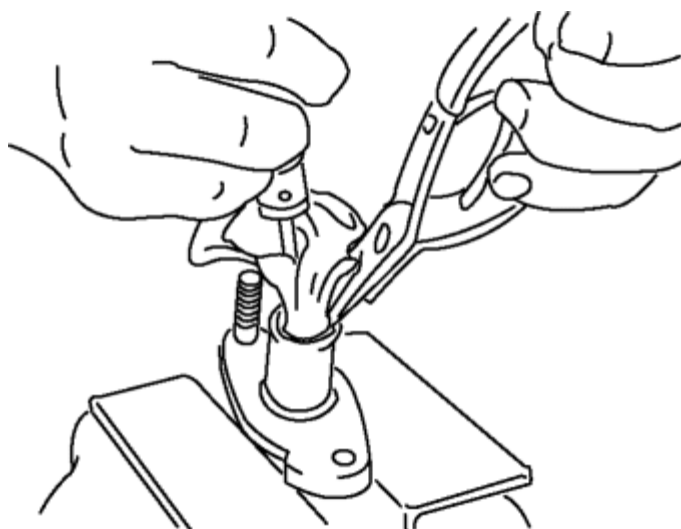


- If disassembling, remove the snap ring; if assembling, install it.

2012 - Mazda6 - Transmission/ Transaxle

CLUTCH MASTER CYLINDER DISASSEMBLY/ ASSEMBLY [G66M-R]

- 1. Disassemble in the order indicated in the table.
- 2. Assemble in the reverse order of disassembly.

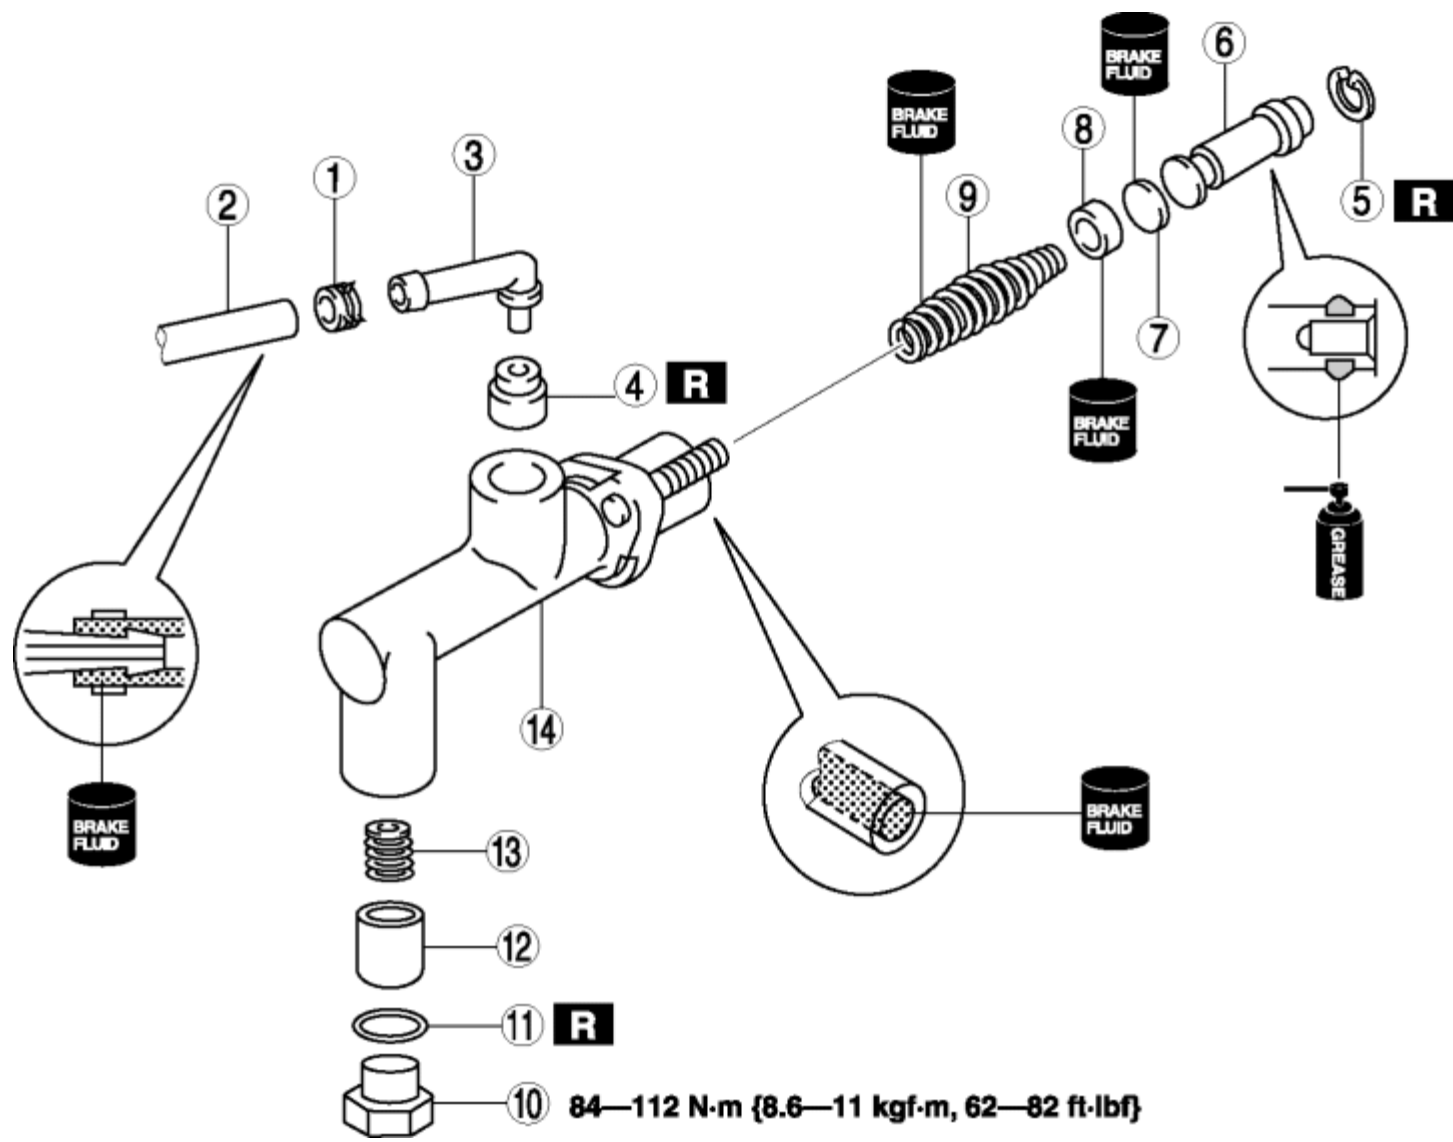


1	Clip
2	Hose
3	Joint

4	Bushing
5	Snap ring (See Snap Ring Disassembly/ Assembly Note.)
6	Piston and secondary cap component
7	Spacer
8	Primary cap
9	Return spring
10	Joint bolt
11	Gasket
12	One-way valve piston
13	One-way valve spring
14	Clutch master cylinder body

Snap Ring Disassembly/ Assembly Note

1. Hold the piston down using a cloth-wrapped pin punch.

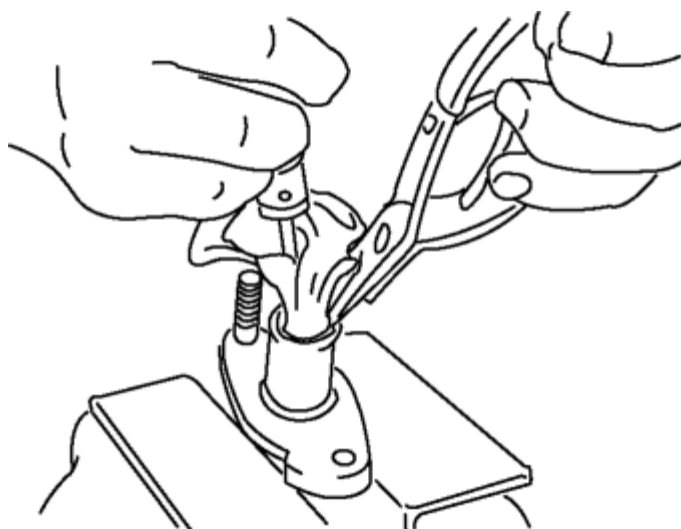

- If disassembling, remove the snap ring; if assembling, install it.

