


2012 - Mazda6 - Transmission/ Transaxle

MANUAL TRANSAXLE LOCATION INDEX [G66M-R]

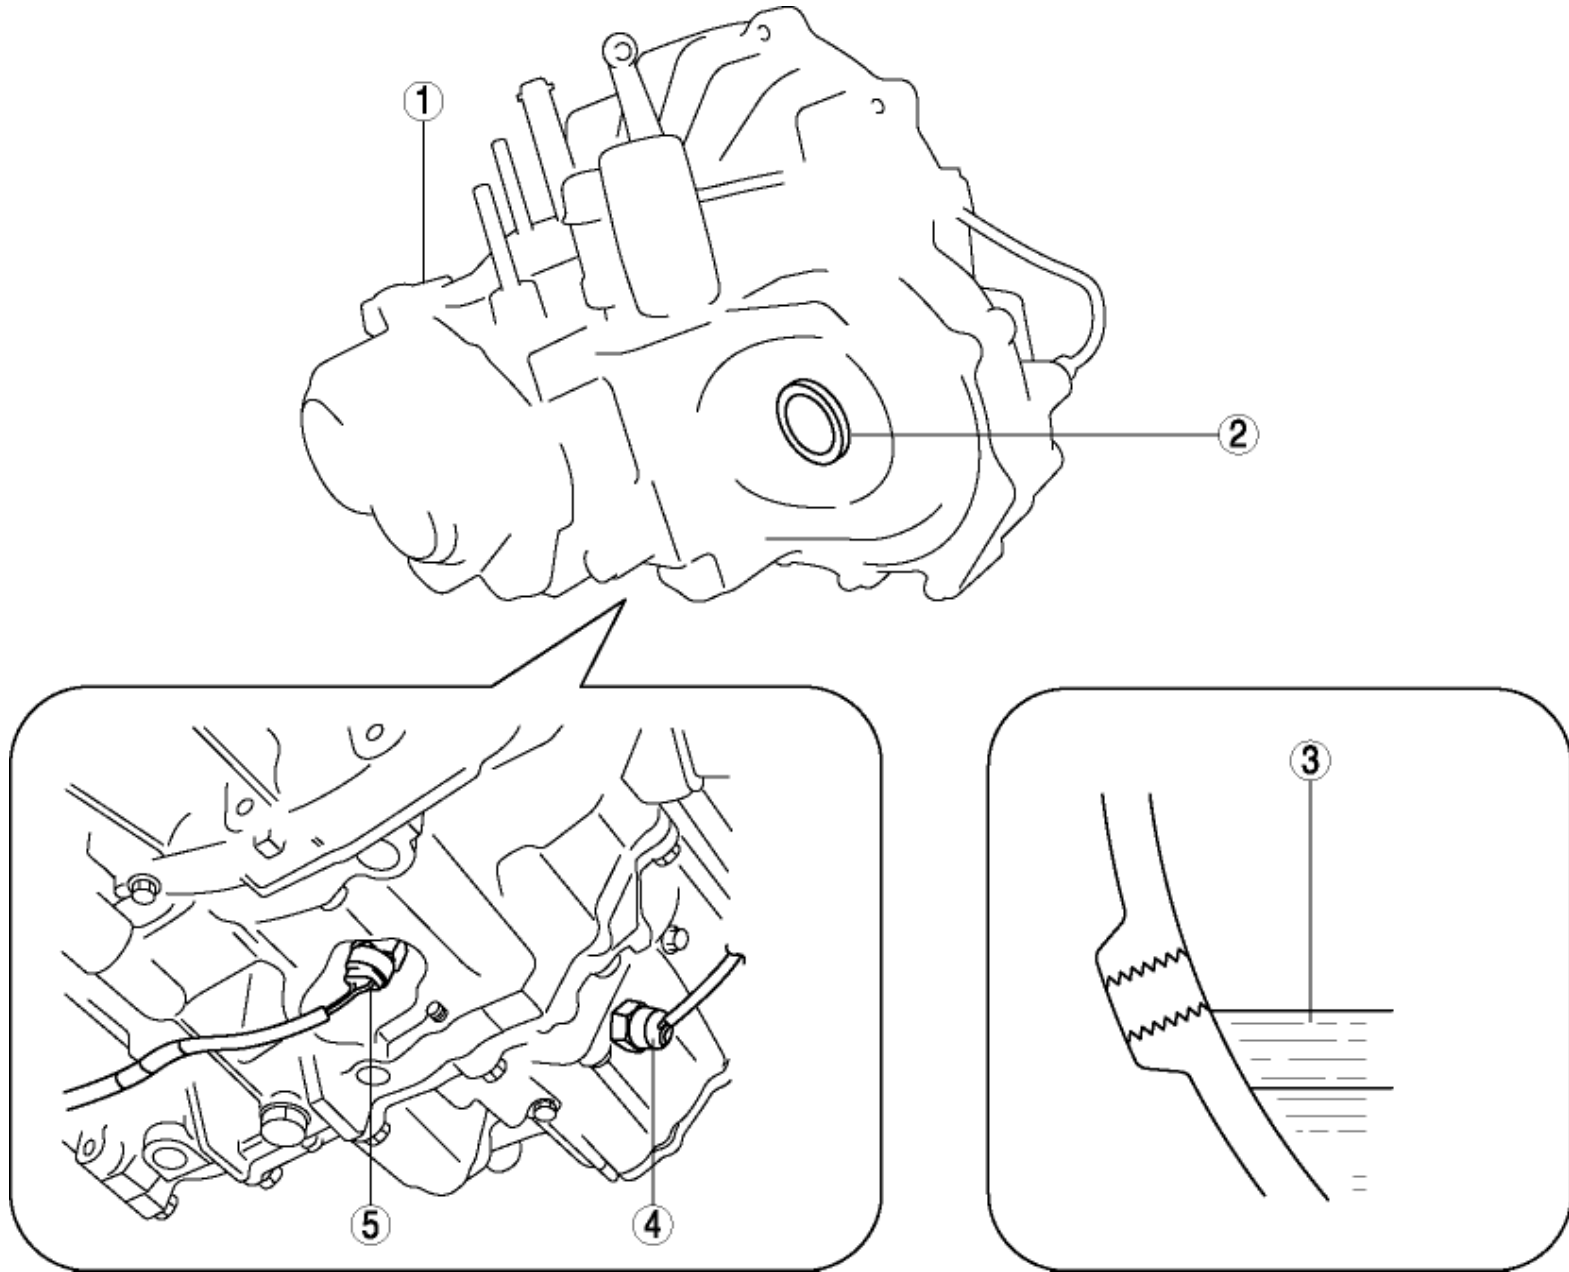

1 Manual transaxle

(See [MANUAL TRANSAXLE REMOVAL/ INSTALLATION \[G66M-R\]](#).)

2 Oil seal (differential)

(See [OIL SEAL \(DIFFERENTIAL\) REPLACEMENT \[G66M-R\]](#).)

3 Transaxle oil

(See [TRANSAXLE OIL INSPECTION \[G66M-R\]](#).)

(See [TRANSAXLE OIL REPLACEMENT \[G66M-R\]](#).)

4 Back-up light switch

(See [BACK-UP LIGHT SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)

5 Neutral switch

(See [NEUTRAL SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)


[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Transmission/ Transaxle

MANUAL TRANSAXLE LOCATION INDEX [G66M-R]

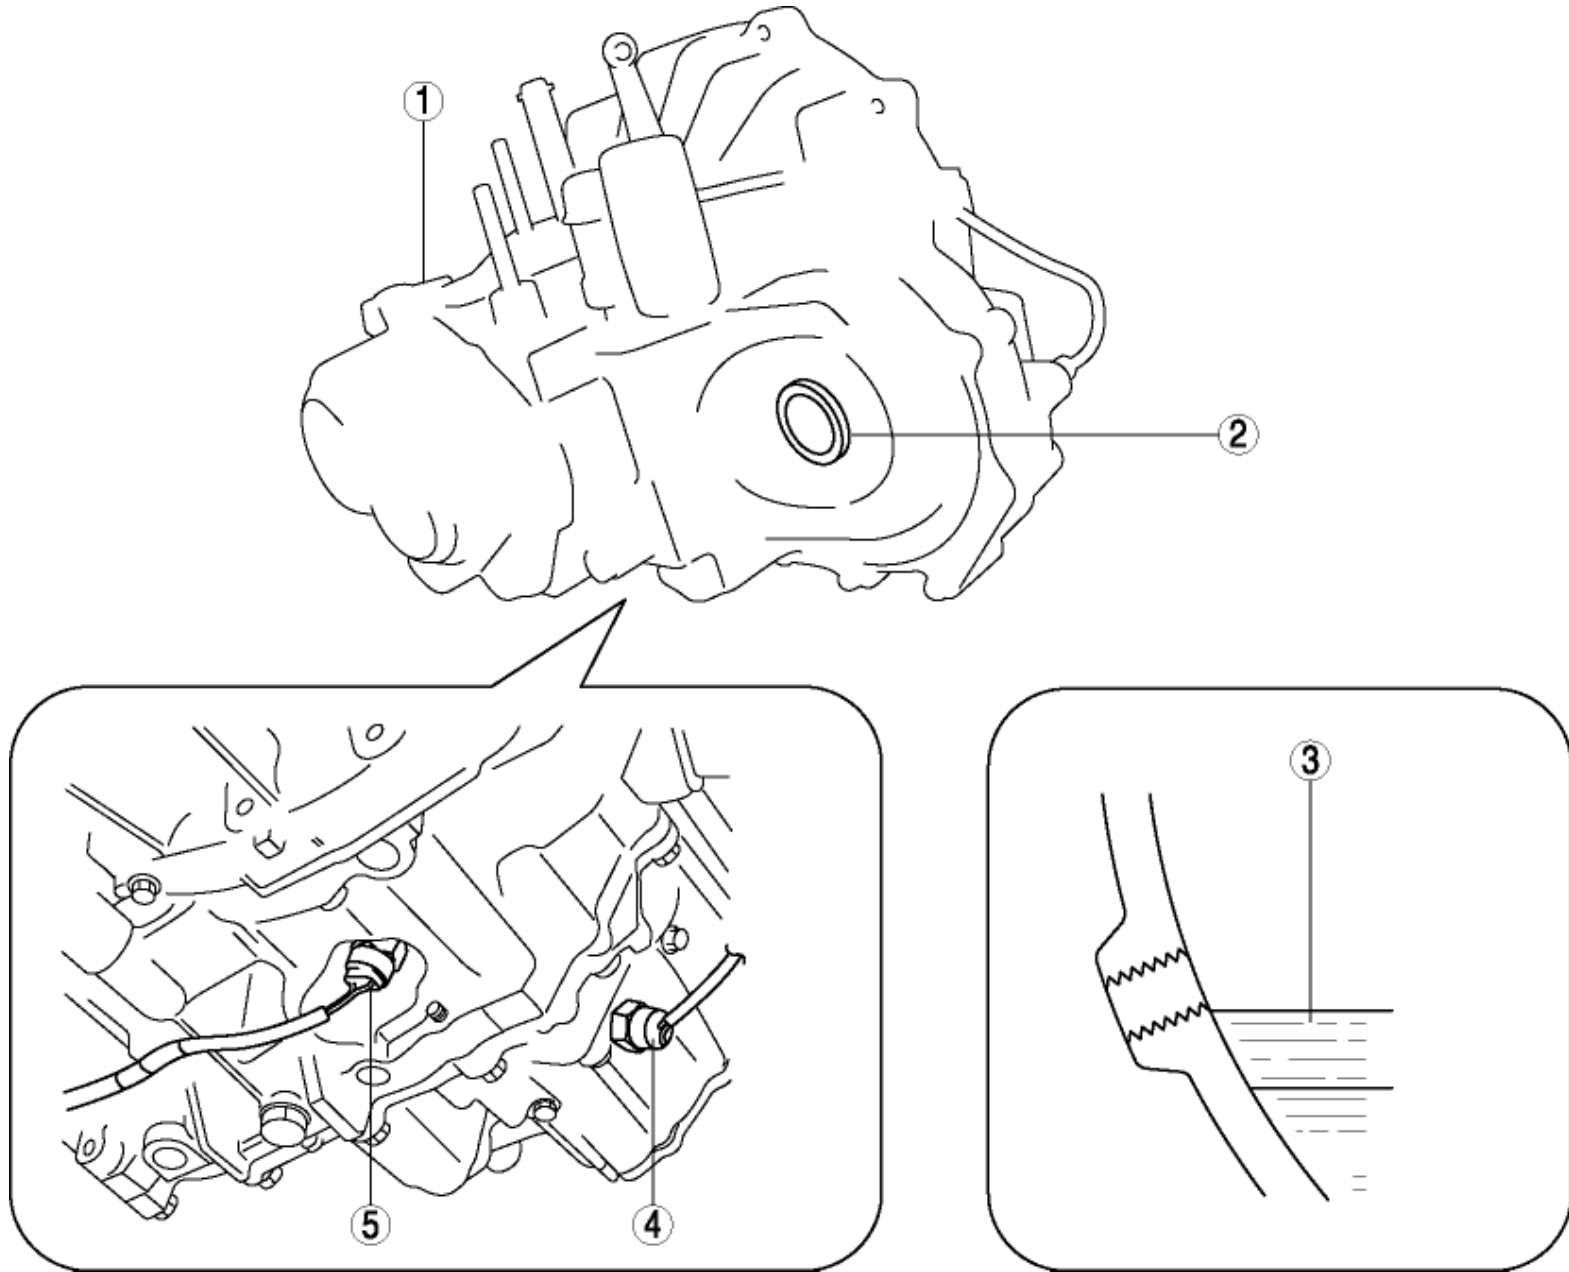

1 Manual transaxle

(See [MANUAL TRANSAXLE REMOVAL/ INSTALLATION \[G66M-R\]](#).)

2 Oil seal (differential)

(See [OIL SEAL \(DIFFERENTIAL\) REPLACEMENT \[G66M-R\]](#).)

3 Transaxle oil

(See [TRANSAXLE OIL INSPECTION \[G66M-R\]](#).)

(See [TRANSAXLE OIL REPLACEMENT \[G66M-R\]](#).)

4 Back-up light switch

(See [BACK-UP LIGHT SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)

5 Neutral switch

(See [NEUTRAL SWITCH REMOVAL/ INSTALLATION \[G66M-R\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.