

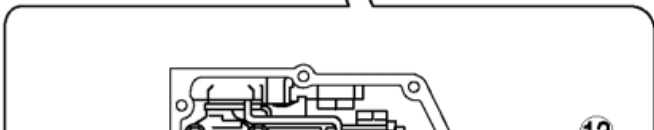
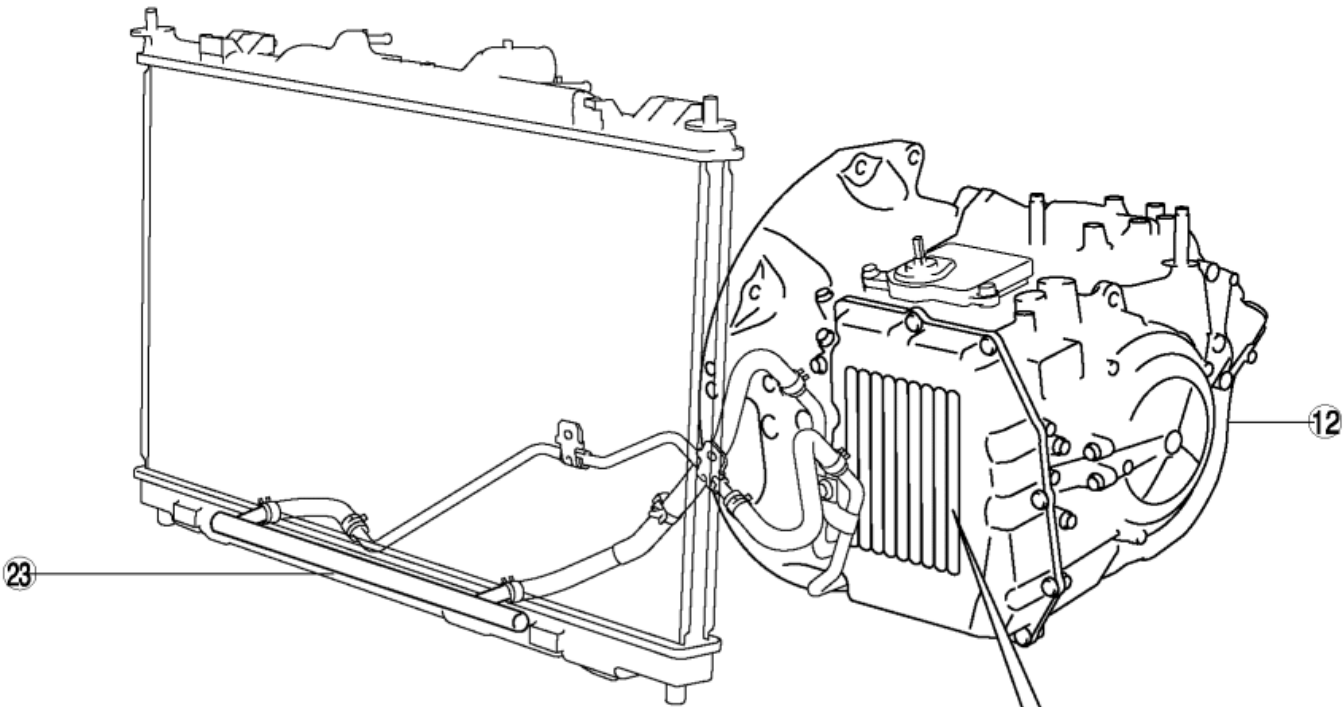
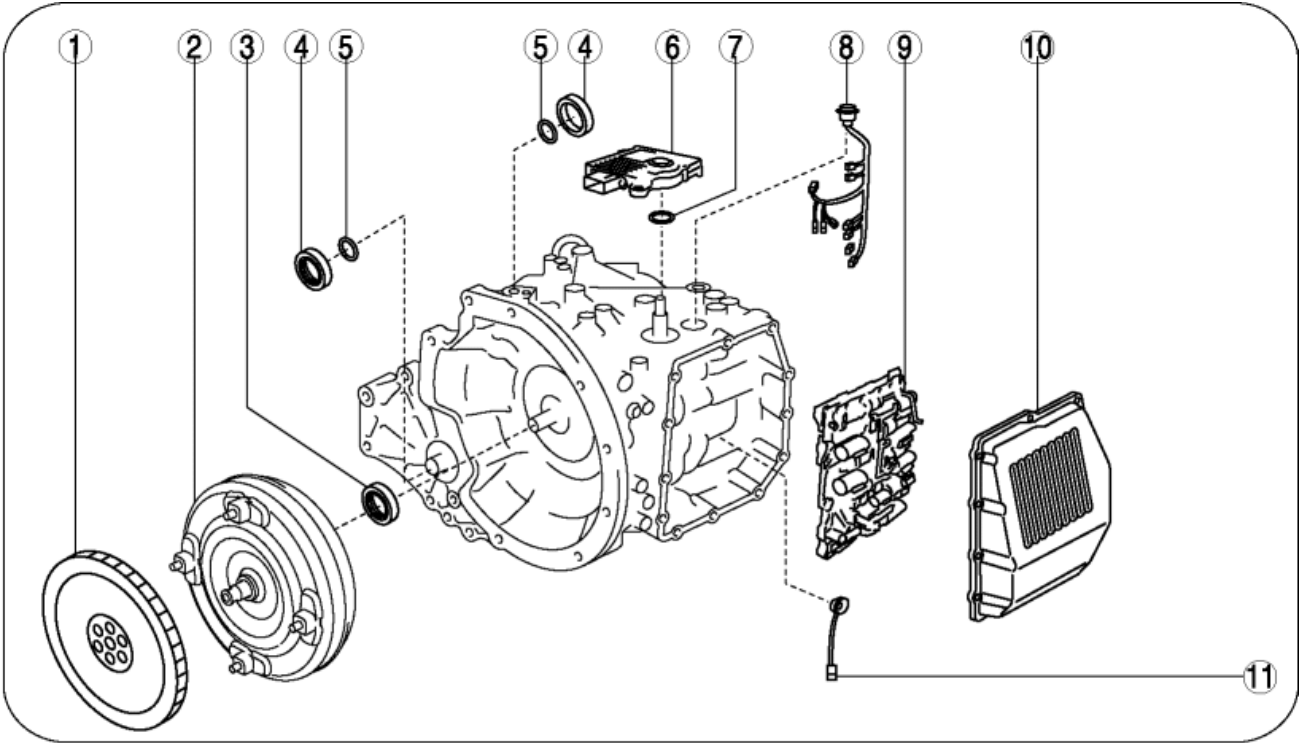


2012 - Mazda6 - Transmission/ Transaxle

AUTOMATIC TRANSAXLE LOCATION INDEX [AY6A-EL]

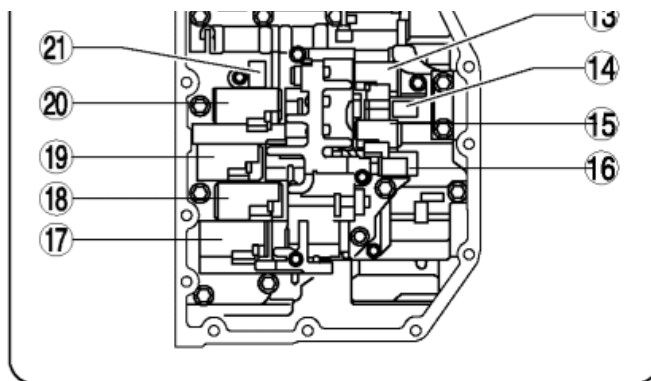


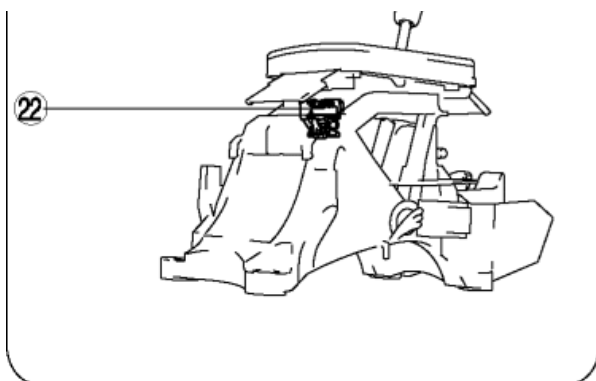

1	Drive plate (See DRIVE PLATE REMOVAL/ INSTALLATION [AY6A-EL] .)
2	Torque converter (See TORQUE CONVERTER REMOVAL/ INSTALLATION [AY6A-EL] .)
3	Oil seal (oil pump) (See OIL SEAL (OIL PUMP) REPLACEMENT [AY6A-EL] .)
4	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [AY6A-EL] .)
5	Differential gear O-ring (See DIFFERENTIAL GEAR O-RING REPLACEMENT [AY6A-EL] .)
6	TCM (See TRANSAXLE RANGE (TR) SWITCH INSPECTION [AY6A-EL] .) (See TRANSAXLE RANGE (TR) SWITCH REMOVAL/ INSTALLATION [AY6A-EL] .) (See TCM INSPECTION [AY6A-EL] .) (See TCM REMOVAL/ INSTALLATION [AY6A-EL] .) (See TCM NEUTRAL POSITION LEARNING [AY6A-EL] .)
7	Oil seal (manual shaft) (See OIL SEAL (MANUAL SHAFT) REPLACEMENT [AY6A-EL] .)
8	Coupler component (See COUPLER COMPONENT INSPECTION [AY6A-EL] .) (See COUPLER COMPONENT REMOVAL/ INSTALLATION [AY6A-EL] .)
9	Control valve body (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [AY6A-EL] .)
10	Control valve body cover (See CONTROL VALVE BODY COVER REPLACEMENT [AY6A-EL] .)
11	Input/turbine speed sensor

	(See INPUT/ TURBINE SPEED SENSOR INSPECTION [AY6A-EL].) (See INPUT/ TURBINE SPEED SENSOR REMOVAL/ INSTALLATION [AY6A-EL].)
12	Automatic transaxle (See MECHANICAL SYSTEM TEST [AY6A-EL].) (See ROAD TEST [AY6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [AY6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [AY6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) LEVEL ADJUSTMENT [AY6A-EL].) (See AUTOMATIC TRANSAXLE REMOVAL/ INSTALLATION [AY6A-EL].) (See AUTOMATIC TRANSAXLE CLEANING [AY6A-EL].) (See AUTOMATIC TRANSAXLE DISASSEMBLY/ ASSEMBLY PRECAUTION [AY6A-EL].)
13	TCC control solenoid (See TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID INSPECTION [AY6A-EL].) (See TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID REMOVAL/ INSTALLATION [AY6A-EL].)
14	Shift solenoid B (See SHIFT SOLENOID B INSPECTION [AY6A-EL].) (See SHIFT SOLENOID B REMOVAL/ INSTALLATION [AY6A-EL].)
15	Line pressure control solenoid (See LINE PRESSURE CONTROL SOLENOID INSPECTION [AY6A-EL].) (See LINE PRESSURE CONTROL SOLENOID REMOVAL/ INSTALLATION [AY6A-EL].)
16	Shift solenoid A (See SHIFT SOLENOID A INSPECTION [AY6A-EL].) (See SHIFT SOLENOID A REMOVAL/ INSTALLATION [AY6A-EL].)
17	Shift solenoid F (See SHIFT SOLENOID F INSPECTION [AY6A-EL].) (See SHIFT SOLENOID F REMOVAL/ INSTALLATION [AY6A-EL].)
18	Shift solenoid E (See SHIFT SOLENOID E INSPECTION [AY6A-EL].) (See SHIFT SOLENOID E REMOVAL/ INSTALLATION [AY6A-EL].)
19	Shift solenoid D (See SHIFT SOLENOID D INSPECTION [AY6A-EL].) (See SHIFT SOLENOID D REMOVAL/ INSTALLATION [AY6A-EL].)
20	Shift solenoid C (See SHIFT SOLENOID C INSPECTION [AY6A-EL].) (See SHIFT SOLENOID C REMOVAL/ INSTALLATION [AY6A-EL].)
21	TFT sensor

	(See TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR INSPECTION [AY6A-EL] .)
	(See TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/ INSTALLATION [AY6A-EL] .)
22	M position switch Up switch Down switch (See M POSITION SWITCH INSPECTION [AY6A-EL] .) (See M POSITION SWITCH REMOVAL/ INSTALLATION [AY6A-EL] .) (See UP SWITCH INSPECTION [AY6A-EL] .) (See UP SWITCH REMOVAL/ INSTALLATION [AY6A-EL] .) (See DOWN SWITCH INSPECTION [AY6A-EL] .) (See DOWN SWITCH REMOVAL/ INSTALLATION [AY6A-EL] .)
23	Oil cooler (See OIL COOLER FLUSHING [AY6A-EL] .) (See OIL COOLER REMOVAL/ INSTALLATION [AY6A-EL] .)

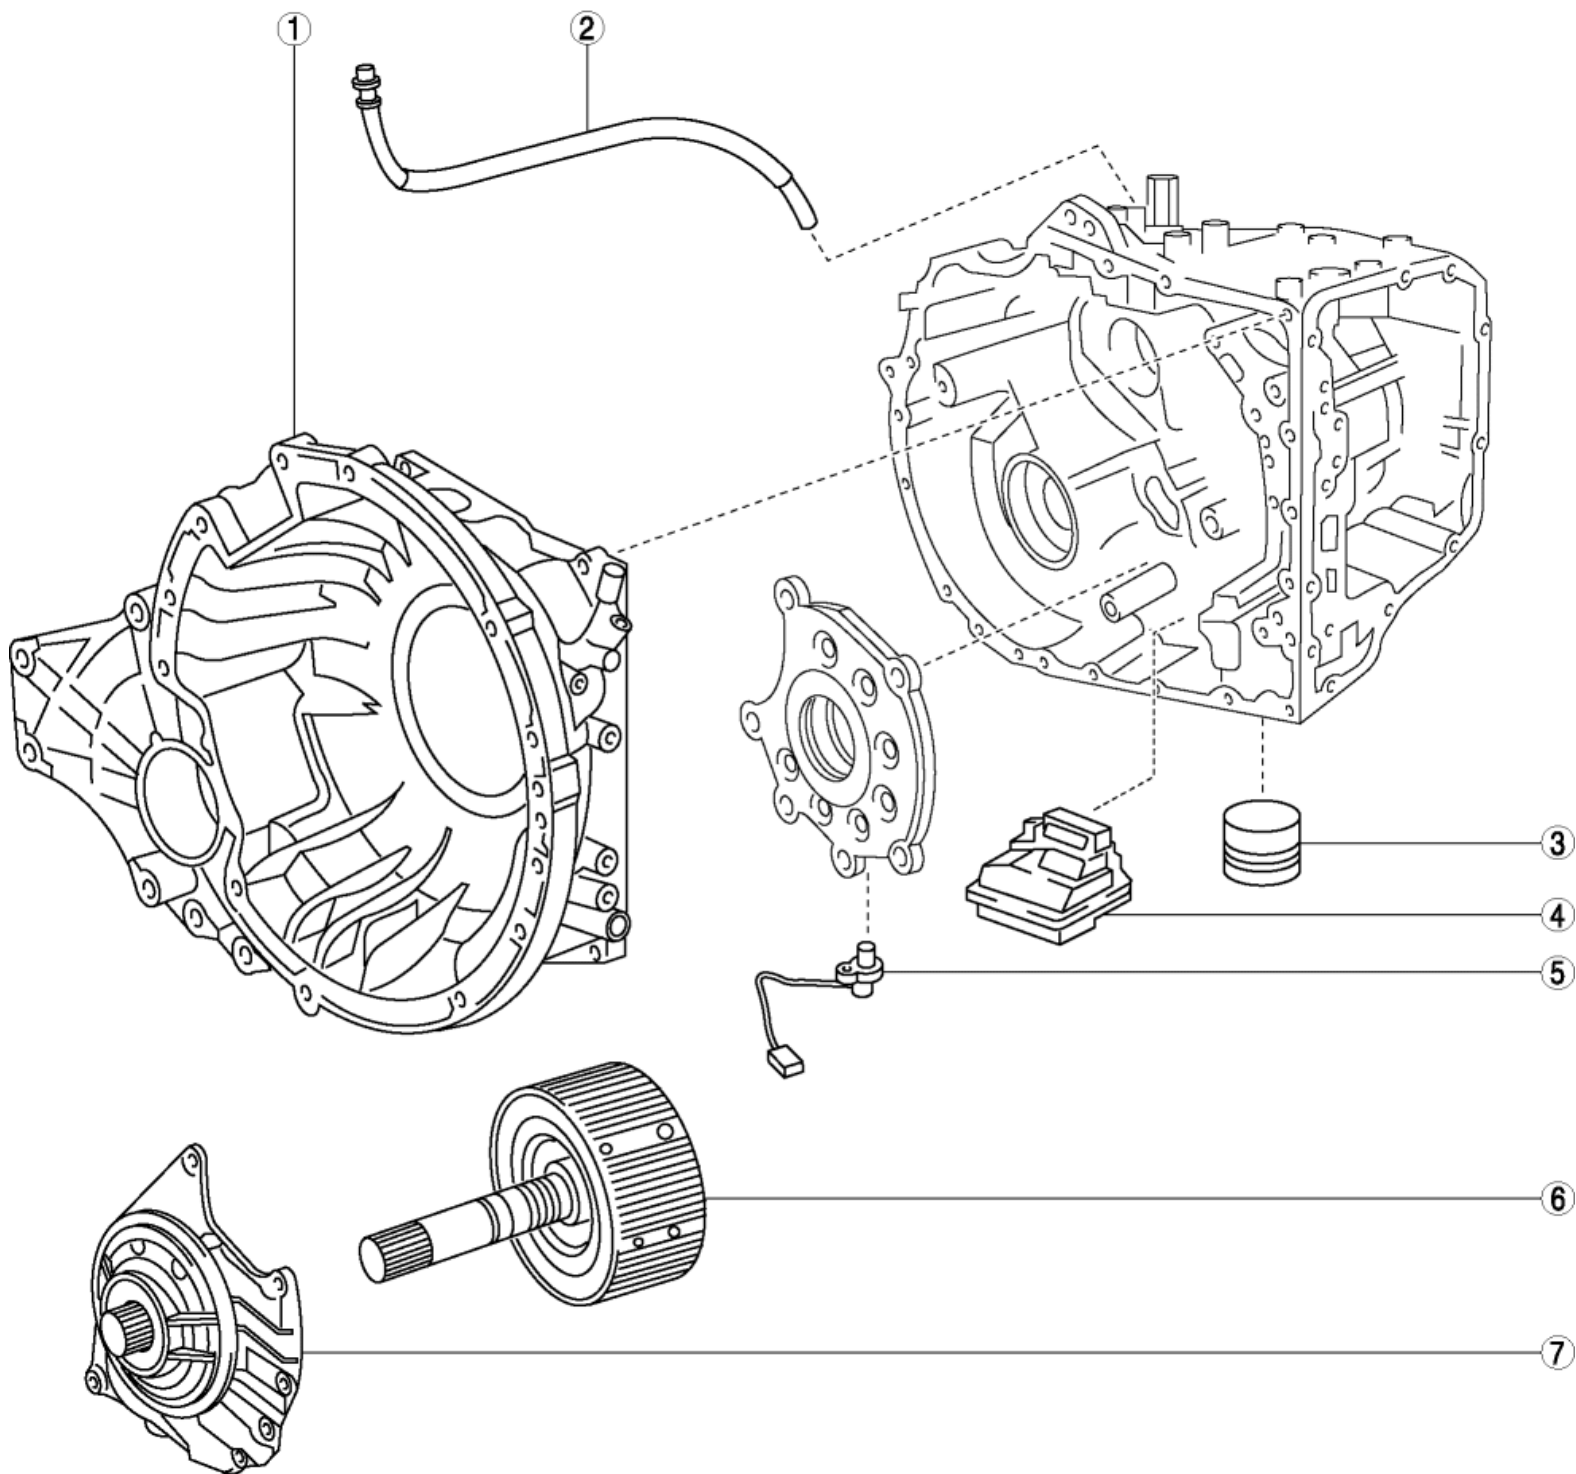

1 Converter housing

(See [CONVERTER HOUSING REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

2 Breather hose

(See [BREATHER COMPONENT REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

3 B1 break piston cover




(See [B1 BRAKE PISTON COVER REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)



4 Oil strainer

	(See OIL STRAINER REMOVAL/ INSTALLATION [AY6A-EL] .)
5VSS	(See VEHICLE SPEED SENSOR (VSS) INSPECTION [AY6A-EL] .) (See VEHICLE SPEED SENSOR (VSS) REMOVAL/ INSTALLATION [AY6A-EL] .)
6Front planetary gear component and input shaft	(See FRONT PLANETARY GEAR COMPONENT AND INPUT SHAFT REMOVAL/ INSTALLATION [AY6A-EL] .) (See FRONT PLANETARY GEAR COMPONENT AND INPUT SHAFT DI SASSEMBLY/ ASSEMBLY [AY6A-EL] .)
7Oil pump	(See OIL PUMP REMOVAL/ INSTALLATION [AY6A-EL] .) (See OIL PUMP DI SASSEMBLY/ ASSEMBLY [AY6A-EL] .)

2012 - Mazda6 - Transmission/ Transaxle

AUTOMATIC TRANSAXLE LOCATION INDEX [AY6A-EL]

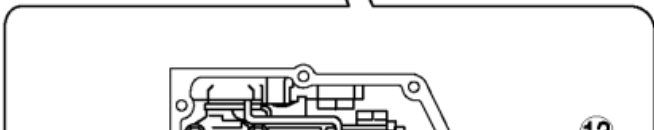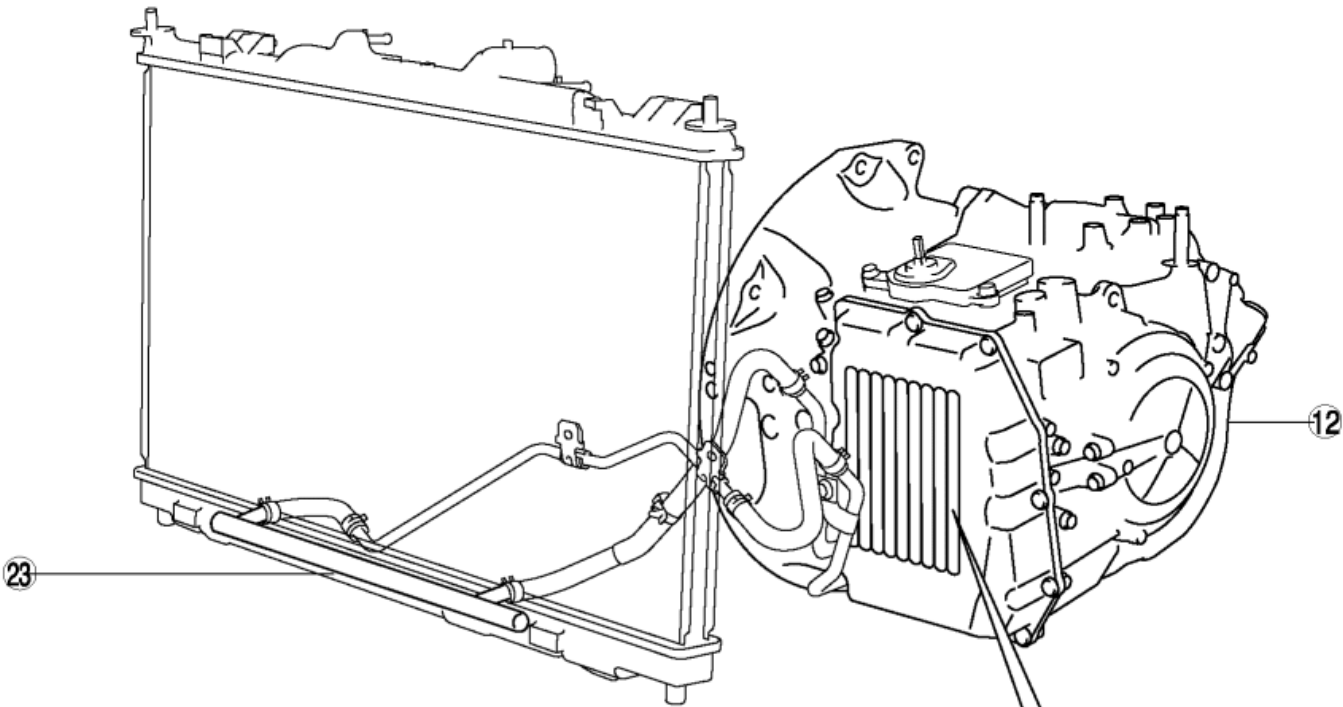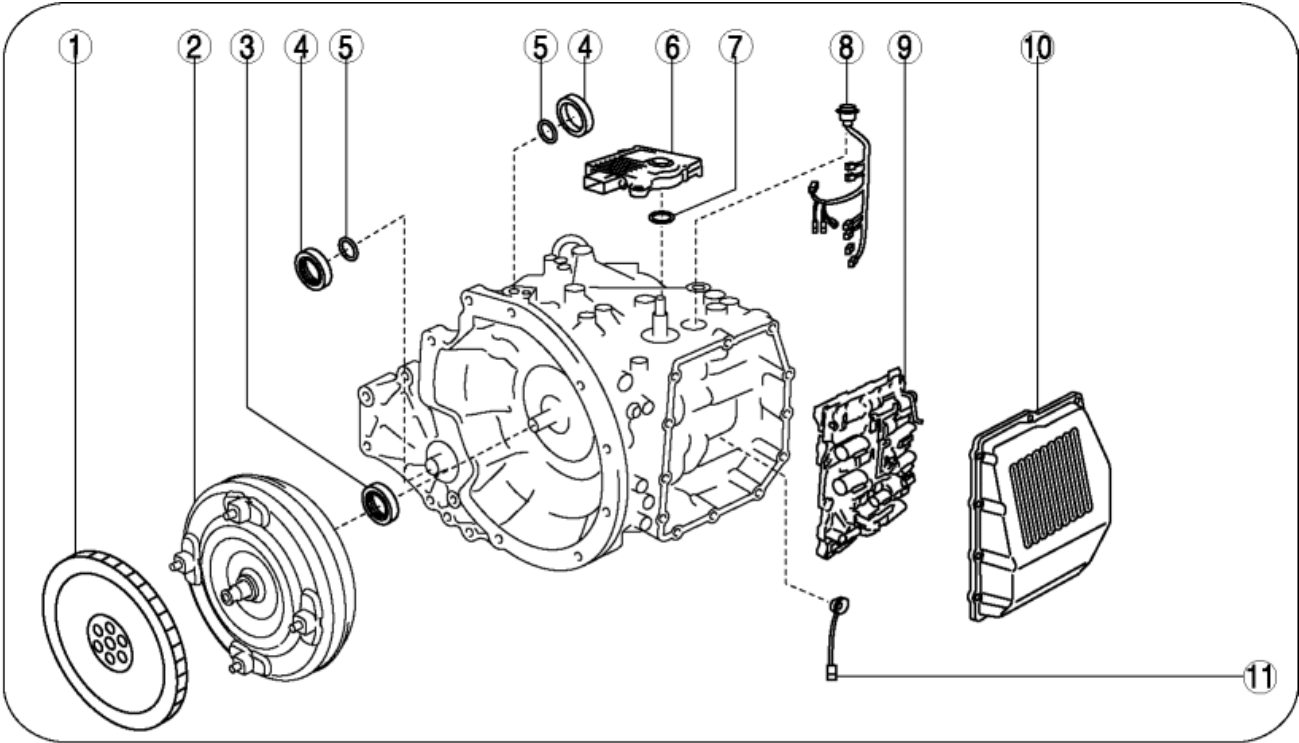


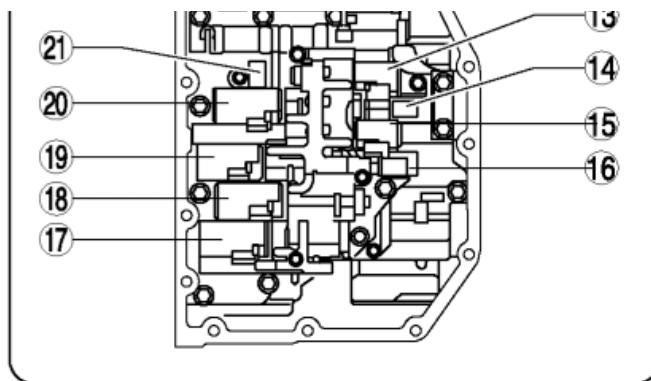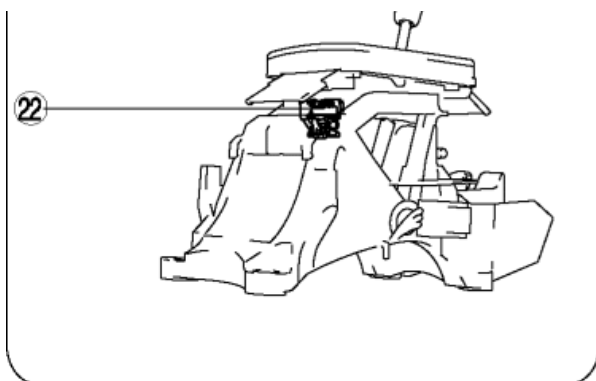

1	Drive plate (See DRIVE PLATE REMOVAL/ INSTALLATION [AY6A-EL] .)
2	Torque converter (See TORQUE CONVERTER REMOVAL/ INSTALLATION [AY6A-EL] .)
3	Oil seal (oil pump) (See OIL SEAL (OIL PUMP) REPLACEMENT [AY6A-EL] .)
4	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [AY6A-EL] .)
5	Differential gear O-ring (See DIFFERENTIAL GEAR O-RING REPLACEMENT [AY6A-EL] .)
6	TCM (See TRANSAXLE RANGE (TR) SWITCH INSPECTION [AY6A-EL] .) (See TRANSAXLE RANGE (TR) SWITCH REMOVAL/ INSTALLATION [AY6A-EL] .) (See TCM INSPECTION [AY6A-EL] .) (See TCM REMOVAL/ INSTALLATION [AY6A-EL] .) (See TCM NEUTRAL POSITION LEARNING [AY6A-EL] .)
7	Oil seal (manual shaft) (See OIL SEAL (MANUAL SHAFT) REPLACEMENT [AY6A-EL] .)
8	Coupler component (See COUPLER COMPONENT INSPECTION [AY6A-EL] .) (See COUPLER COMPONENT REMOVAL/ INSTALLATION [AY6A-EL] .)
9	Control valve body (See CONTROL VALVE BODY REMOVAL/ INSTALLATION [AY6A-EL] .)
10	Control valve body cover (See CONTROL VALVE BODY COVER REPLACEMENT [AY6A-EL] .)
11	Input/turbine speed sensor

	(See INPUT/ TURBINE SPEED SENSOR INSPECTION [AY6A-EL].) (See INPUT/ TURBINE SPEED SENSOR REMOVAL/ INSTALLATION [AY6A-EL].)
12	Automatic transaxle (See MECHANICAL SYSTEM TEST [AY6A-EL].) (See ROAD TEST [AY6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [AY6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [AY6A-EL].) (See AUTOMATIC TRANSAXLE FLUID (ATF) LEVEL ADJUSTMENT [AY6A-EL].) (See AUTOMATIC TRANSAXLE REMOVAL/ INSTALLATION [AY6A-EL].) (See AUTOMATIC TRANSAXLE CLEANING [AY6A-EL].) (See AUTOMATIC TRANSAXLE DISASSEMBLY/ ASSEMBLY PRECAUTION [AY6A-EL].)
13	TCC control solenoid (See TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID INSPECTION [AY6A-EL].) (See TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID REMOVAL/ INSTALLATION [AY6A-EL].)
14	Shift solenoid B (See SHIFT SOLENOID B INSPECTION [AY6A-EL].) (See SHIFT SOLENOID B REMOVAL/ INSTALLATION [AY6A-EL].)
15	Line pressure control solenoid (See LINE PRESSURE CONTROL SOLENOID INSPECTION [AY6A-EL].) (See LINE PRESSURE CONTROL SOLENOID REMOVAL/ INSTALLATION [AY6A-EL].)
16	Shift solenoid A (See SHIFT SOLENOID A INSPECTION [AY6A-EL].) (See SHIFT SOLENOID A REMOVAL/ INSTALLATION [AY6A-EL].)
17	Shift solenoid F (See SHIFT SOLENOID F INSPECTION [AY6A-EL].) (See SHIFT SOLENOID F REMOVAL/ INSTALLATION [AY6A-EL].)
18	Shift solenoid E (See SHIFT SOLENOID E INSPECTION [AY6A-EL].) (See SHIFT SOLENOID E REMOVAL/ INSTALLATION [AY6A-EL].)
19	Shift solenoid D (See SHIFT SOLENOID D INSPECTION [AY6A-EL].) (See SHIFT SOLENOID D REMOVAL/ INSTALLATION [AY6A-EL].)
20	Shift solenoid C (See SHIFT SOLENOID C INSPECTION [AY6A-EL].) (See SHIFT SOLENOID C REMOVAL/ INSTALLATION [AY6A-EL].)
21	TFT sensor

	(See TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR INSPECTION [AY6A-EL] .)
	(See TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/ INSTALLATION [AY6A-EL] .)
22	M position switch Up switch Down switch (See M POSITION SWITCH INSPECTION [AY6A-EL] .) (See M POSITION SWITCH REMOVAL/ INSTALLATION [AY6A-EL] .) (See UP SWITCH INSPECTION [AY6A-EL] .) (See UP SWITCH REMOVAL/ INSTALLATION [AY6A-EL] .) (See DOWN SWITCH INSPECTION [AY6A-EL] .) (See DOWN SWITCH REMOVAL/ INSTALLATION [AY6A-EL] .)
23	Oil cooler (See OIL COOLER FLUSHING [AY6A-EL] .) (See OIL COOLER REMOVAL/ INSTALLATION [AY6A-EL] .)

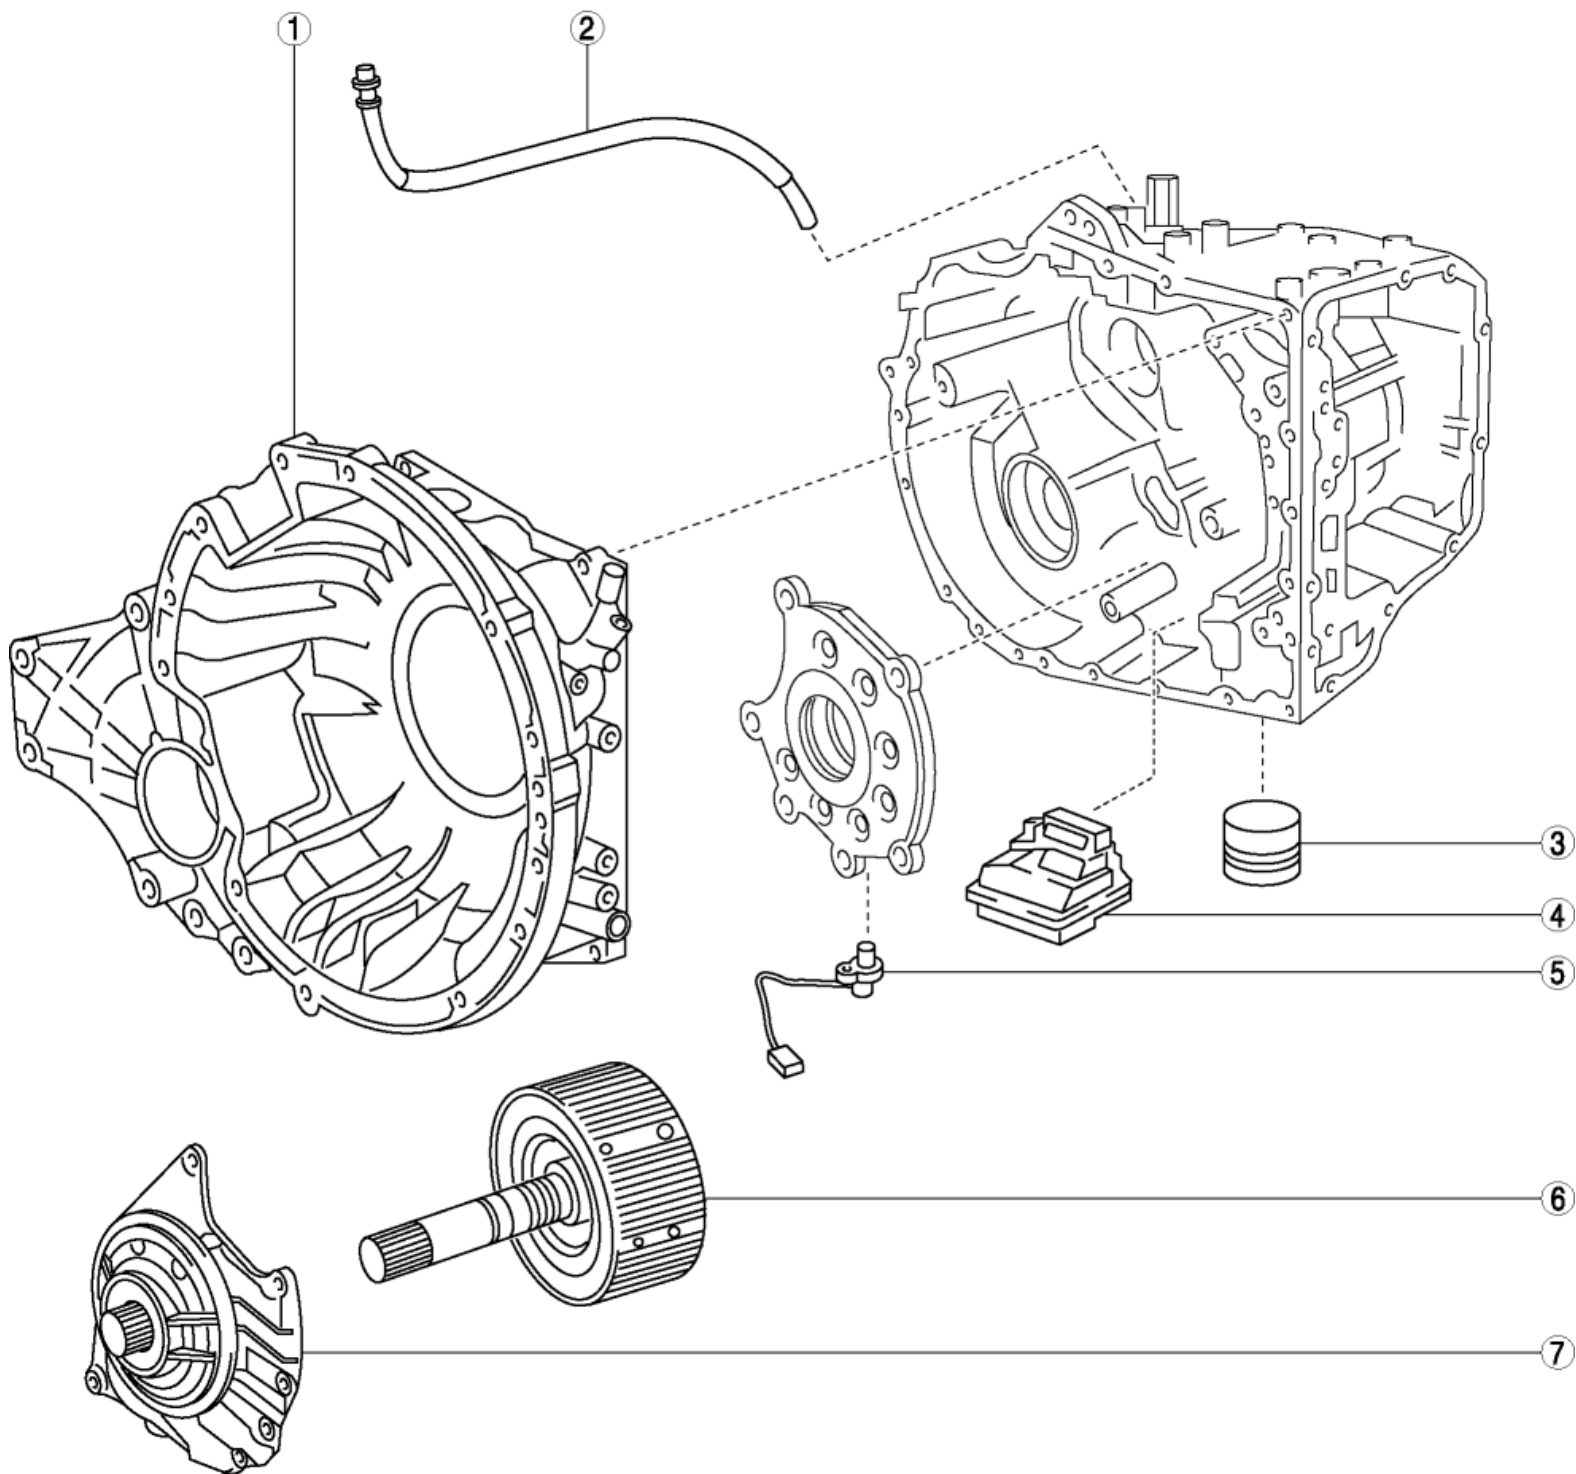

1 Converter housing

(See [CONVERTER HOUSING REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

2 Breather hose

(See [BREATHER COMPONENT REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

3 B1 break piston cover

(See [B1 BRAKE PISTON COVER REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

4 Oil strainer

	(See OIL STRAINER REMOVAL/ INSTALLATION [AY6A-EL] .)
5VSS	(See VEHICLE SPEED SENSOR (VSS) INSPECTION [AY6A-EL] .) (See VEHICLE SPEED SENSOR (VSS) REMOVAL/ INSTALLATION [AY6A-EL] .)
6Front planetary gear component and input shaft	(See FRONT PLANETARY GEAR COMPONENT AND INPUT SHAFT REMOVAL/ INSTALLATION [AY6A-EL] .) (See FRONT PLANETARY GEAR COMPONENT AND INPUT SHAFT DI SASSEMBLY/ ASSEMBLY [AY6A-EL] .)
7Oil pump	(See OIL PUMP REMOVAL/ INSTALLATION [AY6A-EL] .) (See OIL PUMP DI SASSEMBLY/ ASSEMBLY [AY6A-EL] .)