

2012 - Mazda6 - Transmission/ Transaxle

TRANSAXLE RANGE (TR) SWITCH INSPECTION [AY6A-EL]

1. Verify that the starter operates only when the ignition is switched to START with the selector lever in P or N position.
2. Verify that the back-up lights illuminate when shifted to R position with the ignition at ON.
3. Verify that the positions of the selector lever and the selector indicator light are aligned.
 - If there is any malfunction, perform the "Neutral Position Learning". (See [TCM NEUTRAL POSITION LEARNING \[AY6A-EL\]](#).)

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

TRANSAXLE RANGE (TR) SWITCH INSPECTION [AY6A-EL]

1. Verify that the starter operates only when the ignition is switched to START with the selector lever in P or N position.
2. Verify that the back-up lights illuminate when shifted to R position with the ignition at ON.
3. Verify that the positions of the selector lever and the selector indicator light are aligned.
 - If there is any malfunction, perform the "Neutral Position Learning". (See [TCM NEUTRAL POSITION LEARNING \[AY6A-EL\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.