


2012 - Mazda6 - Transmission/ Transaxle

BREATHER COMPONENT REMOVAL/ INSTALLATION [AY6A-EL]

- 1. Disconnect the negative battery cable.
- 2. Remove the battery. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- 3. Remove the battery tray. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- 4. Remove in the order indicated in the table.
- 5. Install in the reverse order of removal.

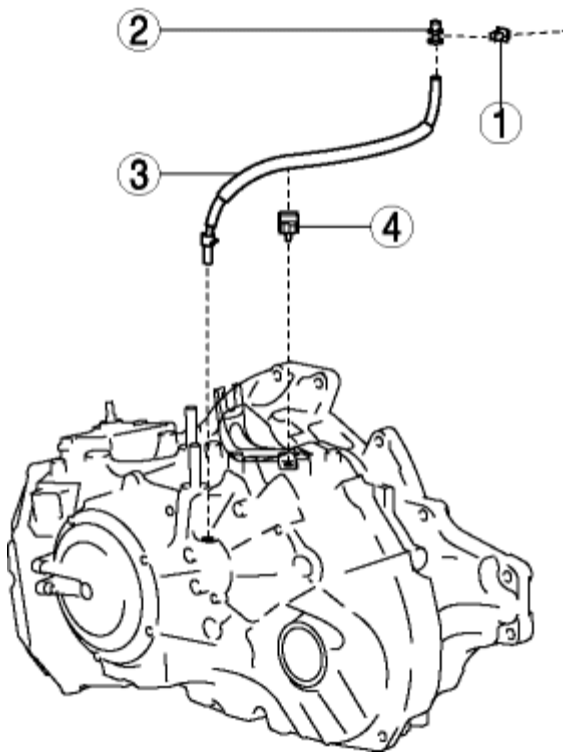


1	Clamp
2	Breather hose cap
3	Breather hose component
4	Clamp

2012 - Mazda6 - Transmission/ Transaxle

BREATHER COMPONENT REMOVAL/ INSTALLATION [AY6A-EL]

- 1. Disconnect the negative battery cable.
- 2. Remove the battery. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- 3. Remove the battery tray. (See [BATTERY REMOVAL/ INSTALLATION \[MZI 3.7 V6\]](#) .)
- 4. Remove in the order indicated in the table.
- 5. Install in the reverse order of removal.

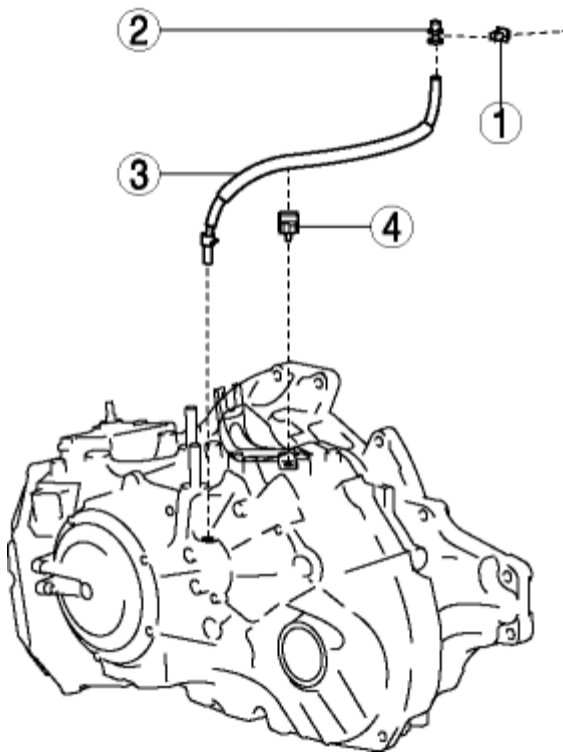

1	Clamp
2	Breather hose cap
3	Breather hose component
4	Clamp

