

2012 - Mazda6 - Transmission/ Transaxle


AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [AY6A-EL]

WARNING:

- A hot transaxle and ATF can cause severe burns. Turn off the engine and wait until they are cool before changing the ATF.

CAUTION:


- Do not remove the blind cap because it is not a removable part.

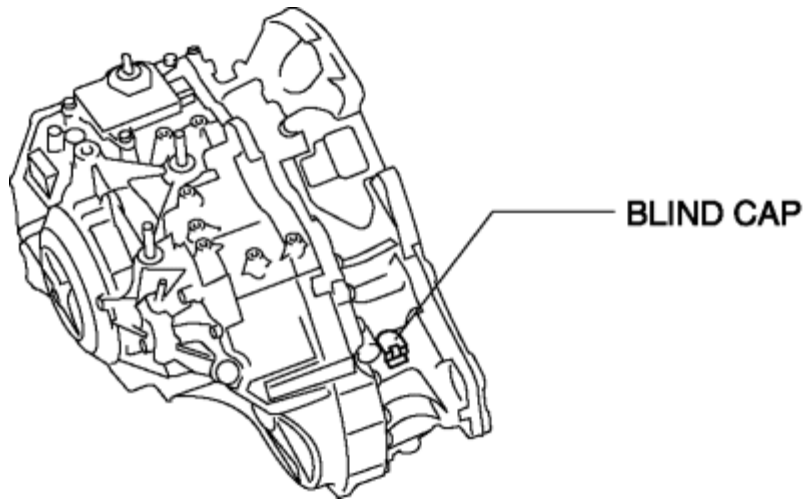


NOTE:

- The following procedure is for draining the ATF from the oil pan, not for complete replacement of the ATF.

1. Remove the overflow plug, and the O-ring.

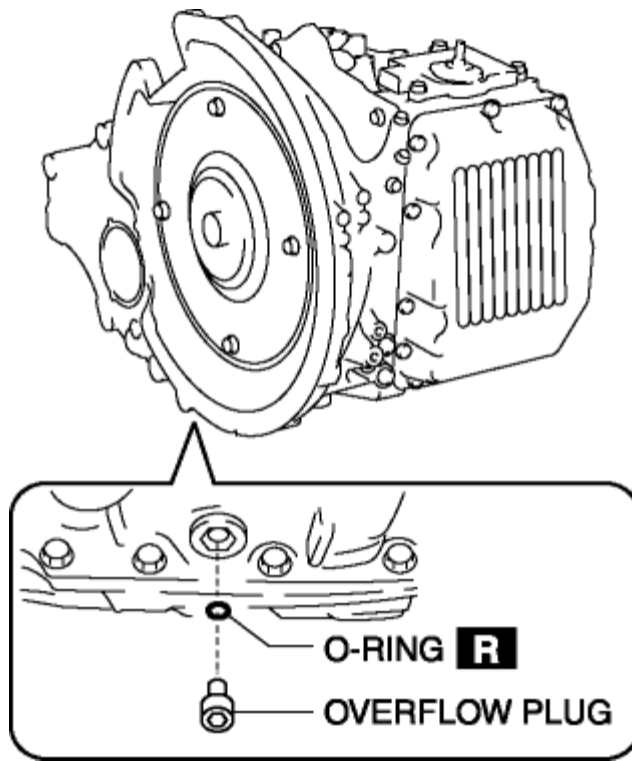

2. Remove the overflow tube, and the gasket, and drain the ATF.

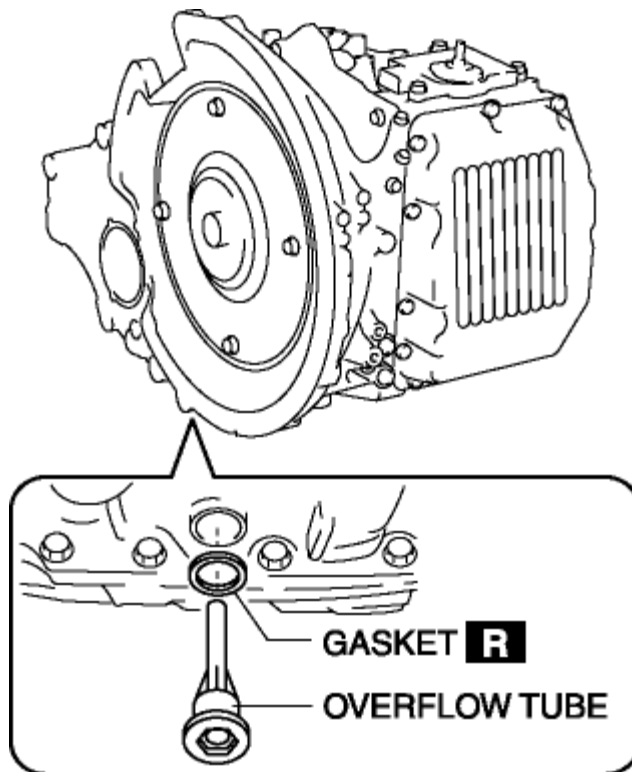

3. Install the new gasket, and overflow tube.

Tightening torque

- 24—54 N·m {2.5—5.5 kgf·m, 18—39 ft·lbf}

4. Temporarily tighten the overflow plug reusing the O-ring.

5. Adjust the ATF level. (See [AUTOMATIC TRANSAXLE FLUID \(ATF\) LEVEL ADJUSTMENT \[AY6A-EL\]](#) .)

2012 - Mazda6 - Transmission/ Transaxle


AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [AY6A-EL]

WARNING:

- A hot transaxle and ATF can cause severe burns. Turn off the engine and wait until they are cool before changing the ATF.

CAUTION:


- Do not remove the blind cap because it is not a removable part.

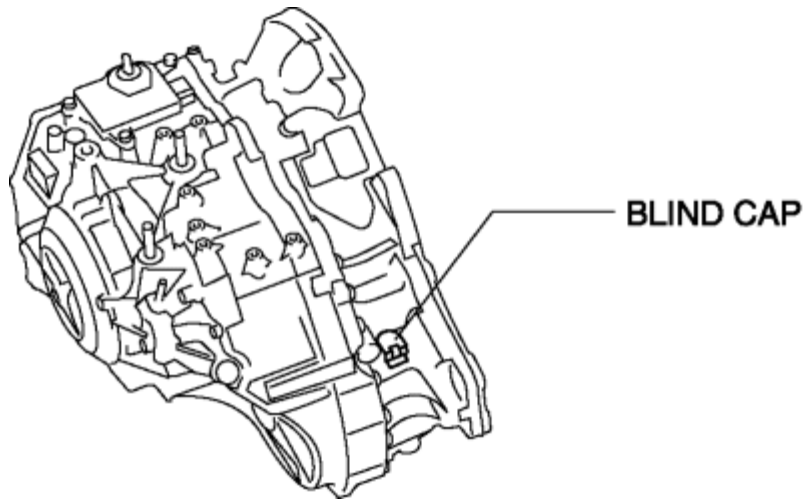


NOTE:

- The following procedure is for draining the ATF from the oil pan, not for complete replacement of the ATF.

1. Remove the overflow plug, and the O-ring.

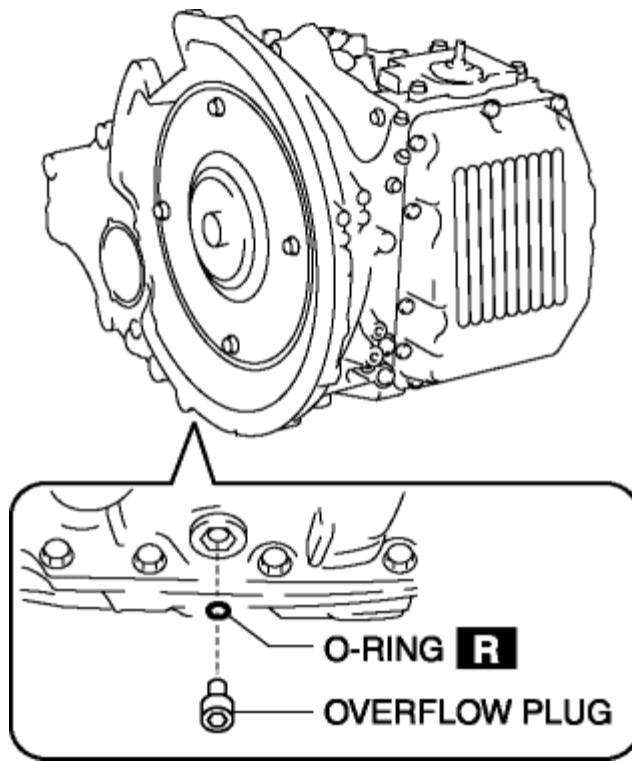

2. Remove the overflow tube, and the gasket, and drain the ATF.

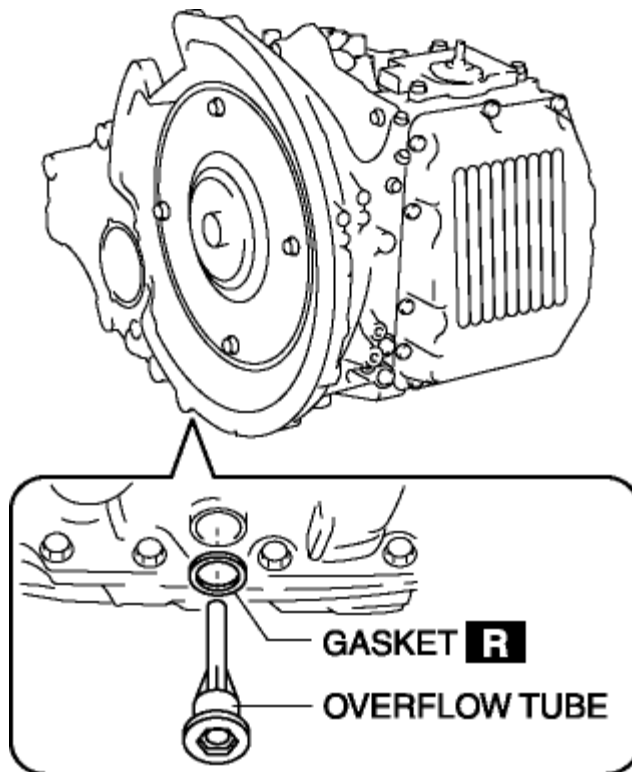

3. Install the new gasket, and overflow tube.

Tightening torque

- 24—54 N·m {2.5—5.5 kgf·m, 18—39 ft·lbf}

4. Temporarily tighten the overflow plug reusing the O-ring.

5. Adjust the ATF level. (See [AUTOMATIC TRANSAXLE FLUID \(ATF\) LEVEL ADJUSTMENT \[AY6A-EL\]](#) .)

