

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

TRANSAXLE RANGE (TR) SWITCH REMOVAL/ INSTALLATION [AY6A-EL]

NOTE:

- The TR switch is integrated with the TCM.
1. If the TR switch is replaced, replace the TCM. (See [TCM REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

TRANSAXLE RANGE (TR) SWITCH REMOVAL/ INSTALLATION [AY6A-EL]

NOTE:

- The TR switch is integrated with the TCM.
1. If the TR switch is replaced, replace the TCM. (See [TCM REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.