

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

M POSITION SWITCH REMOVAL/ INSTALLATION [AY6A-EL]

NOTE:

- The M position switch is integrated with the selector lever component.
1. If the M position switch is replaced, replace the selector lever component. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

M POSITION SWITCH REMOVAL/ INSTALLATION [AY6A-EL]

NOTE:

- The M position switch is integrated with the selector lever component.
1. If the M position switch is replaced, replace the selector lever component. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.