

2012 - Mazda6 - Transmission/ Transaxle


UP SWITCH INSPECTION [AY6A-EL]

CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.
- Do not damage the terminals.



1. Disconnect the selector lever component connector.

- a. Disconnect the negative battery cable.
- b. Remove the rear console. (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
- c. Disconnect the selector lever component connector.

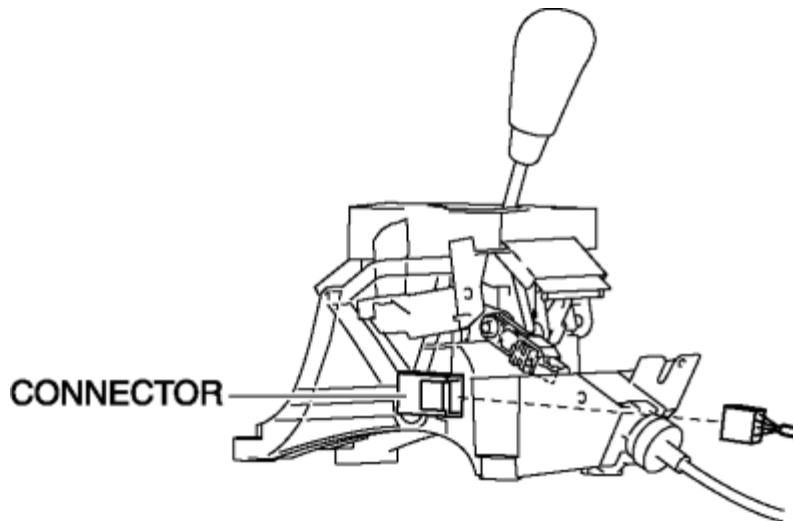

2. Measure the continuity between selector lever component terminals B and H.

SELECTOR LEVER COMPONENT

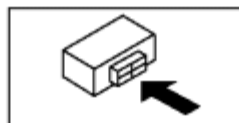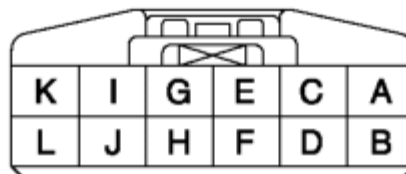

- If there is any malfunction, replace the selector lever component. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

Up switch specification

Test condition	Continuity
M (+)	Continuity
Except M (+)	No continuity

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Transmission/ Transaxle


UP SWITCH INSPECTION [AY6A-EL]

CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.
- Do not damage the terminals.



1. Disconnect the selector lever component connector.

- a. Disconnect the negative battery cable.
- b. Remove the rear console. (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
- c. Disconnect the selector lever component connector.

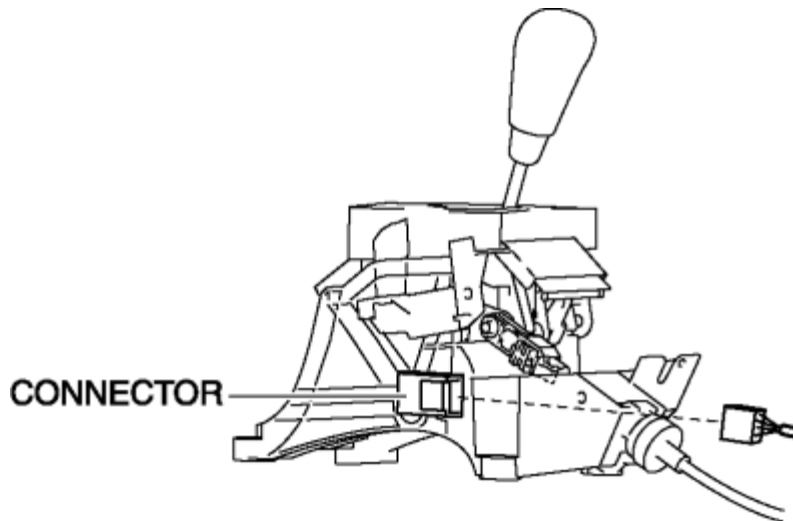

2. Measure the continuity between selector lever component terminals B and H.

SELECTOR LEVER COMPONENT

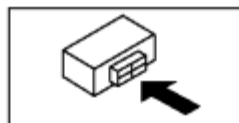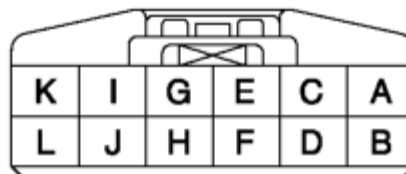

- If there is any malfunction, replace the selector lever component. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

Up switch specification

Test condition	Continuity
M (+)	Continuity
Except M (+)	No continuity

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.