

2012 - Mazda6 - Transmission/ Transaxle


DOWN SWITCH INSPECTION [AY6A-EL]

CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.
- Do not damage the terminals.



1. Disconnect the selector lever component connector.

- a. Disconnect the negative battery cable.
- b. Remove the rear console. (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
- c. Disconnect the selector lever component connector.

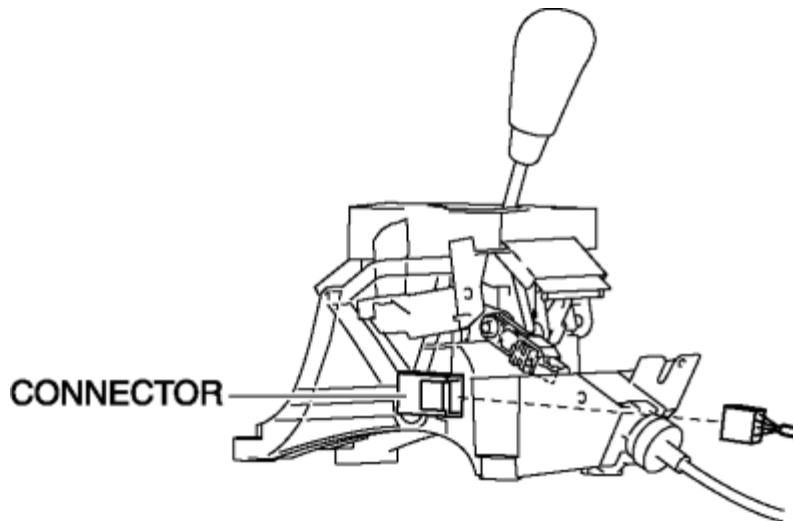

2. Measure the continuity between selector lever component terminals C and H.

SELECTOR LEVER COMPONENT

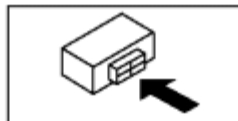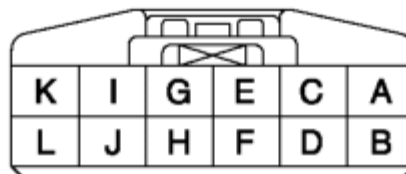

- If there is any malfunction, replace the selector lever component. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

Down switch specification

Test condition	Continuity
M (－)	Continuity
Except M (－)	No continuity

2012 - Mazda6 - Transmission/ Transaxle


DOWN SWITCH INSPECTION [AY6A-EL]

CAUTION:

- Water or foreign objects entering the connector can cause a poor connection or corrosion. Be sure not to drop water or foreign objects on the connector when disconnecting it.
- Do not damage the terminals.



1. Disconnect the selector lever component connector.

- a. Disconnect the negative battery cable.
- b. Remove the rear console. (See [REAR CONSOLE REMOVAL/ INSTALLATION.](#))
- c. Disconnect the selector lever component connector.

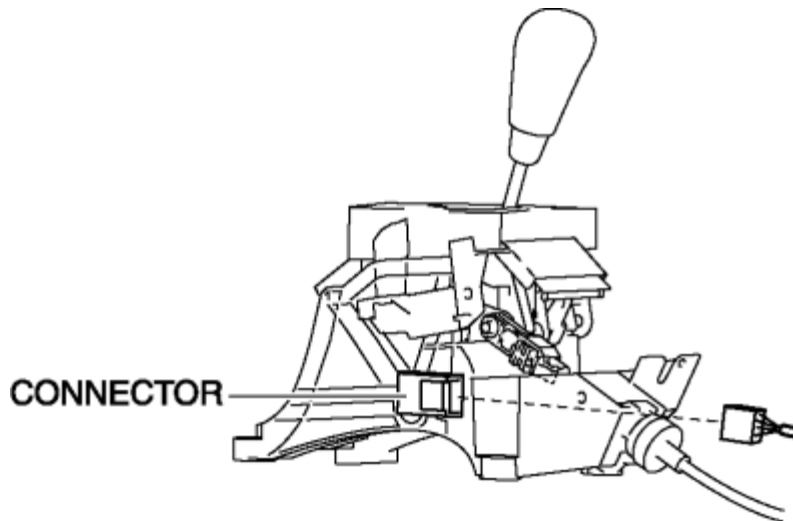

2. Measure the continuity between selector lever component terminals C and H.

SELECTOR LEVER COMPONENT

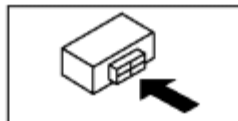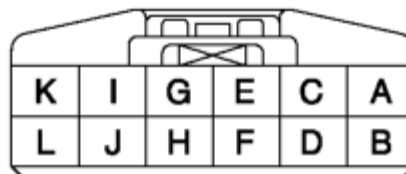

- If there is any malfunction, replace the selector lever component. (See [AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/ INSTALLATION.](#))

Down switch specification

Test condition	Continuity
M (－)	Continuity
Except M (－)	No continuity