

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/ INSTALLATION [AY6A-EL]

NOTE:

- The TFT sensor is integrated with the coupler component.
1. If the TFT sensor is replaced, replace the coupler component. (See [TRANSAXLE FLUID TEMPERATURE \(TFT\) SENSOR REMOVAL/ INSTALLATION \[AY6A-EL\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

TRANSAXLE FLUID TEMPERATURE (TFT) SENSOR REMOVAL/ INSTALLATION [AY6A-EL]

NOTE:

- The TFT sensor is integrated with the coupler component.
1. If the TFT sensor is replaced, replace the coupler component. (See [TRANSAXLE FLUID TEMPERATURE \(TFT\) SENSOR REMOVAL/ INSTALLATION \[AY6A-EL\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.