

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID REMOVAL/ INSTALLATION [AY6A-EL]

NOTE:

- TCC control solenoid is not available (shipped) as a single part.
1. If the TCC control solenoid is replaced, replace the control valve body. (See [CONTROL VALVE BODY REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

TORQUE CONVERTER CLUTCH (TCC) CONTROL SOLENOID REMOVAL/ INSTALLATION [AY6A-EL]

NOTE:

- TCC control solenoid is not available (shipped) as a single part.
1. If the TCC control solenoid is replaced, replace the control valve body. (See [CONTROL VALVE BODY REMOVAL/ INSTALLATION \[AY6A-EL\]](#) .)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.