

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

AUTOMATIC TRANSAXLE CLEANING [AY6A-EL]

CAUTION:

- Using compressed air can cause dirt and other particles to fly out, causing injury to the eyes. Wear protective eyeglasses whenever using compressed air.
1. Clean the transaxle exterior thoroughly with steam, cleaning solvents, or both, before disassembly.
 2. Clean the removed parts with cleaning solvent, and dry with compressed air. Clean out all holes and passages with compressed air, and verify that there are no obstructions.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

AUTOMATIC TRANSAXLE CLEANING [AY6A-EL]

CAUTION:

- Using compressed air can cause dirt and other particles to fly out, causing injury to the eyes. Wear protective eyeglasses whenever using compressed air.
1. Clean the transaxle exterior thoroughly with steam, cleaning solvents, or both, before disassembly.
 2. Clean the removed parts with cleaning solvent, and dry with compressed air. Clean out all holes and passages with compressed air, and verify that there are no obstructions.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.