

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

OIL STRAINER REMOVAL/ INSTALLATION [AY6A-EL]

1. Refer to "OIL PUMP REMOVAL/INSTALLATION" to remove/install the oil strainer. (See [OIL PUMP REMOVAL/ INSTALLATION \[AY6A-EL\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

[< Previous](#) [Next >](#)

2012 - Mazda6 - Transmission/ Transaxle

OIL STRAINER REMOVAL/ INSTALLATION [AY6A-EL]

1. Refer to "OIL PUMP REMOVAL/INSTALLATION" to remove/install the oil strainer. (See [OIL PUMP REMOVAL/ INSTALLATION \[AY6A-EL\]](#).)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.