

[< Previous](#)   [Next >](#)

## 2012 - Mazda6 - HVAC

### EVAPORATOR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

1. Remove the evaporator temperature sensor from the A/C unit. (See [A/ C UNIT DISASSEMBLY/ ASSEMBLY](#).)

[< Previous](#)   [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

[< Previous](#)   [Next >](#)

## 2012 - Mazda6 - HVAC

### EVAPORATOR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

1. Remove the evaporator temperature sensor from the A/C unit. (See [A/ C UNIT DISASSEMBLY/ ASSEMBLY](#).)

[< Previous](#)   [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.