


2012 - Mazda6 - HVAC

AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITI ONER]

1. Connect battery positive voltage to air intake actuator terminal A (or B), connect terminal B (or A) to ground, and then verify that the air intake actuator operates as shown in the table.
- If the operation condition is not normal, replace the air intake actuator.

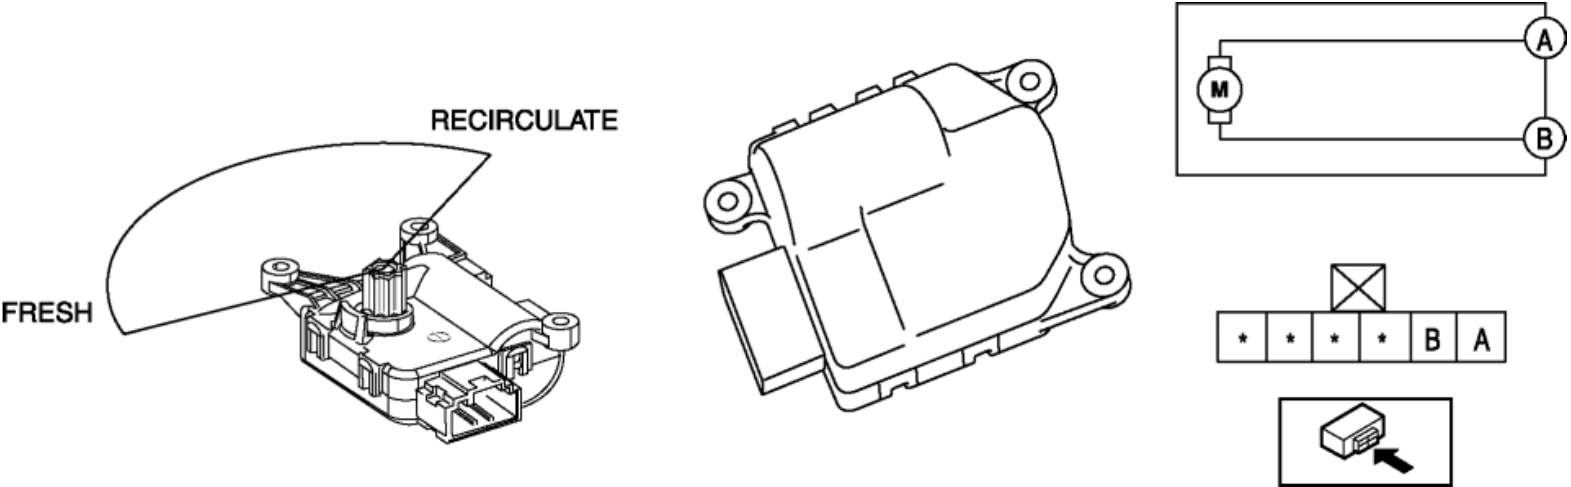


Terminal		Air intake actuator operation
A	B	
Ground	B+	FRESH → RECIRCULATE
B+	Ground	RECIRCULATE → FRESH

2012 - Mazda6 - HVAC

AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITI ONER]

1. Connect battery positive voltage to air intake actuator terminal A (or B), connect terminal B (or A) to ground, and then verify that the air intake actuator operates as shown in the table.
- If the operation condition is not normal, replace the air intake actuator.

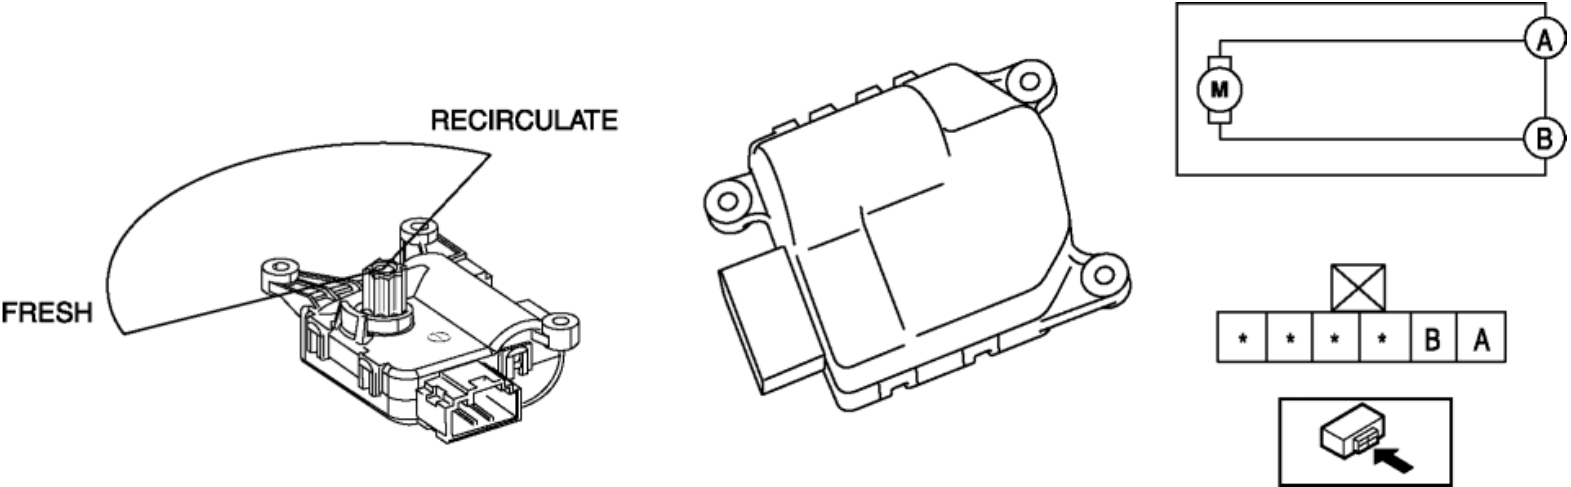

Terminal		Air intake actuator operation
A	B	
Ground	B+	FRESH → RECIRCULATE
B+	Ground	RECIRCULATE → FRESH