

2012 - Mazda6 - HVAC


SOLAR RADIATION SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the driver’s side lower panel. (See [LOWER PANEL REMOVAL/ INSTALLATION](#).)

CAUTION:

- After the solar radiation sensor removal, the sensor connector could fall in the dashboard making the installation difficult. Therefore, hold the rooted end of the sensor connector using a clip or similar tool to prevent it from falling.

- 3. Remove in the order indicated in the table.

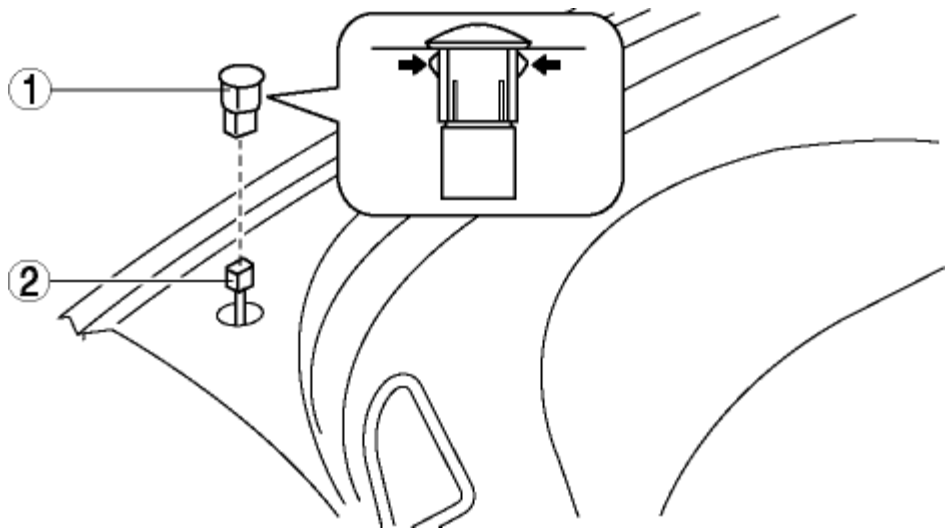

1	Solar radiation sensor connector
2	Solar radiation sensor

- 4. Install in the reverse order of removal.

2012 - Mazda6 - HVAC


SOLAR RADIATION SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the driver’s side lower panel. (See LOWER PANEL REMOVAL/ INSTALLATION.)

CAUTION:

- After the solar radiation sensor removal, the sensor connector could fall in the dashboard making the installation difficult. Therefore, hold the rooted end of the sensor connector using a clip or similar tool to prevent it from falling.

- 3. Remove in the order indicated in the table.

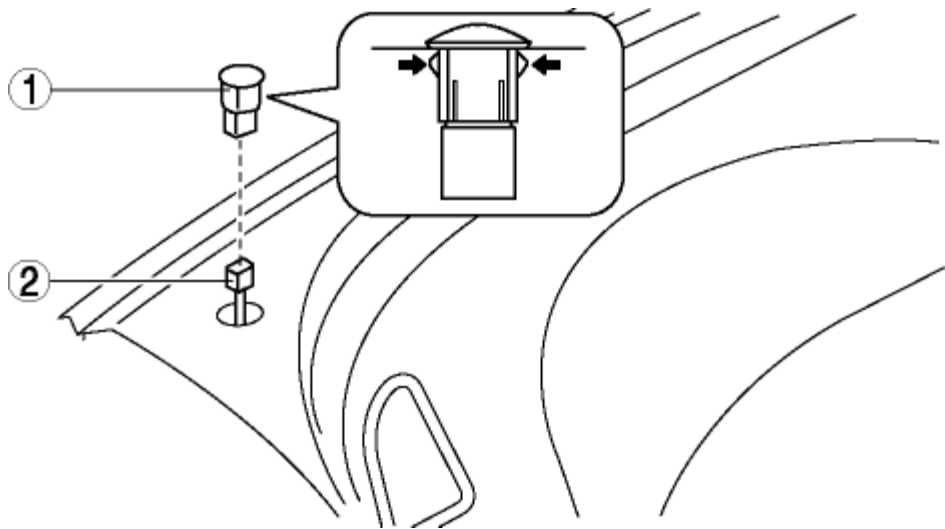

1	Solar radiation sensor connector
2	Solar radiation sensor

- 4. Install in the reverse order of removal.