


2012 - Mazda6 - HVAC

SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]

1. Shine a filament light or expose the solar radiation sensor to natural sunlight.
2. Connect the positive (+) lead to terminal B, C and negative (-) lead to terminal A of the solar radiation, and verify that the voltage value is output.

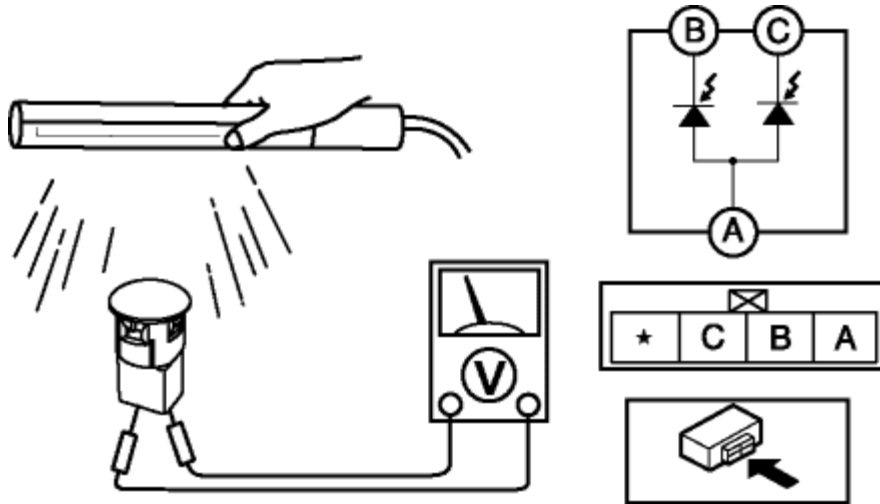


- If the voltage is **0 V**, replace the solar radiation sensor.

2012 - Mazda6 - HVAC

SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]

1. Shine a filament light or expose the solar radiation sensor to natural sunlight.
2. Connect the positive (+) lead to terminal B, C and negative (-) lead to terminal A of the solar radiation, and verify that the voltage value is output.

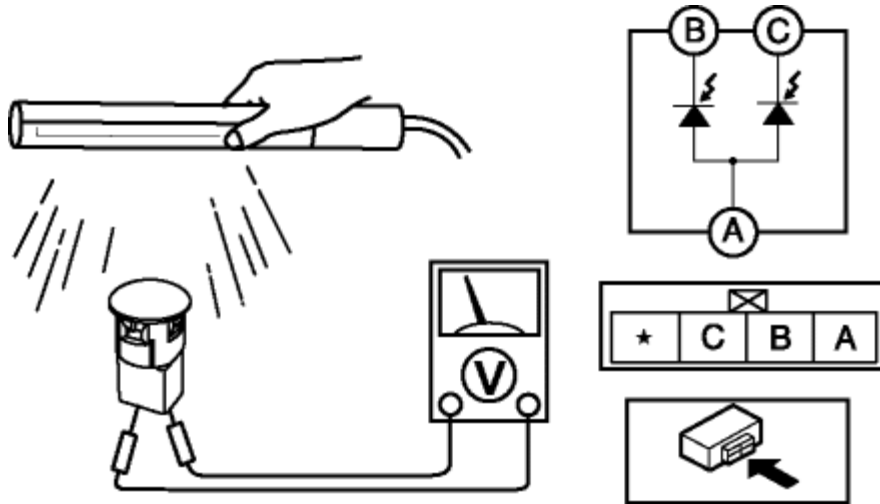

- If the voltage is **0 V**, replace the solar radiation sensor.