


2012 - Mazda6 - HVAC

PASSENGER COMPARTMENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the driver’s side lower panel. (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
- 3. Remove the order indicated in the table.

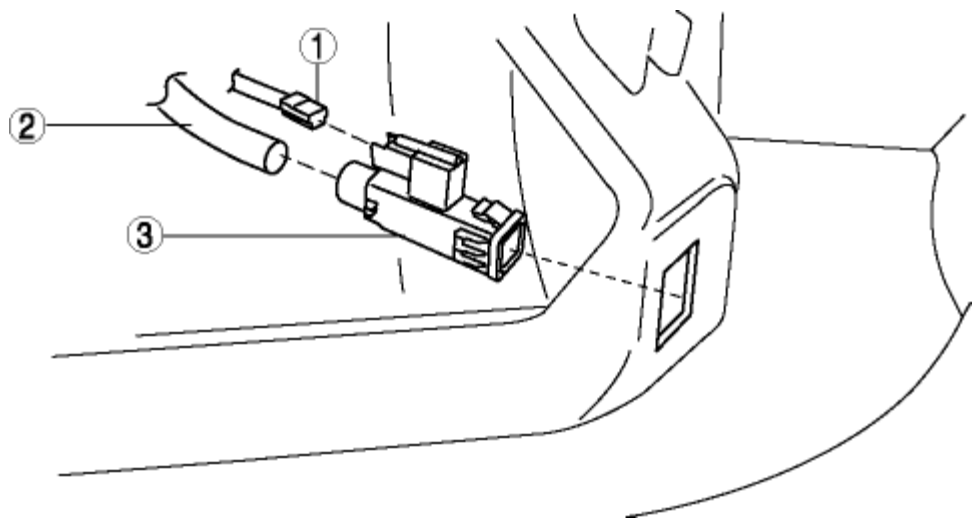


1	Passenger compartment temperature sensor connector
2	Hose
3	Passenger compartment temperature sensor

- 4. Install in the reverse order of removal.

2012 - Mazda6 - HVAC

PASSENGER COMPARTMENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the driver’s side lower panel. (See [LOWER PANEL REMOVAL/ INSTALLATION.](#))
- 3. Remove the order indicated in the table.

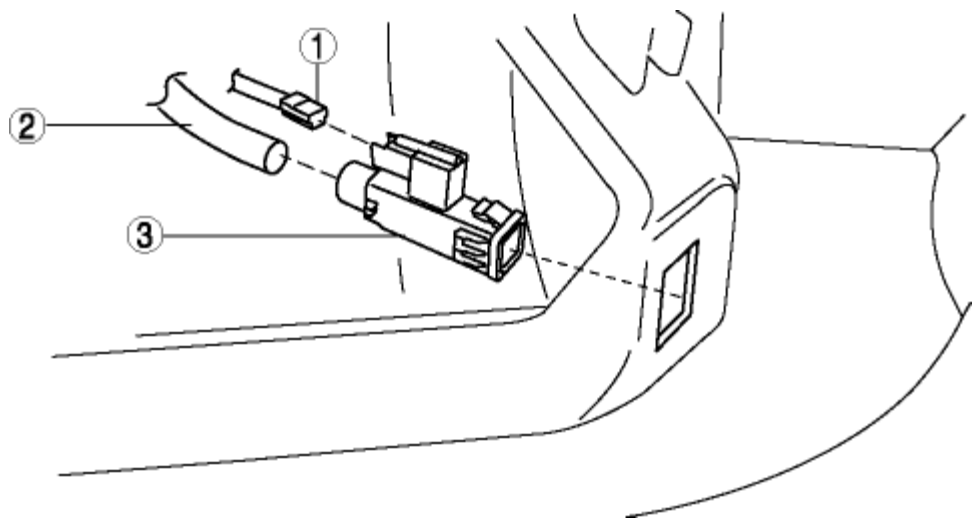

1	Passenger compartment temperature sensor connector
2	Hose
3	Passenger compartment temperature sensor

- 4. Install in the reverse order of removal.