


2012 - Mazda6 - HVAC

AMBIENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove the under cover.
3. Remove in the order indicated in the table.

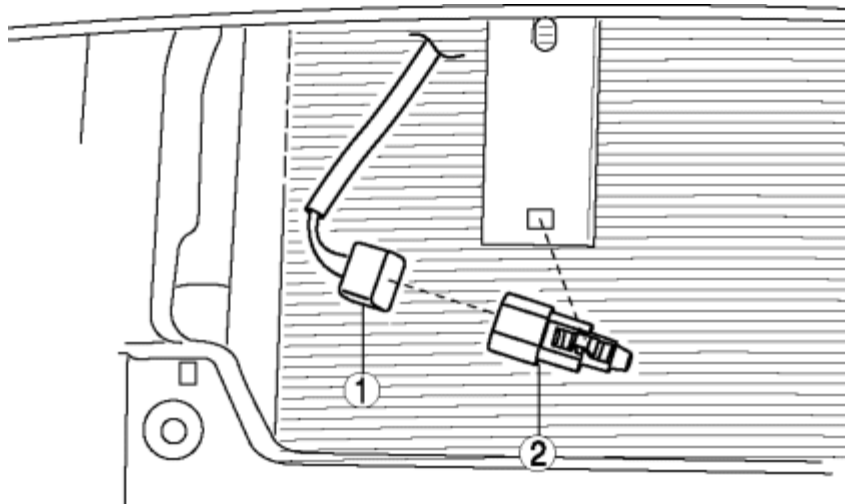


1	Ambient temperature sensor connector
2	Ambient temperature sensor

4. Install in the reverse order of removal.

2012 - Mazda6 - HVAC

AMBIENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove the under cover.
3. Remove in the order indicated in the table.

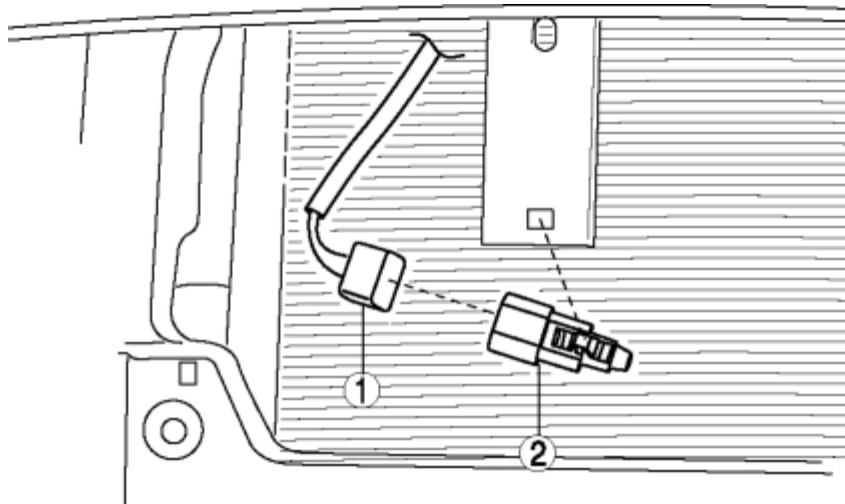

1	Ambient temperature sensor connector
2	Ambient temperature sensor

4. Install in the reverse order of removal.