


2012 - Mazda6 - HVAC

AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]

1. Measure the temperature around the ambient temperature sensor and measure the resistance between the ambient temperature sensor terminal.

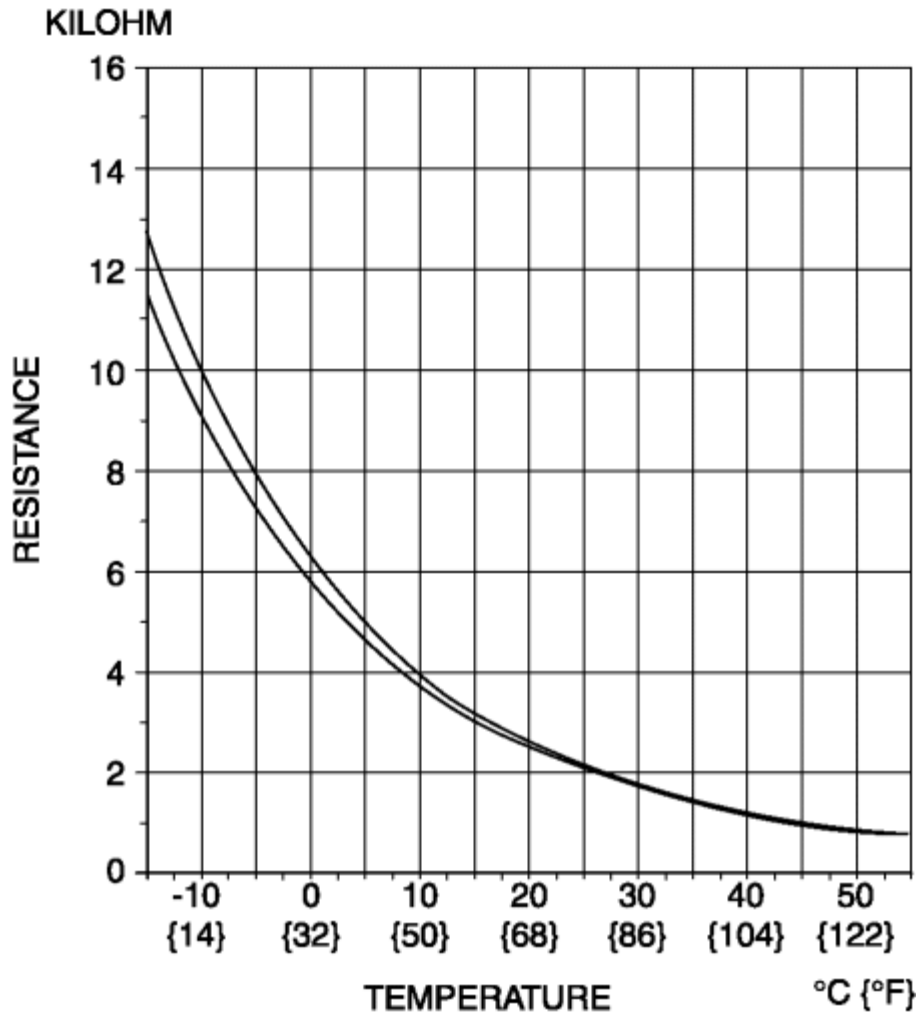


- If the characteristics of the ambient temperature sensor are not as shown in the graph, replace the ambient temperature sensor.

2012 - Mazda6 - HVAC

AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]

1. Measure the temperature around the ambient temperature sensor and measure the resistance between the ambient temperature sensor terminal.

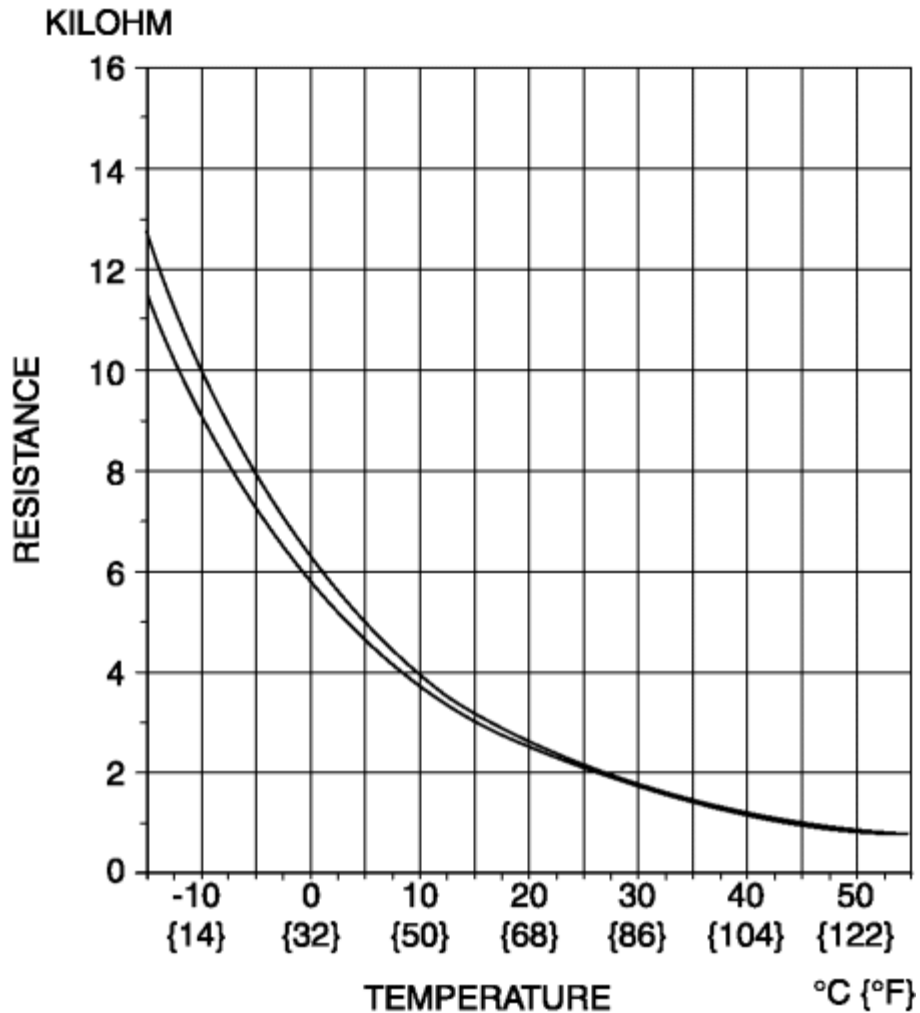

- If the characteristics of the ambient temperature sensor are not as shown in the graph, replace the ambient temperature sensor.