


2012 - Mazda6 - HVAC

HVAC CONTROL SYSTEM LOCATION INDEX [FULL-AUTO AIR CONDITIONER]

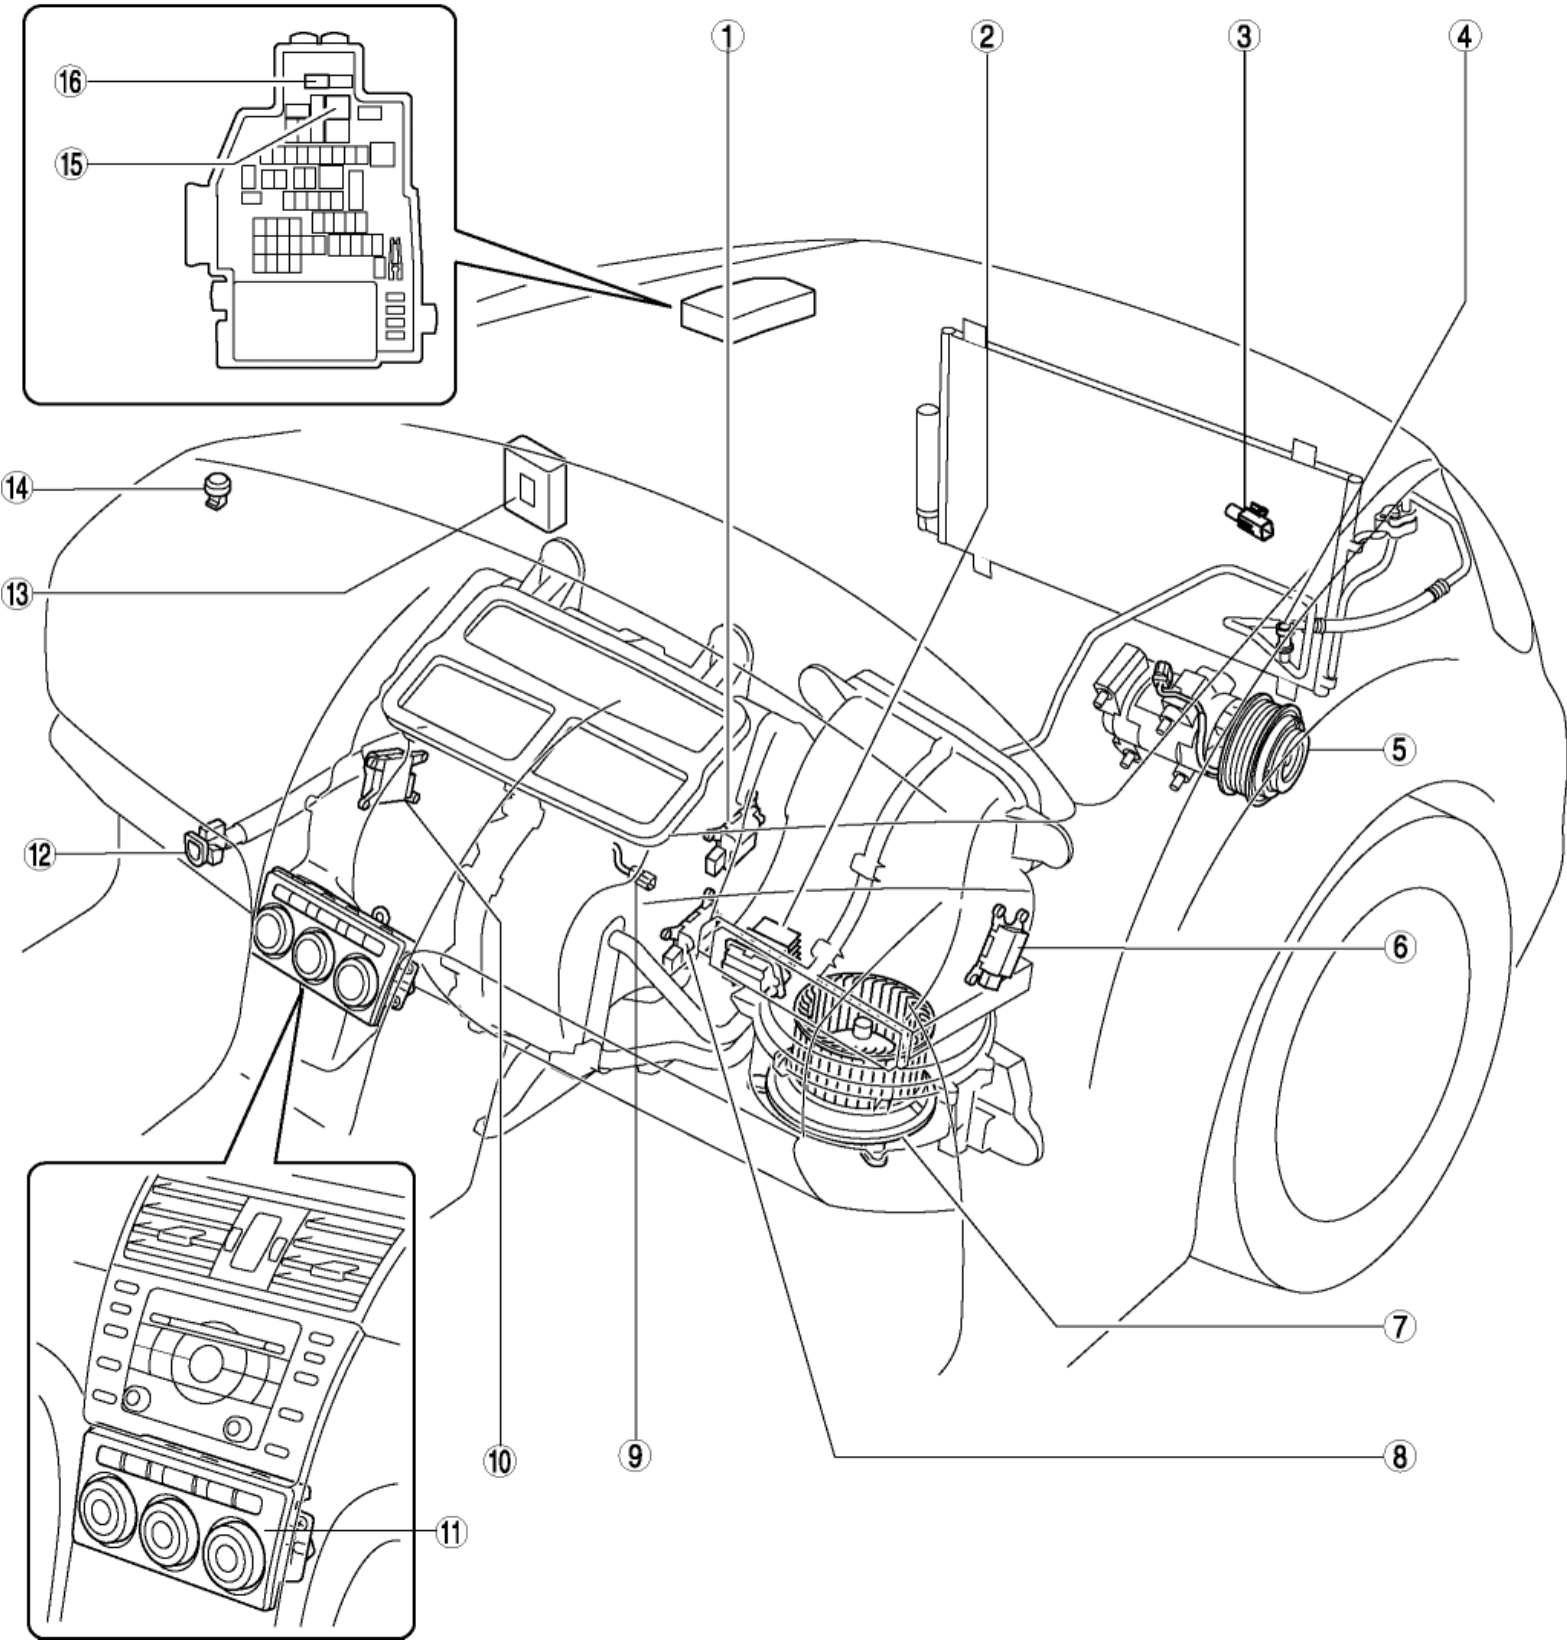


1	Airflow mode actuator (See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIRFLOW MODE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
2	Front power MOS FET (See FRONT POWER METAL OXIDE SEMICONDUCTOR FIELD EFFECT TRANSISTOR (POWER MOS FET) REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See FRONT POWER METAL OXIDE SEMICONDUCTOR FIELD EFFECT TRANSISTOR (POWER MOS FET) INSPECTION [FULL-AUTO AIR CONDITIONER].)
3	Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
4	Refrigerant pressure sensor (See REFRIGERANT PRESSURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See REFRIGERANT PRESSURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
5	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [FULL-AUTO AIR CONDITIONER].) (See MAGNETIC CLUTCH ADJUSTMENT [FULL-AUTO AIR CONDITIONER].) (See MAGNETIC CLUTCH INSPECTION [FULL-AUTO AIR CONDITIONER].)
6	Air intake actuator (See AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
7	Front blower motor (See FRONT BLOWER MOTOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See FRONT BLOWER MOTOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
8	Passenger's side air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
9	Evaporator temperature sensor (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
10	Driver's side air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
11	Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See CLIMATE CONTROL UNIT INSPECTION [FULL-AUTO AIR CONDITIONER].)
12	Passenger compartment temperature sensor

	(See PASSENGER COMPARTMENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER] .)
	(See PASSENGER COMPARTMENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER] .)
13	PCM (See PCM REMOVAL/ INSTALLATION [MZR 2.5] .) (See PCM INSPECTION [MZR 2.5] .) (See PCM CONFIGURATION [MZR 2.5] .) (See PCM REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See PCM INSPECTION [MZI 3.7 V6] .) (See PCM CONFIGURATION [MZI 3.7 V6] .)
14	Solar radiation sensor (See SOLAR RADIATION SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER] .) (See SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER] .)
15	Blower relay (See RELAY LOCATION .) (See RELAY INSPECTION .)
16	A/C relay (See RELAY LOCATION .) (See RELAY INSPECTION .)

2012 - Mazda6 - HVAC

HVAC CONTROL SYSTEM LOCATION INDEX [FULL-AUTO AIR CONDITIONER]

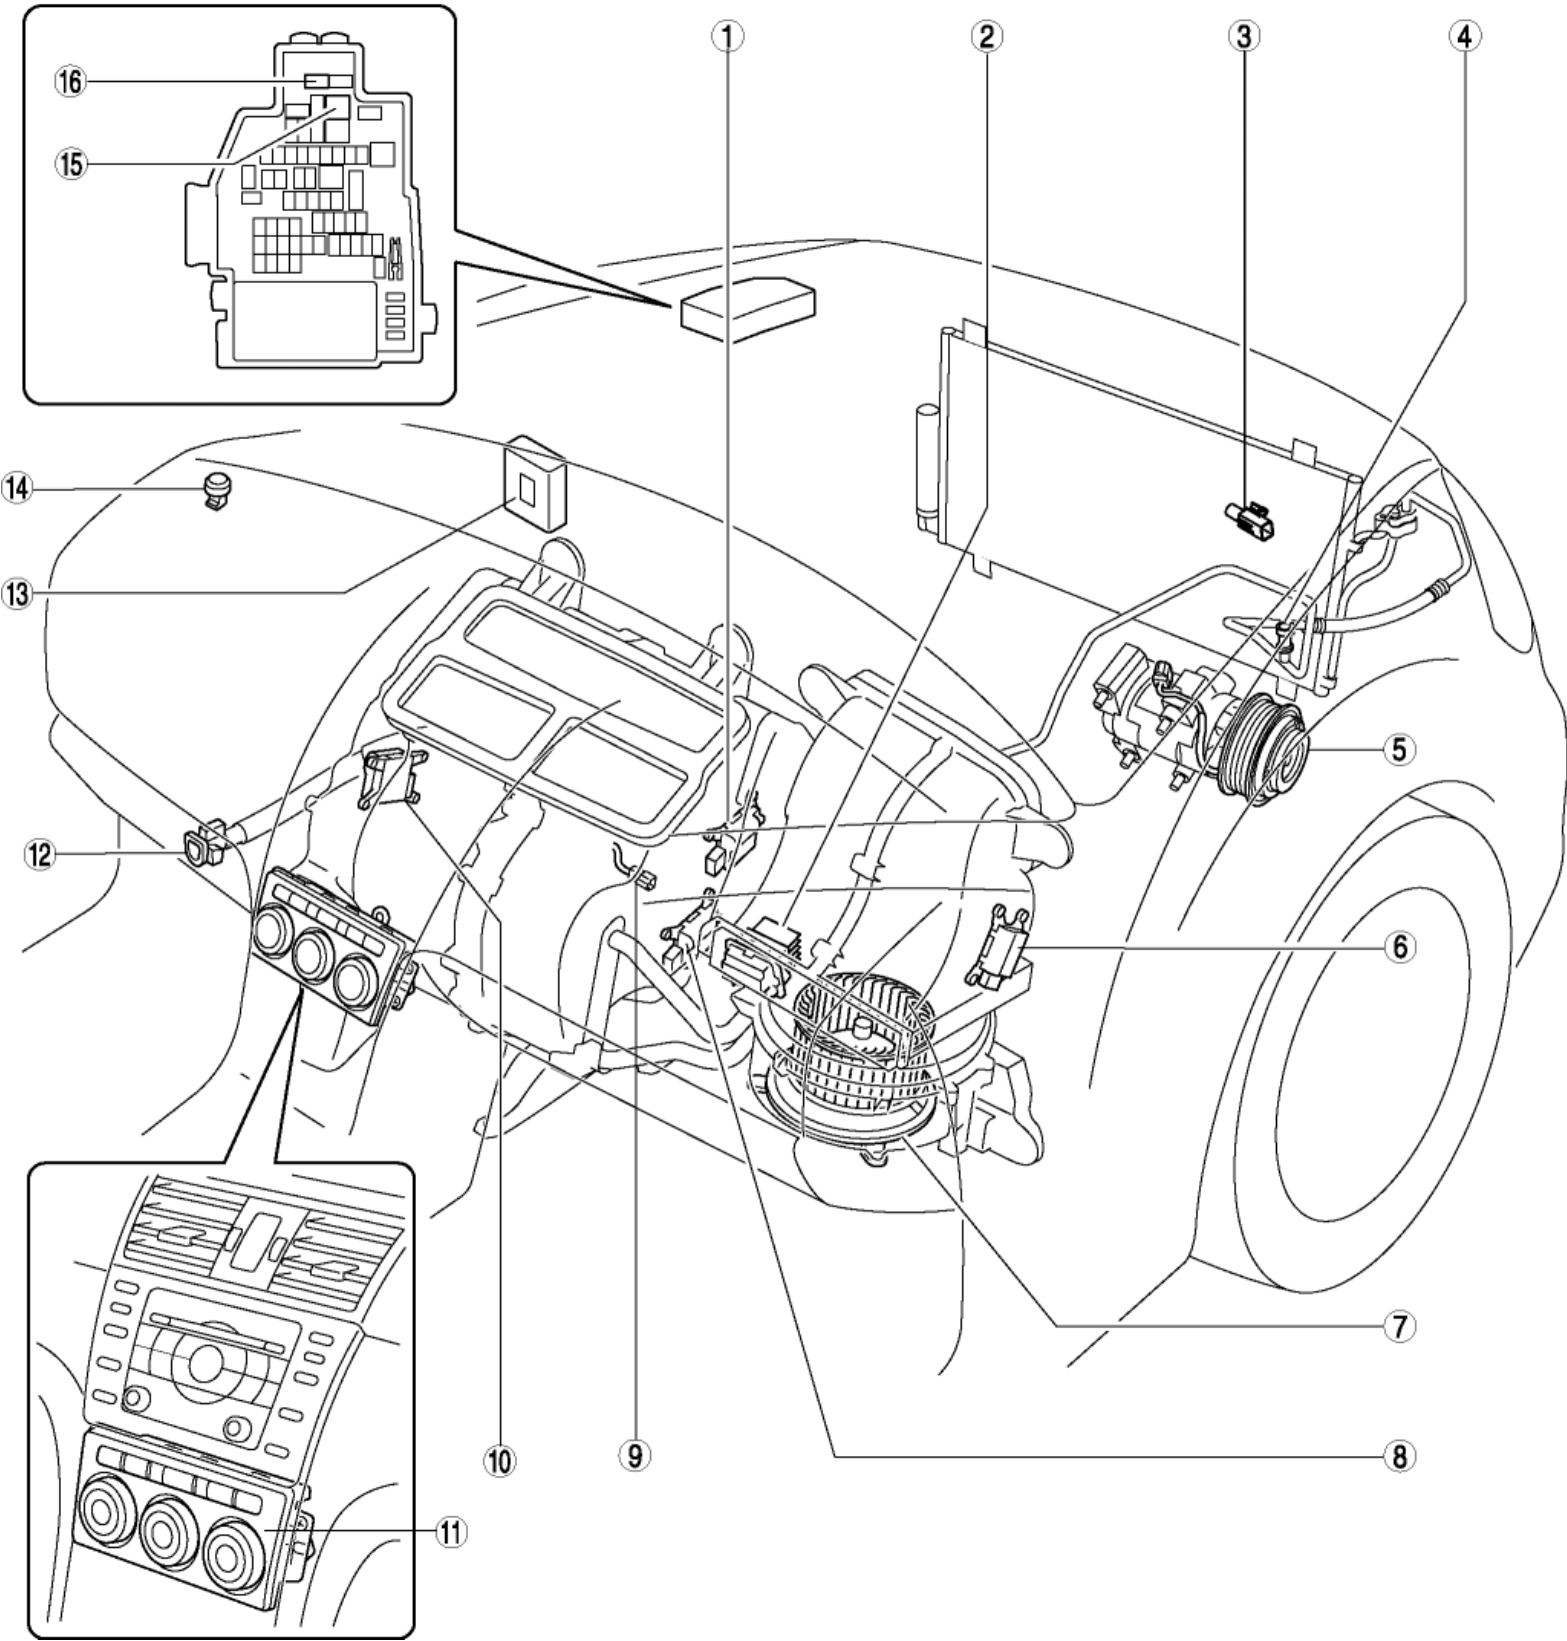

1	Airflow mode actuator (See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIRFLOW MODE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
2	Front power MOS FET (See FRONT POWER METAL OXIDE SEMICONDUCTOR FIELD EFFECT TRANSISTOR (POWER MOS FET) REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See FRONT POWER METAL OXIDE SEMICONDUCTOR FIELD EFFECT TRANSISTOR (POWER MOS FET) INSPECTION [FULL-AUTO AIR CONDITIONER].)
3	Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
4	Refrigerant pressure sensor (See REFRIGERANT PRESSURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See REFRIGERANT PRESSURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
5	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [FULL-AUTO AIR CONDITIONER].) (See MAGNETIC CLUTCH ADJUSTMENT [FULL-AUTO AIR CONDITIONER].) (See MAGNETIC CLUTCH INSPECTION [FULL-AUTO AIR CONDITIONER].)
6	Air intake actuator (See AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR INTAKE ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
7	Front blower motor (See FRONT BLOWER MOTOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See FRONT BLOWER MOTOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
8	Passenger's side air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
9	Evaporator temperature sensor (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
10	Driver's side air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [FULL-AUTO AIR CONDITIONER].)
11	Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER].) (See CLIMATE CONTROL UNIT INSPECTION [FULL-AUTO AIR CONDITIONER].)
12	Passenger compartment temperature sensor

	(See PASSENGER COMPARTMENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER] .)
	(See PASSENGER COMPARTMENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER] .)
13	PCM (See PCM REMOVAL/ INSTALLATION [MZR 2.5] .) (See PCM INSPECTION [MZR 2.5] .) (See PCM CONFIGURATION [MZR 2.5] .) (See PCM REMOVAL/ INSTALLATION [MZI 3.7 V6] .) (See PCM INSPECTION [MZI 3.7 V6] .) (See PCM CONFIGURATION [MZI 3.7 V6] .)
14	Solar radiation sensor (See SOLAR RADIATION SENSOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER] .) (See SOLAR RADIATION SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER] .)
15	Blower relay (See RELAY LOCATION .) (See RELAY INSPECTION .)
16	A/C relay (See RELAY LOCATION .) (See RELAY INSPECTION .)