


## 2012 - Mazda6 - HVAC

### FRONT BLOWER MOTOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

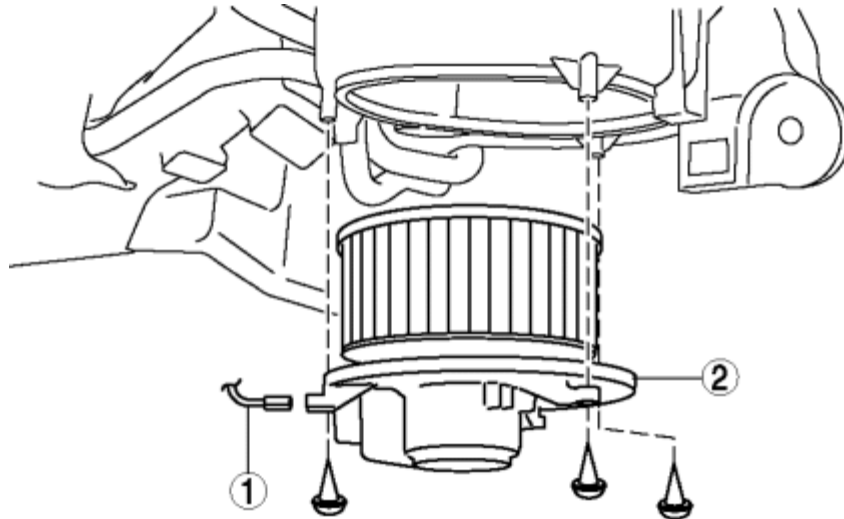


|   |                              |
|---|------------------------------|
| 1 | Front blower motor connector |
| 2 | Front blower motor           |

3. Install in the reverse order of removal.

## 2012 - Mazda6 - HVAC

### FRONT BLOWER MOTOR REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

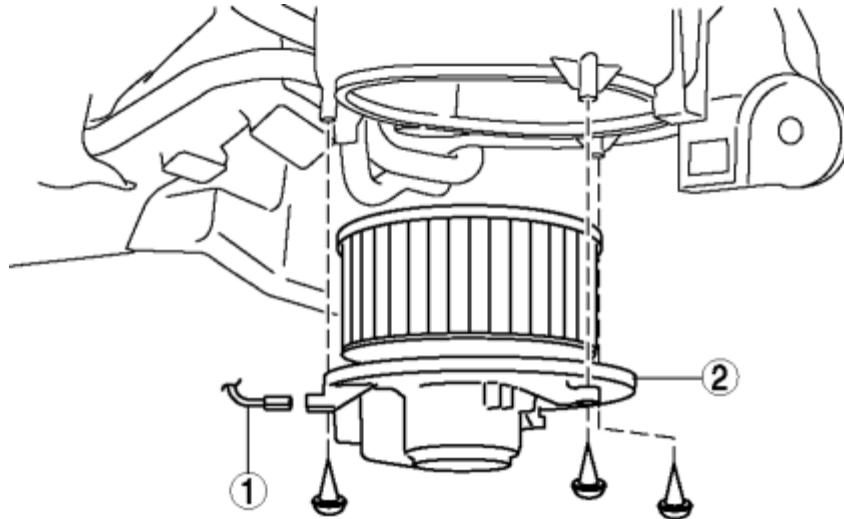

|   |                              |
|---|------------------------------|
| 1 | Front blower motor connector |
| 2 | Front blower motor           |

3. Install in the reverse order of removal.