


2012 - Mazda6 - HVAC

CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - c. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.](#))
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

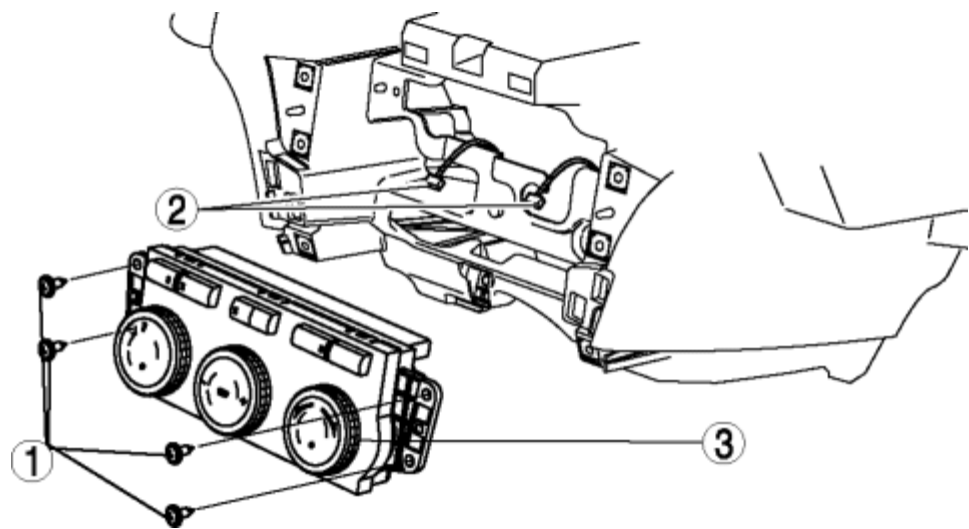


1	Screw
2	Connector
3	Climate control unit

- 4. Disconnect the climate control unit connectors and remove the climate control unit.
- 5. Install in the reverse order of removal.

2012 - Mazda6 - HVAC

CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [FULL-AUTO AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. Upper panel (See [UPPER PANEL REMOVAL/ INSTALLATION.](#))
 - b. Decoration panel (See [DECORATION PANEL REMOVAL/ INSTALLATION.](#))
 - c. Shift lever knob (MTX) (See [MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.](#))
 - d. Shift panel (See [SHIFT PANEL REMOVAL/ INSTALLATION.](#))
 - e. Center panel lower (See [CENTER PANEL LOWER REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

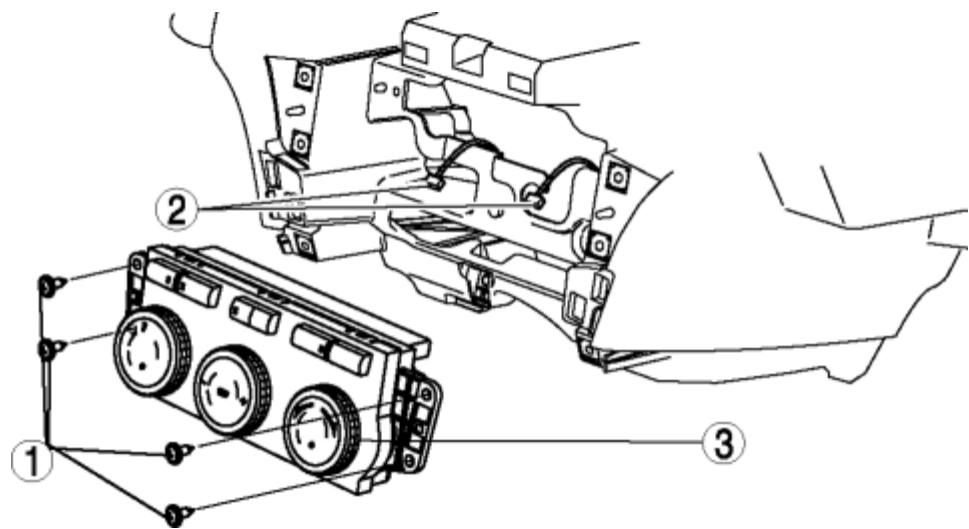

1	Screw
2	Connector
3	Climate control unit

- 4. Disconnect the climate control unit connectors and remove the climate control unit.
- 5. Install in the reverse order of removal.

