


2012 - Mazda6 - HVAC

RESISTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

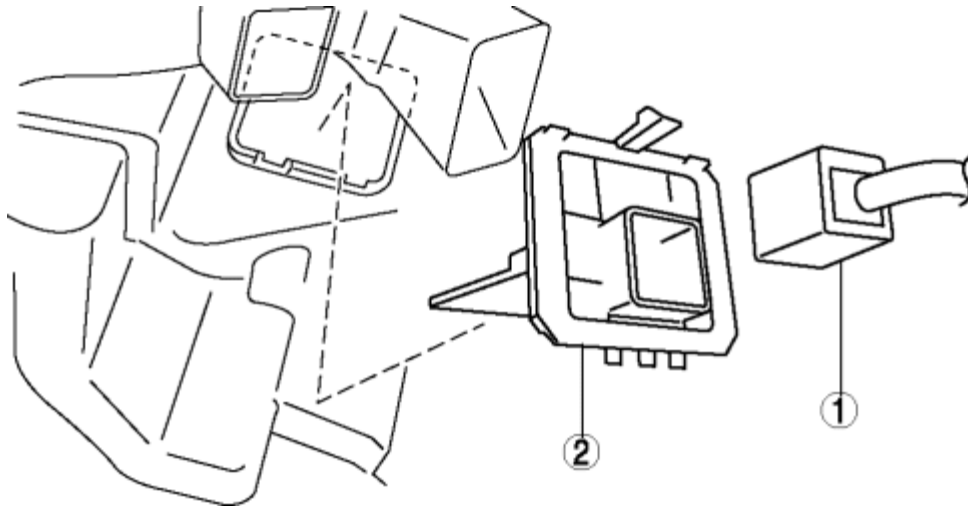


1	Resistor connector
2	Resistor (See Resistor Removal Note.)

3. Install in the reverse order of removal.

Resistor Removal Note

1. Push the tab then slide the resistor in the direction of the arrows shown in the figure.

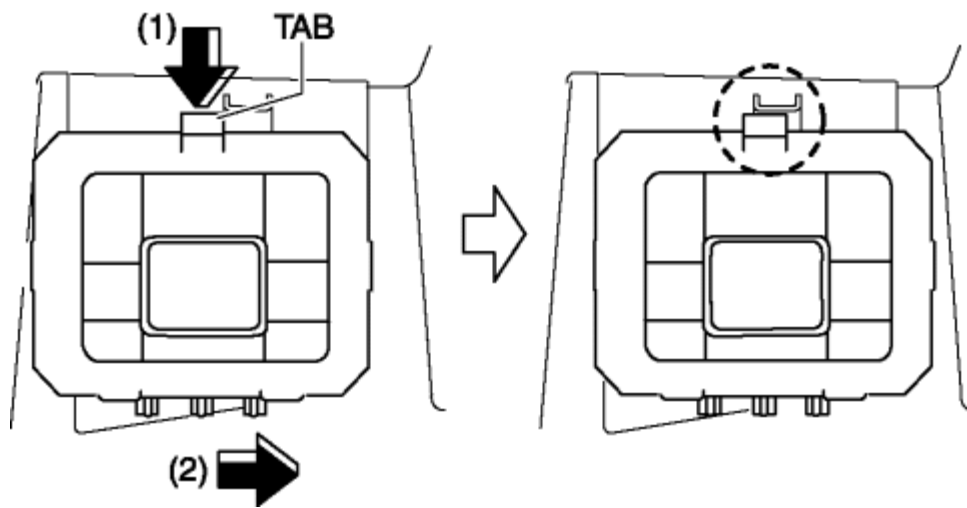

2. Pull the resistor outward.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - HVAC

RESISTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

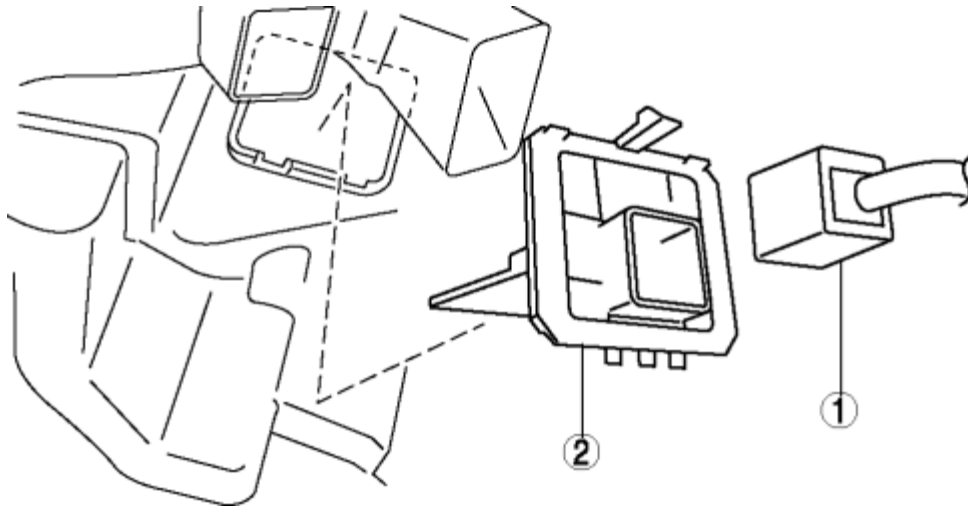


1	Resistor connector
2	Resistor (See Resistor Removal Note.)

3. Install in the reverse order of removal.

Resistor Removal Note

1. Push the tab then slide the resistor in the direction of the arrows shown in the figure.

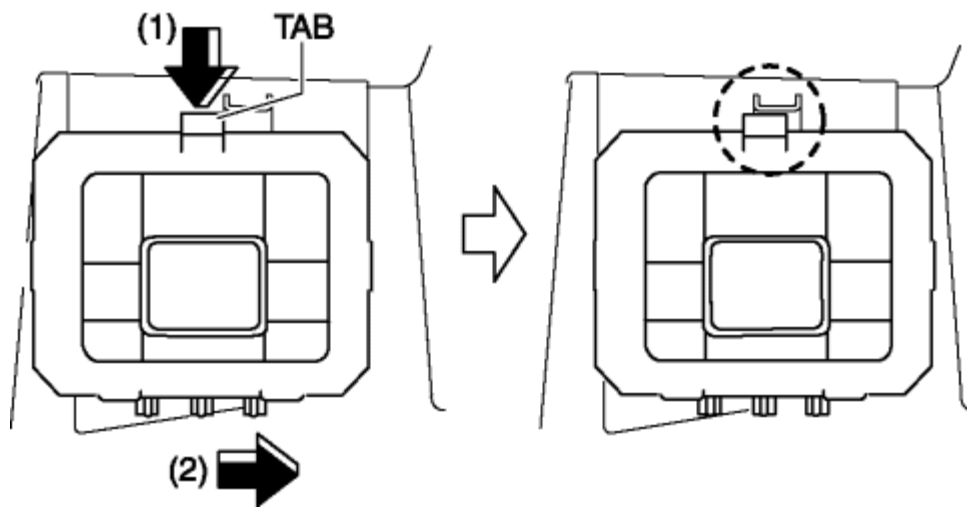

2. Pull the resistor outward.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.