
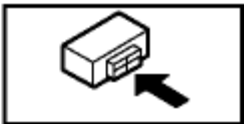
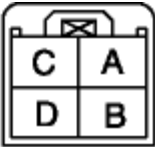


2012 - Mazda6 - HVAC

RESISTOR INSPECTION [MANUAL AIR CONDITIONER]

1. Verify that the resistance between the terminals of the resistor is as shown in the table.

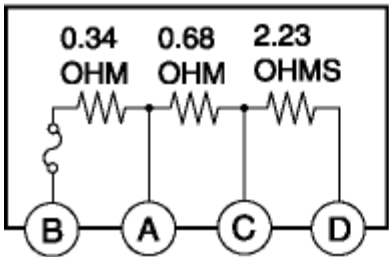




- If not as specified, replace the resistor.

Terminal	Resistance (ohm)
B—A	0.34
B—C	1.02
B—D	3.25

2012 - Mazda6 - HVAC

RESISTOR INSPECTION [MANUAL AIR CONDITIONER]

1. Verify that the resistance between the terminals of the resistor is as shown in the table.

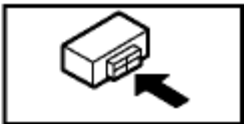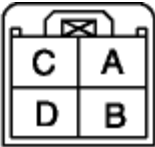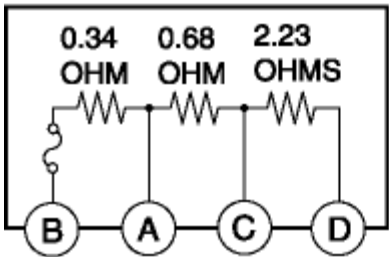

- If not as specified, replace the resistor.

Terminal	Resistance (ohm)
B—A	0.34
B—C	1.02
B—D	3.25