


2012 - Mazda6 - HVAC

BLOWER MOTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

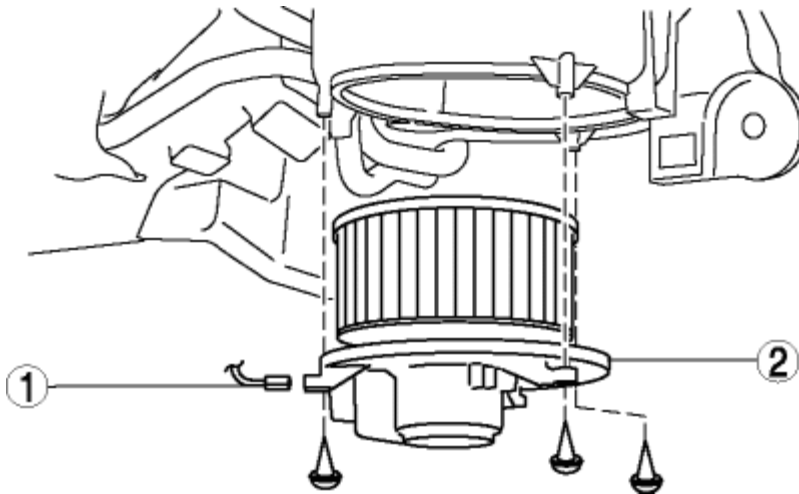


1	Blower motor connector
2	Blower motor

3. Install in the reverse order of removal.

2012 - Mazda6 - HVAC

BLOWER MOTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

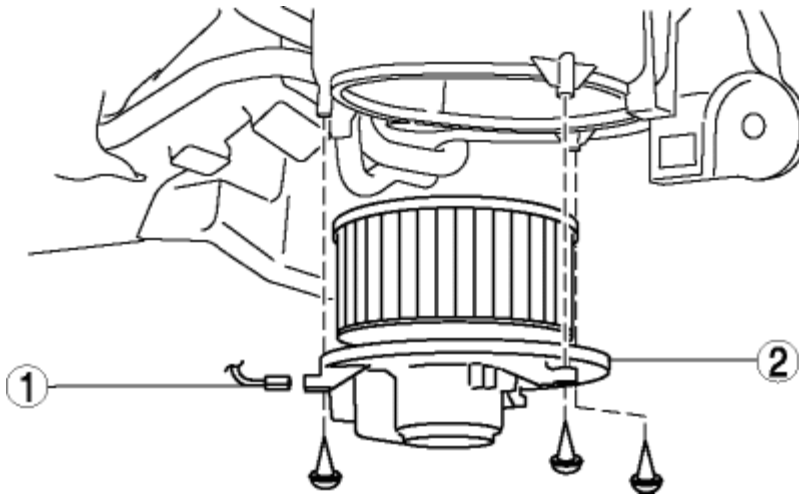

1	Blower motor connector
2	Blower motor

3. Install in the reverse order of removal.