


2012 - Mazda6 - HVAC

AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER]

1. Disconnect the negative battery cable.
2. Remove the glove compartment. (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION](#).)
3. Remove in the order indicated in the table.

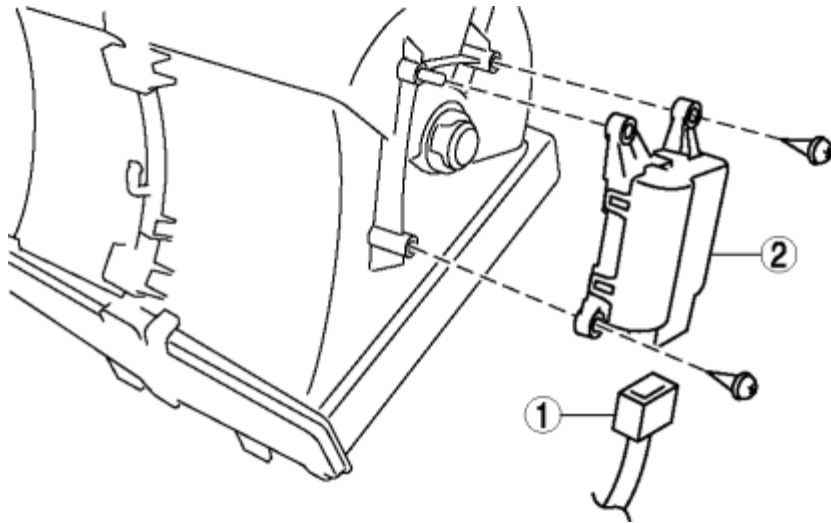


1	Air intake actuator connector
2	Air intake actuator (See Air Intake Actuator Installation Note .)

4. Install in the reverse order of removal.

Air Intake Actuator Installation Note

1. Insert the air intake actuator shaft to the door hole aligned with each shape same as removed position.

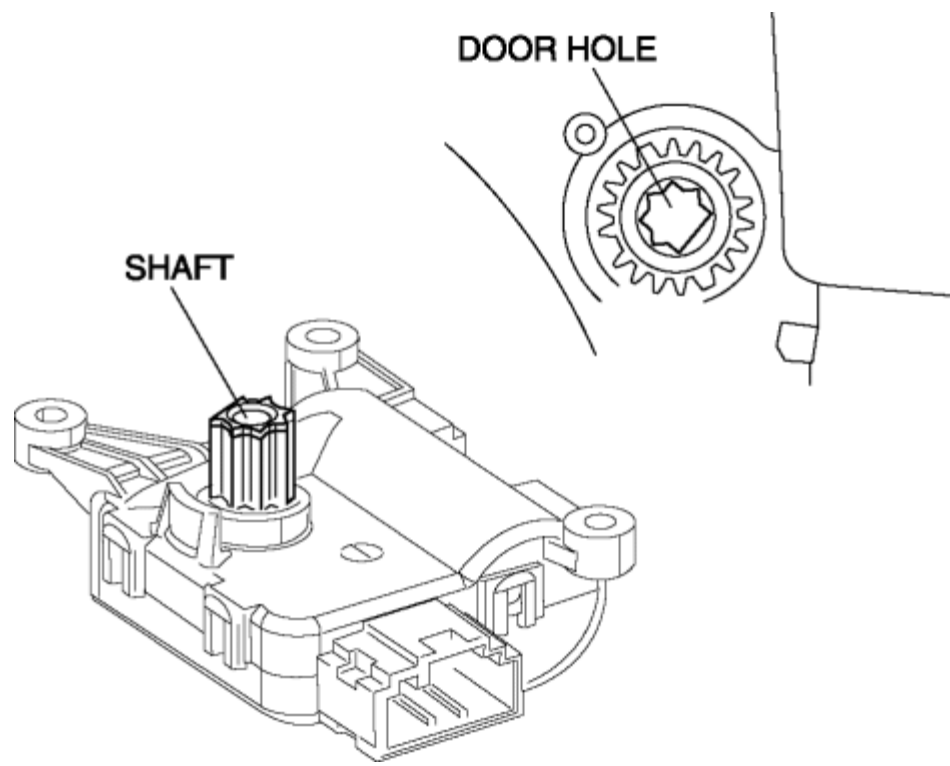

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - HVAC

AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the glove compartment. (See [GLOVE COMPARTMENT REMOVAL/ INSTALLATION.](#))
- 3. Remove in the order indicated in the table.

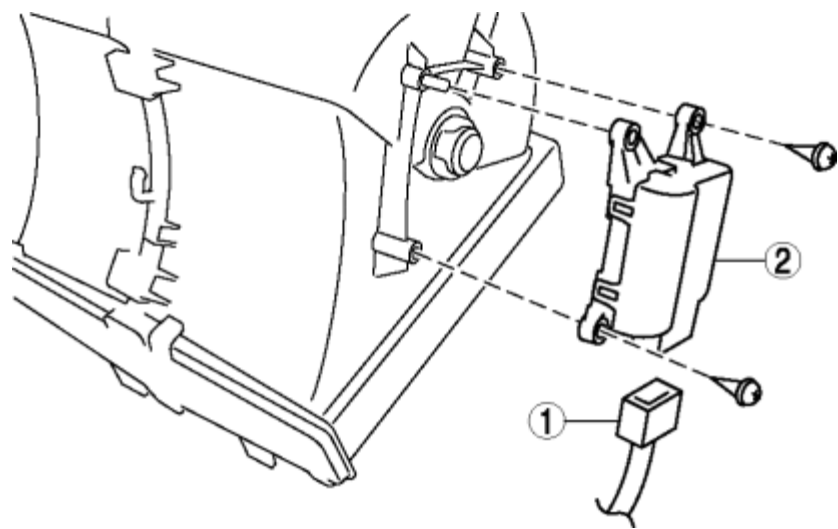


1	Air intake actuator connector
2	Air intake actuator (See Air Intake Actuator Installation Note.)

- 4. Install in the reverse order of removal.

Air Intake Actuator Installation Note

- 1. Insert the air intake actuator shaft to the door hole aligned with each shape same as removed position.

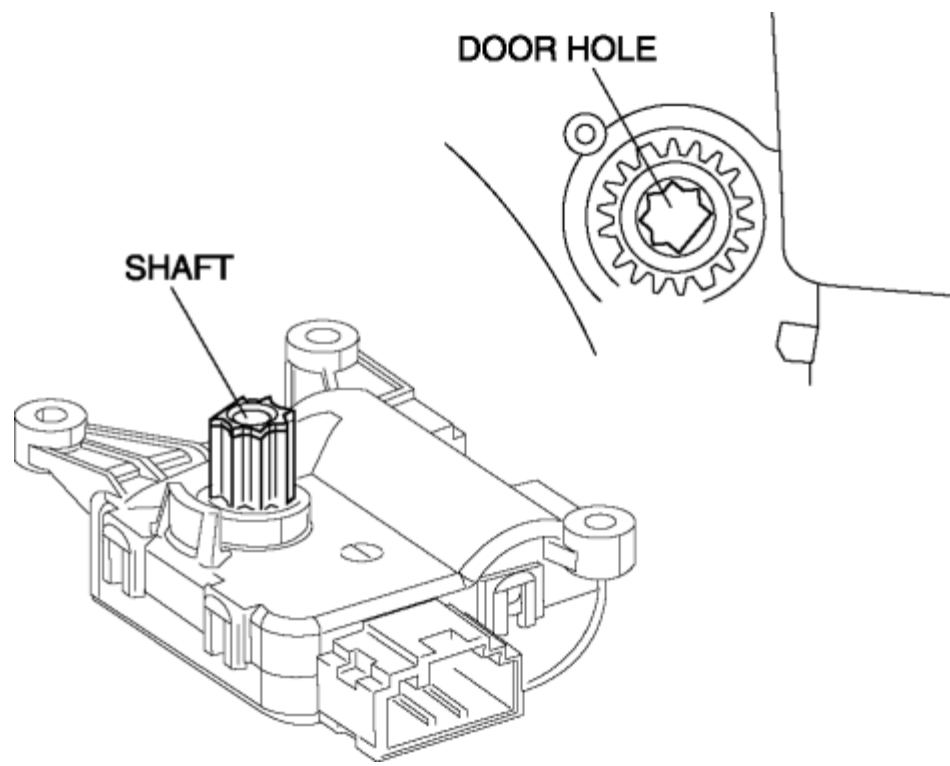

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.