


2012 - Mazda6 - HVAC

HVAC CONTROL SYSTEM LOCATION INDEX [MANUAL AIR CONDITIONER]

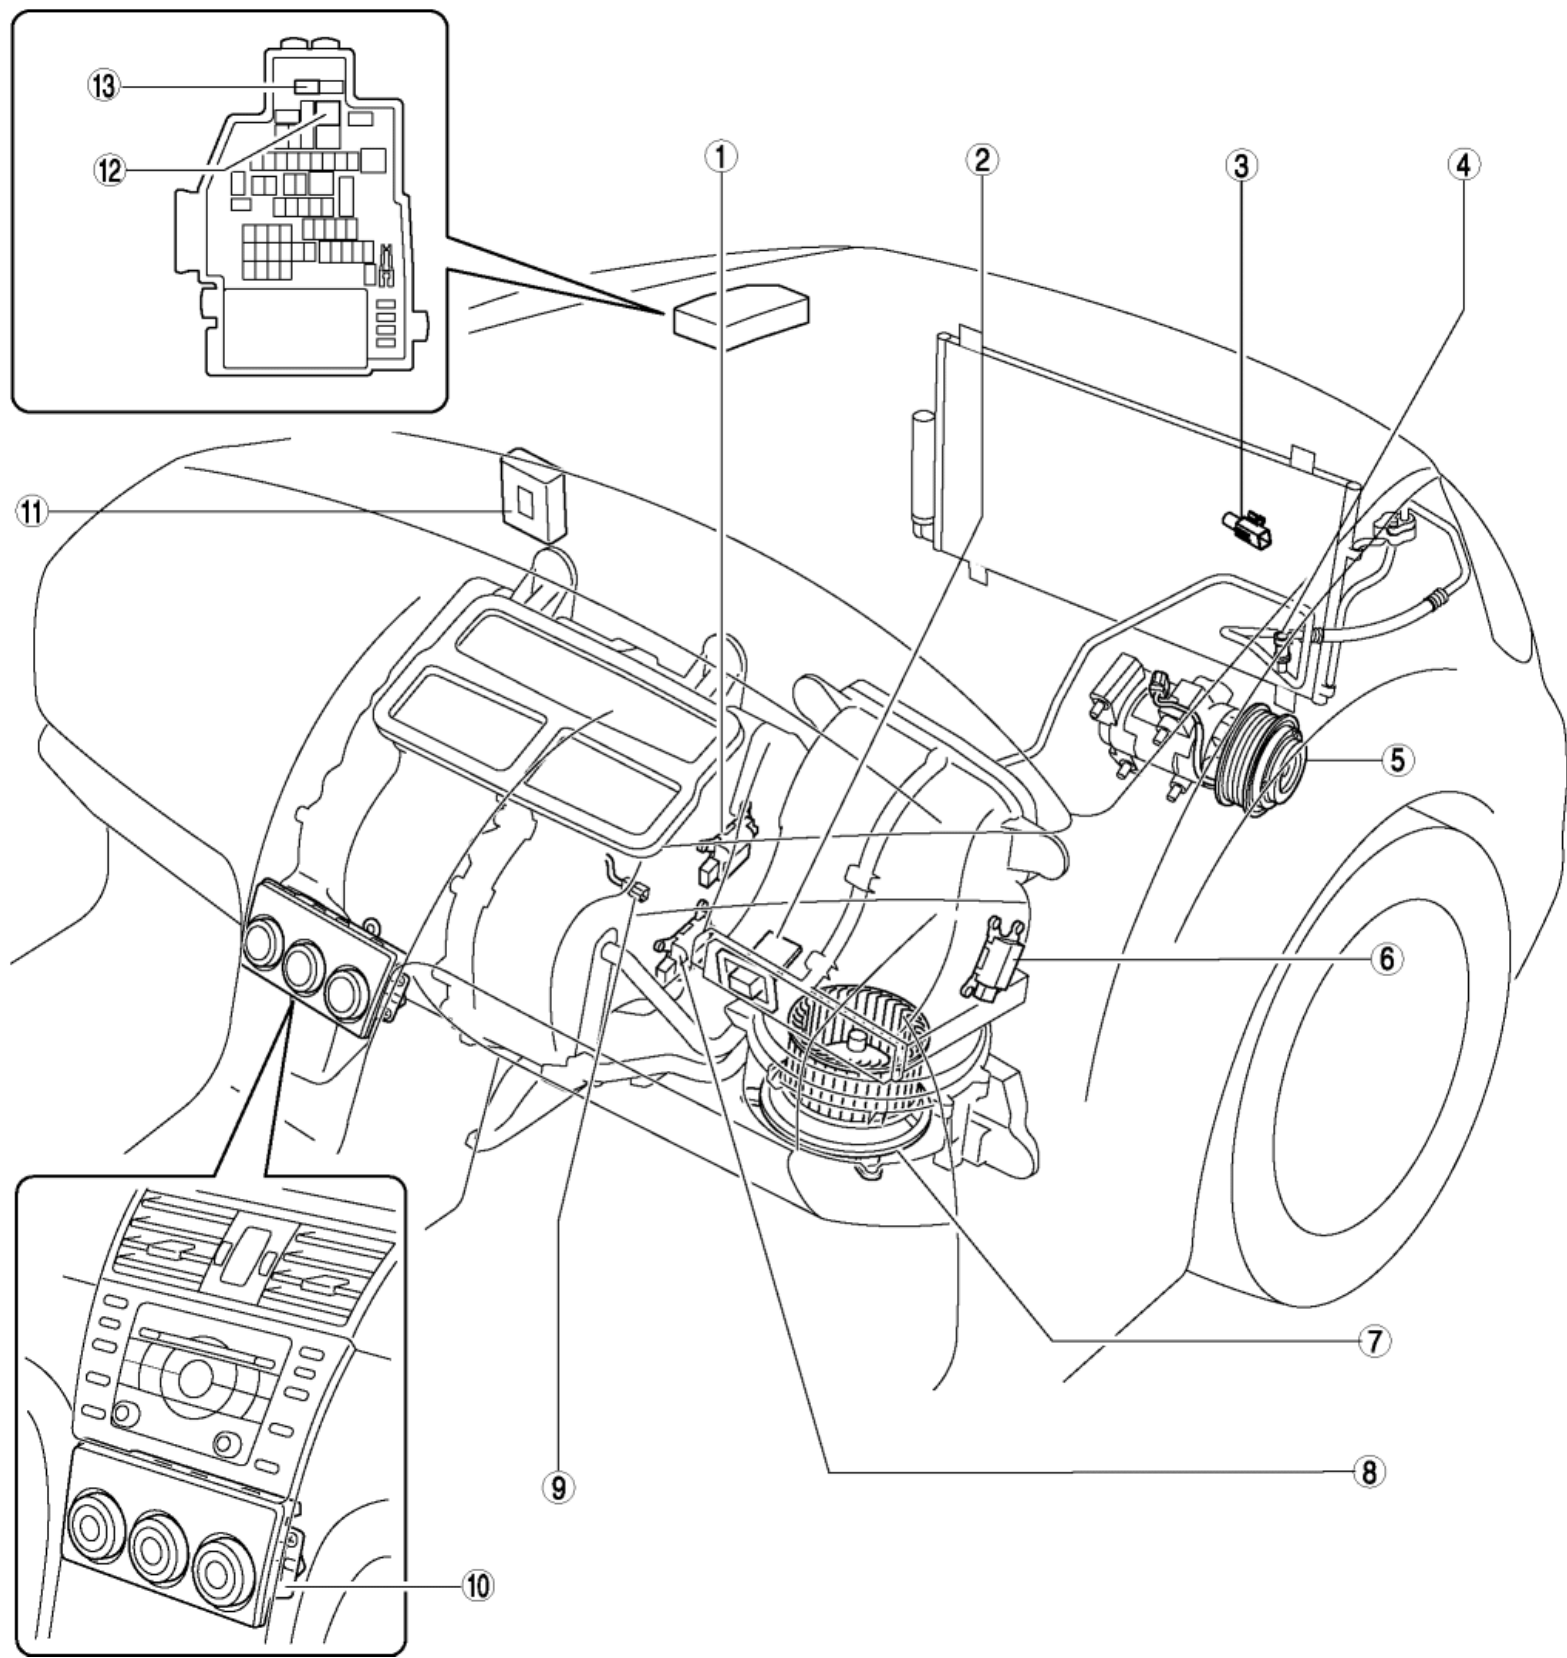


1	Airflow mode actuator (See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AIRFLOW MODE ACTUATOR INSPECTION [MANUAL AIR CONDITIONER].)
2	Resistor (See RESISTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See RESISTOR INSPECTION [MANUAL AIR CONDITIONER].)
3	Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
4	Refrigerant pressure sensor (See REFRIGERANT PRESSURE SENSOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See REFRIGERANT PRESSURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
5	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [MANUAL AIR CONDITIONER].) (See MAGNETIC CLUTCH ADJUSTMENT [MANUAL AIR CONDITIONER].)
6	Air intake actuator (See AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AIR INTAKE ACTUATOR INSPECTION [MANUAL AIR CONDITIONER].)
7	Blower motor (See BLOWER MOTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See BLOWER MOTOR INSPECTION [MANUAL AIR CONDITIONER].)
8	Air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [MANUAL AIR CONDITIONER].)
9	Evaporator temperature sensor (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
10	Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See CLIMATE CONTROL UNIT INSPECTION [MANUAL AIR CONDITIONER].)
11	PCM (See PCM REMOVAL/ INSTALLATION [MZR 2.5].) (See PCM INSPECTION [MZR 2.5].) (See PCM CONFIGURATION [MZR 2.5].) (See PCM REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See PCM INSPECTION [MZI 3.7 V6].)

	(See PCM CONFIGURATION [MZI 3.7 V6] .)
12	Blower relay (See RELAY LOCATION .) (See RELAY INSPECTION .)
13	A/C relay (See RELAY LOCATION .) (See RELAY INSPECTION .)

2012 - Mazda6 - HVAC

HVAC CONTROL SYSTEM LOCATION INDEX [MANUAL AIR CONDITIONER]

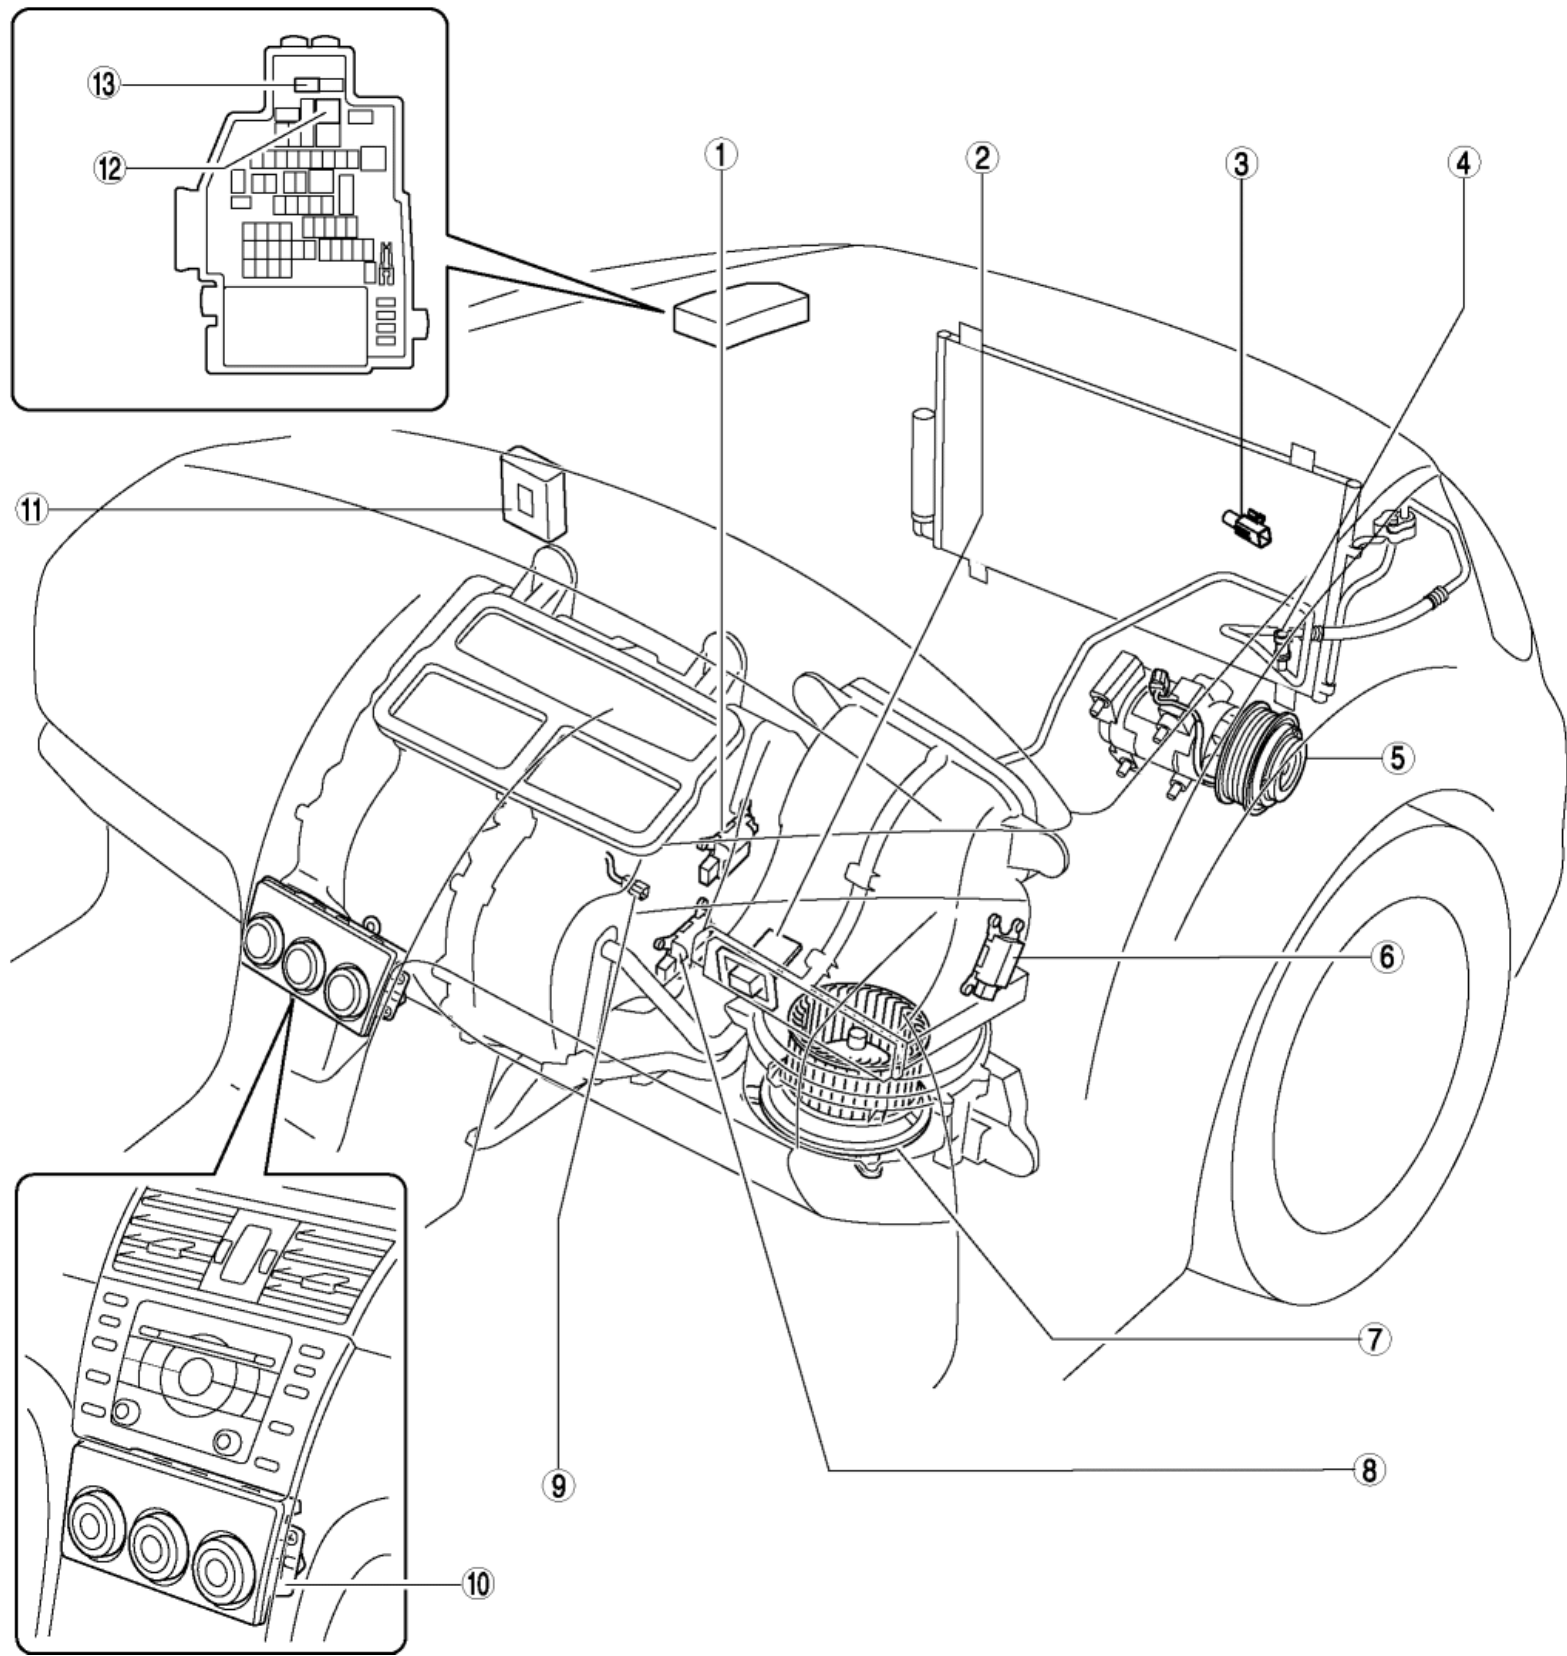

1	Airflow mode actuator (See AIRFLOW MODE ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AIRFLOW MODE ACTUATOR INSPECTION [MANUAL AIR CONDITIONER].)
2	Resistor (See RESISTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See RESISTOR INSPECTION [MANUAL AIR CONDITIONER].)
3	Ambient temperature sensor (See AMBIENT TEMPERATURE SENSOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AMBIENT TEMPERATURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
4	Refrigerant pressure sensor (See REFRIGERANT PRESSURE SENSOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See REFRIGERANT PRESSURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
5	Magnetic clutch (See MAGNETIC CLUTCH DISASSEMBLY/ ASSEMBLY [MANUAL AIR CONDITIONER].) (See MAGNETIC CLUTCH ADJUSTMENT [MANUAL AIR CONDITIONER].)
6	Air intake actuator (See AIR INTAKE ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AIR INTAKE ACTUATOR INSPECTION [MANUAL AIR CONDITIONER].)
7	Blower motor (See BLOWER MOTOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See BLOWER MOTOR INSPECTION [MANUAL AIR CONDITIONER].)
8	Air mix actuator (See AIR MIX ACTUATOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See AIR MIX ACTUATOR INSPECTION [MANUAL AIR CONDITIONER].)
9	Evaporator temperature sensor (See EVAPORATOR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See EVAPORATOR TEMPERATURE SENSOR INSPECTION [MANUAL AIR CONDITIONER].)
10	Climate control unit (See CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER].) (See CLIMATE CONTROL UNIT INSPECTION [MANUAL AIR CONDITIONER].)
11	PCM (See PCM REMOVAL/ INSTALLATION [MZR 2.5].) (See PCM INSPECTION [MZR 2.5].) (See PCM CONFIGURATION [MZR 2.5].) (See PCM REMOVAL/ INSTALLATION [MZI 3.7 V6].) (See PCM INSPECTION [MZI 3.7 V6].)

	(See PCM CONFIGURATION [MZI 3.7 V6] .)
12	Blower relay (See RELAY LOCATION .) (See RELAY INSPECTION .)
13	A/C relay (See RELAY LOCATION .) (See RELAY INSPECTION .)