


2012 - Mazda6 - HVAC

CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. Upper panel (See UPPER PANEL REMOVAL/ INSTALLATION.)
 - b. Decoration panel (See DECORATION PANEL REMOVAL/ INSTALLATION.)
 - c. Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.)
 - d. Shift panel (See SHIFT PANEL REMOVAL/ INSTALLATION.)
 - e. Center panel lower (See CENTER PANEL LOWER REMOVAL/ INSTALLATION.)
- 3. Remove in the order indicated in the table.

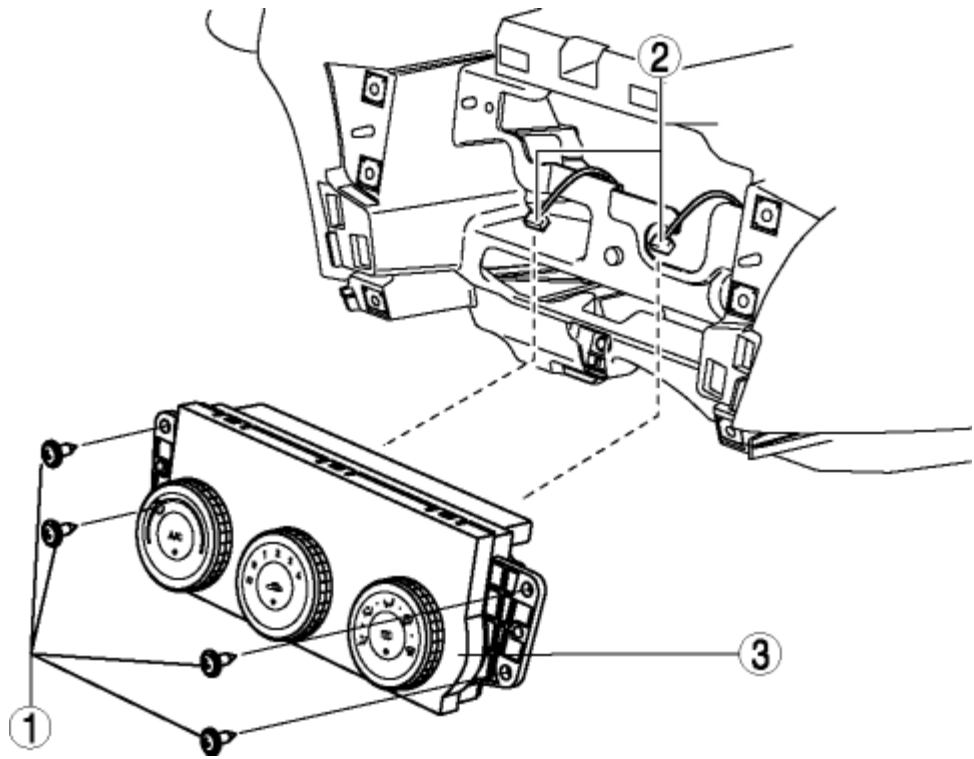

1	Screw
2	Climate control unit connector
3	Climate control unit



4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.

2012 - Mazda6 - HVAC

CLIMATE CONTROL UNIT REMOVAL/ INSTALLATION [MANUAL AIR CONDITIONER]

- 1. Disconnect the negative battery cable.
- 2. Remove the following parts:
 - a. Upper panel (See UPPER PANEL REMOVAL/ INSTALLATION.)
 - b. Decoration panel (See DECORATION PANEL REMOVAL/ INSTALLATION.)
 - c. Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM LOCATION INDEX.)
 - d. Shift panel (See SHIFT PANEL REMOVAL/ INSTALLATION.)
 - e. Center panel lower (See CENTER PANEL LOWER REMOVAL/ INSTALLATION.)
- 3. Remove in the order indicated in the table.

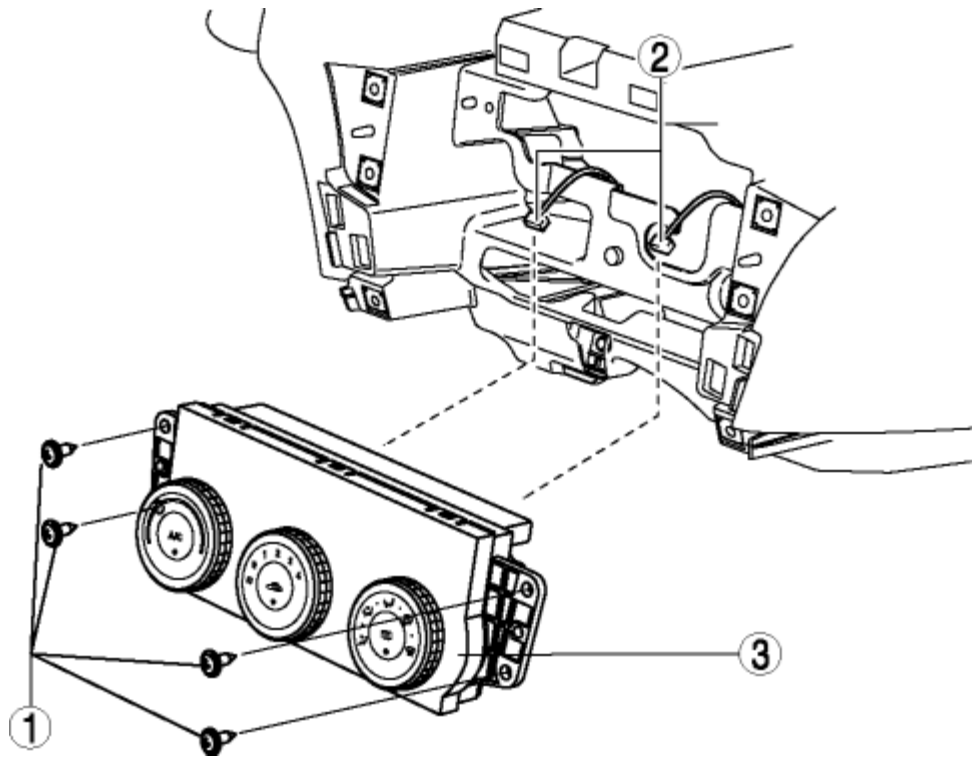

1	Screw
2	Climate control unit connector
3	Climate control unit



4. Install in the reverse order of removal.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2011 Mazda North American Operations, U.S.A.