


2012 - Mazda6 - Body and Accessories

DTC INSPECTION [INSTRUMENT CLUSTER]

- 1. Connect the M-MDS (IDS) to the DLC-2.

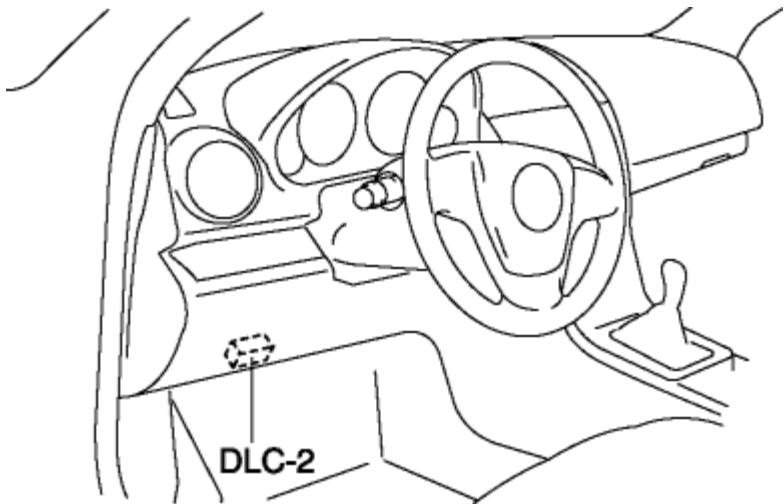

- 2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - Select "Self Test".
 - Select "Modules".
 - Select "IC".
- 3. Verify the DTC according to the directions on the screen.
 - If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.

Snapshot data table

NOTE:

- Snapshot data items are not displayed, according to detected DTC.

Snapshot data item	Data contents	Unit	Display content
TOTAL_DIST	Odometer reading when DTC detected	km	Odometer reading when DTC detected (four-digit number indicated)

- 4. After completion of repairs, clear all DTCs stored in the instrument cluster. (See [CLEARING](#)

DTC [INSTRUMENT CLUSTER].)

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

DTC INSPECTION [INSTRUMENT CLUSTER]

1. Connect the M-MDS (IDS) to the DLC-2.

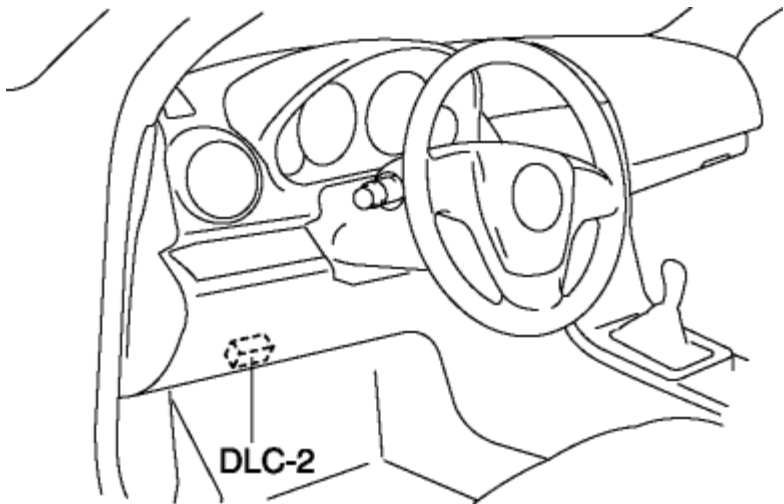

2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
- Select "Self Test".
 - Select "Modules".
 - Select "IC".
3. Verify the DTC according to the directions on the screen.
- If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.

Snapshot data table

NOTE:

- Snapshot data items are not displayed, according to detected DTC.

Snapshot data item	Data contents	Unit	Display content
TOTAL_DIST	Odometer reading when DTC detected	km	Odometer reading when DTC detected (four-digit number indicated)

4. After completion of repairs, clear all DTCs stored in the instrument cluster. (See [CLEARING](#)

DTC [INSTRUMENT CLUSTER].)

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.