

2012 - Mazda6 - Body and Accessories

PID/ DATA MONITOR TABLE [INSTRUMENT CLUSTER]

PID name (definition)	Input-output signal	Unit/status	Terminal
ECT_GAUGE	Engine coolant temperature	°C	—
EX_TEMP	Ambient temperature	°C	1B, 1C
FUEL_INPT	Resistance value of fuel gauge sender unit	ohm	2M, 2D
NUMKEYS*	Number of key ID numbers programmed with the vehicle (With keyless entry system)	—	—
ODO_CNT	Displays odometer data NOTE: Distance is displayed within a range of 0 to 51 m { 0 to 167 ft} repeatedly. Data is reset to 0 m { 0 ft} by switch the ignition to off.	m	—
ODOMETER	Traveled distance	—	—
SPDMTR	Vehicle driven: Displays vehicle speed	KPH, MPH	—
TACHOMTR	When the engine is running: Indicate the engine speed	RPM	—
VPWR	Indicate the battery voltage	V	2V

*

Vehicles with keyless entry system

2012 - Mazda6 - Body and Accessories

PID/ DATA MONITOR TABLE [INSTRUMENT CLUSTER]

PID name (definition)	Input-output signal	Unit/status	Terminal
ECT_GAUGE	Engine coolant temperature	°C	—
EX_TEMP	Ambient temperature	°C	1B, 1C
FUEL_INPT	Resistance value of fuel gauge sender unit	ohm	2M, 2D
NUMKEYS*	Number of key ID numbers programmed with the vehicle (With keyless entry system)	—	—
ODO_CNT	Displays odometer data NOTE: Distance is displayed within a range of 0 to 51 m { 0 to 167 ft} repeatedly. Data is reset to 0 m { 0 ft} by switch the ignition to off.	m	—
ODOMETER	Traveled distance	—	—
SPDMTR	Vehicle driven: Displays vehicle speed	KPH, MPH	—
TACHOMTR	When the engine is running: Indicate the engine speed	RPM	—
VPWR	Indicate the battery voltage	V	2V

*

Vehicles with keyless entry system

