

2012 - Mazda6 - Body and Accessories

DTC U0415:92 [INSTRUMENT CLUSTER]

DESCRIPTION	On request from DSC HU/CM
DETECTION CONDITION	Illumination command signal from DSC HU/CM continues for 20 s or more
POSSIBLE CAUSE	- DSC HU/CM malfunction - Instrument cluster malfunction

Diagnostic Procedure

Step	Inspection	Action
1	PERFORM DSC HU/ CM DTC INSPECTION Perform the DSC HU/CM DTC inspection using the M-MDS. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)] .)	Yes Go to the applicable DTC inspection. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)] .)
		No Go to the next step.
2	PERFORM INSTRUMENT CLUSTER DTC INSPECTION Clear the DTC from the instrument cluster memory using the M-MDS. (See CLEARING DTC [INSTRUMENT CLUSTER] .)	Yes Replace the DSC HU/CM, then go to the next step. (See DSC HU/ CM REMOVAL/ INSTALLATION .)
		No Go to the next step.
3	VERIFY TROUBLESHOOTING Perform the instrument cluster DTC inspection using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER] .)	Yes Replace the instrument cluster, then go to
		No Go to the next step.

	COMPLETED • Clear the DTC from the instrument cluster memory using the M-MDS. (See CLEARING DTC [INSTRUMENT CLUSTER].) • Perform the instrument cluster DTC inspection using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Is the same DTC present?		the next step.
			(See INSTRUMENT CLUSTER REMOVAL/ INSTALLATION .)
4	VERIFY THAT NO OTHER DTCs ARE RECORDED • Are any DTCs present?		No Go to the next step.
		Yes	Go to the applicable DTC inspection.
			(See DTC TABLE [INSTRUMENT CLUSTER] .)
			No DTC troubleshooting completed.

2012 - Mazda6 - Body and Accessories

DTC U0415:92 [INSTRUMENT CLUSTER]

DESCRIPTION	On request from DSC HU/CM
DETECTION CONDITION	Illumination command signal from DSC HU/CM continues for 20 s or more
POSSIBLE CAUSE	- DSC HU/CM malfunction - Instrument cluster malfunction

Diagnostic Procedure

Step	Inspection	Action
1	PERFORM DSC HU/ CM DTC INSPECTION Perform the DSC HU/CM DTC inspection using the M-MDS. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)] .)	Yes Go to the applicable DTC inspection. (See ON-BOARD DIAGNOSIS [DYNAMIC STABILITY CONTROL (DSC)] .)
		No Go to the next step.
2	PERFORM INSTRUMENT CLUSTER DTC INSPECTION Clear the DTC from the instrument cluster memory using the M-MDS. (See CLEARING DTC [INSTRUMENT CLUSTER] .)	Yes Replace the DSC HU/CM, then go to the next step. (See DSC HU/ CM REMOVAL/ INSTALLATION .)
		No Go to the next step.
3	VERIFY TROUBLESHOOTING Perform the instrument cluster DTC inspection using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER] .)	Yes Replace the instrument cluster, then go to
		No Go to the next step.

	COMPLETED • Clear the DTC from the instrument cluster memory using the M-MDS. (See CLEARING DTC [INSTRUMENT CLUSTER].) • Perform the instrument cluster DTC inspection using the M-MDS. (See DTC INSPECTION [INSTRUMENT CLUSTER].) • Is the same DTC present?		the next step.
			(See INSTRUMENT CLUSTER REMOVAL/ INSTALLATION .)
4	VERIFY THAT NO OTHER DTCs ARE RECORDED • Are any DTCs present?		No Go to the next step.
		Yes	Go to the applicable DTC inspection.
			(See DTC TABLE [INSTRUMENT CLUSTER] .)
			No DTC troubleshooting completed.