

2012 - Mazda6 - Body and Accessories

DTC U3000:04 [BCM]

DESCRIPTION	BCM internal malfunction
DETECTION CONDITION	• BCM internal ECU is faulted.
POSSIBLE CAUSE	• BCM malfunction

Diagnostic Procedure

Step	Inspection	Action
1	PERFORM DTC INSPECTION • Clear the DTC from the BCM memory using the M-MDS. (See CLEARING DTC [BCM] .) • Perform the BCM DTC inspection using the M-MDS. (See DTC INSPECTION [BCM] .) • Is the same DTC present?	Yes Replace the BCM, then go to the next step. (See BODY CONTROL MODULE (BCM) REMOVAL/ INSTALLATION .)
		No Go to the next step.
2	VERIFY THAT NO OTHER DTCs ARE PRESENT • Are any DTCs present?	Yes Go to the applicable DTC inspection. (See DTC TABLE [BCM] .)
		No DTC troubleshooting completed.

2012 - Mazda6 - Body and Accessories

DTC U3000:04 [BCM]

DESCRIPTION	BCM internal malfunction
DETECTION CONDITION	• BCM internal ECU is faulted.
POSSIBLE CAUSE	• BCM malfunction

Diagnostic Procedure

Step	Inspection	Action
1	PERFORM DTC INSPECTION • Clear the DTC from the BCM memory using the M-MDS. (See CLEARING DTC [BCM].) • Perform the BCM DTC inspection using the M-MDS. (See DTC INSPECTION [BCM].) • Is the same DTC present?	Yes Replace the BCM, then go to the next step. (See BODY CONTROL MODULE (BCM) REMOVAL/ INSTALLATION .)
		No Go to the next step.
2	VERIFY THAT NO OTHER DTCs ARE PRESENT • Are any DTCs present?	Yes Go to the applicable DTC inspection. (See DTC TABLE [BCM] .)
		No DTC troubleshooting completed.