


2012 - Mazda6 - Body and Accessories

DTC INSPECTION [BCM]

1. Connect the M-MDS (IDS) to the DLC-2.

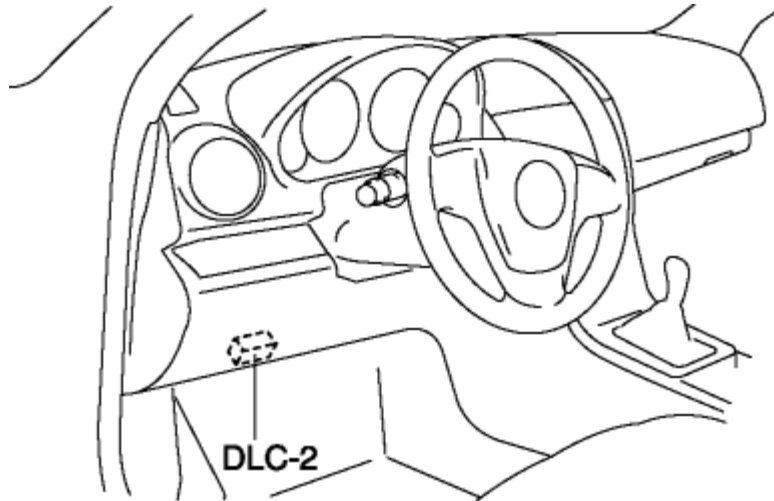


2. Verify the following vehicle conditions:
 - All the switches are turned off (except the ignition switch).
 - All the doors, hood, and liftgate are closed.
 - All the doors, and liftgate are unlocked.
 - All the seat belts are unbuckled.
 - Parking brake lever is pulled.
3. After the vehicle is identified, select the following items from the initial screen of the IDS.
 - Select "Self Test".
 - Select "Modules".
 - Select "BCM".
4. Verify the DTC according to the directions on the screen.
 - If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.
5. After completion of repairs, clear all DTCs stored in the BCM. (See [CLEARING DTC \[BCM\]](#) .)

2012 - Mazda6 - Body and Accessories

DTC INSPECTION [BCM]

1. Connect the M-MDS (IDS) to the DLC-2.

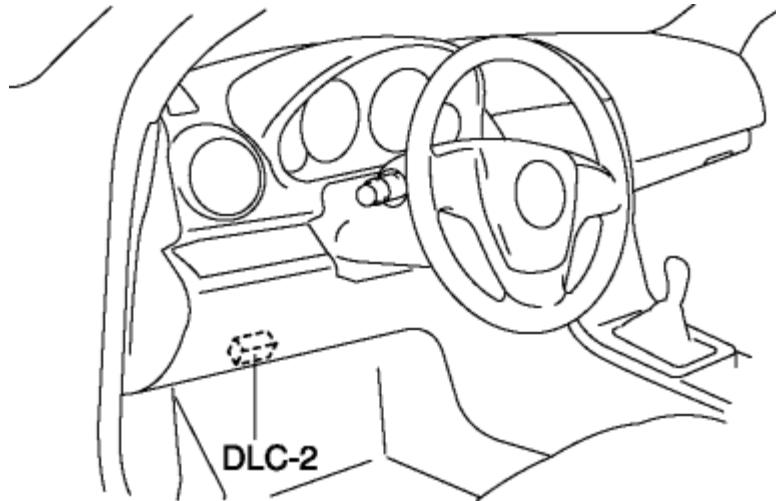

2. Verify the following vehicle conditions:
 - All the switches are turned off (except the ignition switch).
 - All the doors, hood, and liftgate are closed.
 - All the doors, and liftgate are unlocked.
 - All the seat belts are unbuckled.
 - Parking brake lever is pulled.
3. After the vehicle is identified, select the following items from the initial screen of the IDS.
 - Select "Self Test".
 - Select "Modules".
 - Select "BCM".
4. Verify the DTC according to the directions on the screen.
 - If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.
5. After completion of repairs, clear all DTCs stored in the BCM. (See [CLEARING DTC \[BCM\]](#) .)