


2012 - Mazda6 - Body and Accessories

CLEARING DTC [BCM]

1. Connect the M-MDS (IDS) to the DLC-2.

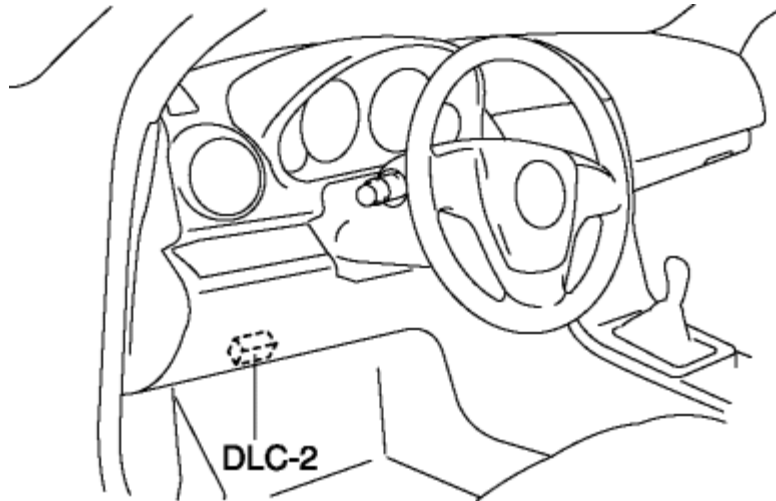


2. After the vehicle is identified, select the following items from the initial screen of the IDS.
 - Select "Self Test".
 - Select "Modules".
 - Select "BCM".
3. Verify the DTC according to the directions on the screen.
4. Press the clear button on the DTC screen to clear the DTC.
5. Switch the ignition to OFF.
6. Switch the ignition to ON and wait for **5 s or more**.
7. Perform DTC inspection. (See [DTC INSPECTION \[BCM\]](#).)
8. Verify that no DTCs are displayed.

2012 - Mazda6 - Body and Accessories

CLEARING DTC [BCM]

1. Connect the M-MDS (IDS) to the DLC-2.

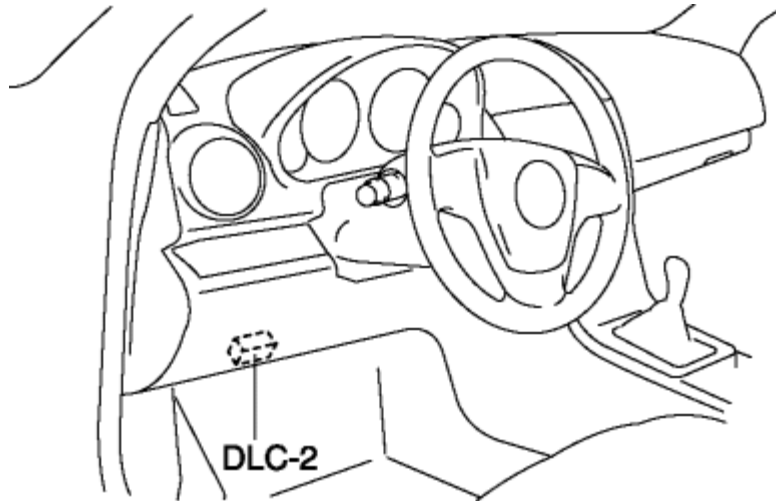

2. After the vehicle is identified, select the following items from the initial screen of the IDS.
 - Select "Self Test".
 - Select "Modules".
 - Select "BCM".
3. Verify the DTC according to the directions on the screen.
4. Press the clear button on the DTC screen to clear the DTC.
5. Switch the ignition to OFF.
6. Switch the ignition to ON and wait for **5 s or more**.
7. Perform DTC inspection. (See [DTC INSPECTION \[BCM\]](#).)
8. Verify that no DTCs are displayed.