

2012 - Mazda6 - Body and Accessories

PID/ DATA MONITOR TABLE [BCM]

PID/data monitor item	Unit/Condition (Tester display)	Operation Condition	Inspection item (s)
BRK_FLUID	Normal/Low	- Brake fluid level above MIN: Normal - Brake fluid level less than MIN: Low	Brake fluid level sensor
DRSW_D	Close/Open	- Driver-side door opened: Open - Driver-side door closed: Close	Door latch switch (driver-side)
DRSW_LR	Close/Open	- Rear door (LH) is closed: Close - Rear door (LH) is opened. Open	Rear door latch switch (LH)
DRSW_P	Close/Open	- Passenger-side door opened: Open - Passenger-side door closed: Close	Door latch switch (passenger-side)
DRSW_RR	Close/Open	- Rear door (RH) is closed: Close - Rear door (RH) is opened. Open	Rear door latch switch (RH)
HAZARD	Off/On	- Hazard warning switch in on position: On - Hazard warning switch in off position: Off	Hazard warning switch
HOOD_SW*	Close/Open	- Hood opened: Open - Hood closed: Close	Hood latch switch
KEY_LOCK_SW	Off/Lock	- Door key cylinder at LOCK: Lock - Door key cylinder not at LOCK: Off	Door key cylinder switch

KEY_UNLK_SW	Off/Unlock	- Door key cylinder at LOCK: Off - Door key cylinder not at LOCK: Unlock	Door key cylinder switch
PRK_BRK	Off/On	- Parking brake depressed (Parking brake switch in the on position): On - Parking brake not depressed (Parking brake switch in the off position): Off	Parking brake switch
R_GEAR_SW	Not_R/R	- Shift the selector lever to R position: R - Other than these conditions: Not_R	TR switch (ATX)/Back-up light switch (MTX)
TURN_SW_L	Off/On	- Turn switch at left position: On - Turn switch in off position: Off	Turn switch (light switch)
TURN_SW_R	Off/On	- Turn switch at right position: On - Turn switch in off position: Off	Turn switch (light switch)
TR/LG_SW	Close/Open	- Trunk lid opened: Open - Trunk lid closed: Close	Trunk lid latch and lock actuator
TR/LG_RLS_SW	Off/On	- Trunk lid opened switch pressed: On - Trunk lid opened switch not pressed: Off	Trunk lid opener switch
VPWR	V	Indicate the battery voltage.	Battery

*

Vehicles with theft-deterrent system

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories

PID/ DATA MONITOR TABLE [BCM]

PID/data monitor item	Unit/Condition (Tester display)	Operation Condition	Inspection item (s)
BRK_FLUID	Normal/Low	- Brake fluid level above MIN: Normal - Brake fluid level less than MIN: Low	Brake fluid level sensor
DRSW_D	Close/Open	- Driver-side door opened: Open - Driver-side door closed: Close	Door latch switch (driver-side)
DRSW_LR	Close/Open	- Rear door (LH) is closed: Close - Rear door (LH) is opened. Open	Rear door latch switch (LH)
DRSW_P	Close/Open	- Passenger-side door opened: Open - Passenger-side door closed: Close	Door latch switch (passenger-side)
DRSW_RR	Close/Open	- Rear door (RH) is closed: Close - Rear door (RH) is opened. Open	Rear door latch switch (RH)
HAZARD	Off/On	- Hazard warning switch in on position: On - Hazard warning switch in off position: Off	Hazard warning switch
HOOD_SW*	Close/Open	- Hood opened: Open - Hood closed: Close	Hood latch switch
KEY_LOCK_SW	Off/Lock	- Door key cylinder at LOCK: Lock - Door key cylinder not at LOCK: Off	Door key cylinder switch

KEY_UNLK_SW	Off/Unlock	- Door key cylinder at LOCK: Off - Door key cylinder not at LOCK: Unlock	Door key cylinder switch
PRK_BRK	Off/On	- Parking brake depressed (Parking brake switch in the on position): On - Parking brake not depressed (Parking brake switch in the off position): Off	Parking brake switch
R_GEAR_SW	Not_R/R	- Shift the selector lever to R position: R - Other than these conditions: Not_R	TR switch (ATX)/Back-up light switch (MTX)
TURN_SW_L	Off/On	- Turn switch at left position: On - Turn switch in off position: Off	Turn switch (light switch)
TURN_SW_R	Off/On	- Turn switch at right position: On - Turn switch in off position: Off	Turn switch (light switch)
TR/LG_SW	Close/Open	- Trunk lid opened: Open - Trunk lid closed: Close	Trunk lid latch and lock actuator
TR/LG_RLS_SW	Off/On	- Trunk lid opened switch pressed: On - Trunk lid opened switch not pressed: Off	Trunk lid opener switch
VPWR	V	Indicate the battery voltage.	Battery

*

Vehicles with theft-deterrent system

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.