

2012 - Mazda6 - Body and Accessories


DTC INSPECTION [AUDIO]

NOTE:

- All DTCs displayed in the DTC inspection should be entered in the Audio Repair Order Form.

Without Display

1. Switch the ignition to ACC or ON.
2. While pressing the POWER/VOLUME switch, simultaneously press the REPEAT switch and the AUX switch for **2 s or more**.

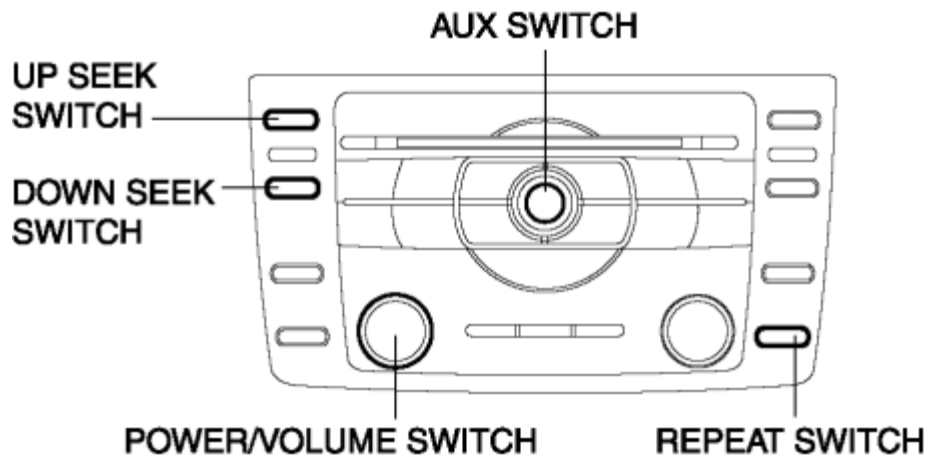


NOTE:

- If several DTCs are in the memory, they can be displayed using the UP SEEK switch or DOWN SEEK switch.
3. To stop the on-board diagnostic test mode, ignition is switched to off.

With Display

1. Switch the ignition to ACC or ON.
2. Turn the audio unit power to OFF.
3. While pressing the POWER/VOLUME switch, simultaneously press the PHONE switch and the Selection switch 8 for **3 s or more**.

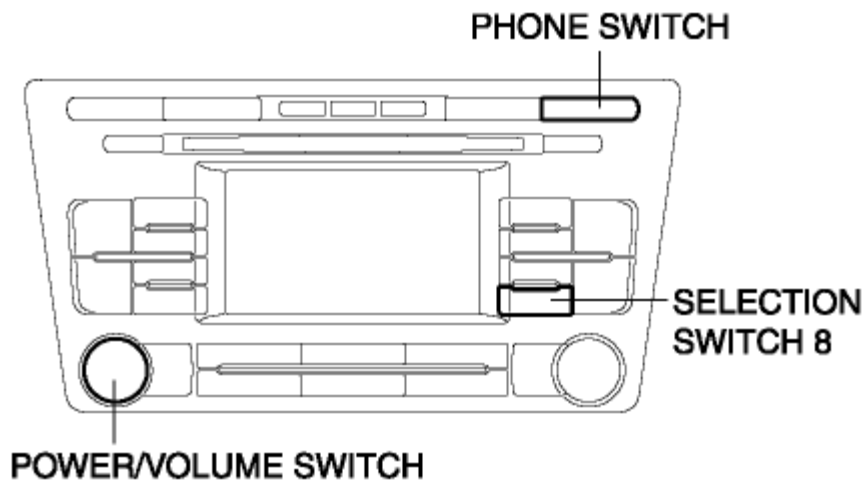

4. To stop the on-board diagnostic test mode, ignition is switched to off.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories


DTC INSPECTION [AUDIO]

NOTE:

- All DTCs displayed in the DTC inspection should be entered in the Audio Repair Order Form.

Without Display

1. Switch the ignition to ACC or ON.
2. While pressing the POWER/VOLUME switch, simultaneously press the REPEAT switch and the AUX switch for **2 s or more**.

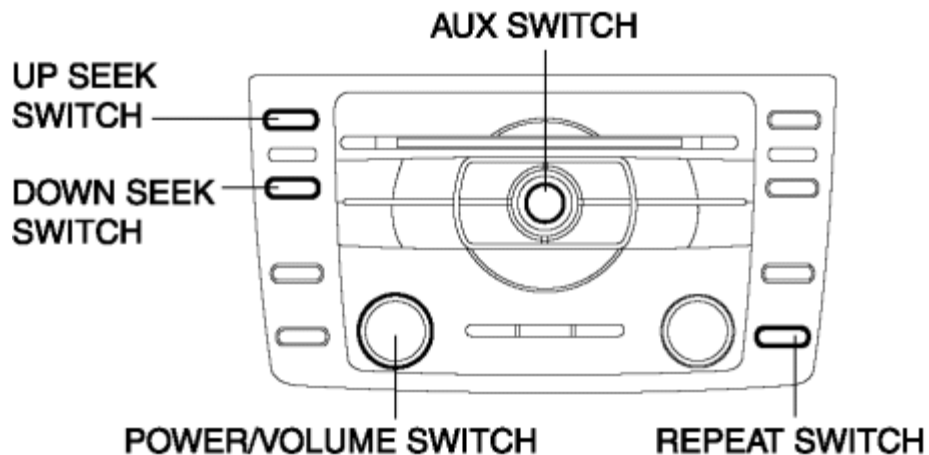


NOTE:

- If several DTCs are in the memory, they can be displayed using the UP SEEK switch or DOWN SEEK switch.
3. To stop the on-board diagnostic test mode, ignition is switched to off.

With Display

1. Switch the ignition to ACC or ON.
2. Turn the audio unit power to OFF.
3. While pressing the POWER/VOLUME switch, simultaneously press the PHONE switch and the Selection switch 8 for **3 s or more**.

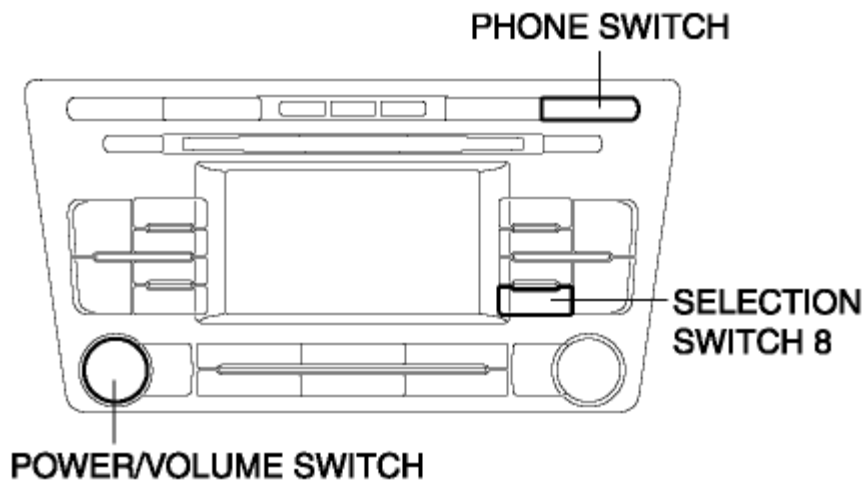

4. To stop the on-board diagnostic test mode, ignition is switched to off.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.