

2012 - Mazda6 - Body and Accessories


CLEARING DTC [AUDIO]

CAUTION:

- Before clearing the DTCs, be sure to enter all of the DTCs displayed in the DTC inspection in the Audio Repair Order Form.

Without Display


1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[AUDIO\]](#).)
2. While pressing the POWER/VOLUME switch, simultaneously press the AUDIO CONT switch for **2 s or more**.

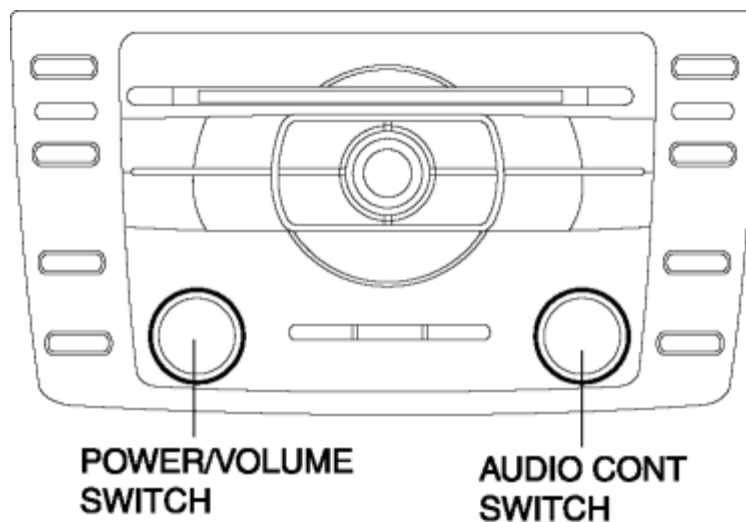

3. To stop the on-board diagnostic test mode, ignition is switched to off.

With Display

1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[AUDIO\]](#).)
2. While pressing the POWER/VOLUME switch, simultaneously press the AUDIO CONT switch for **3 s or more**.

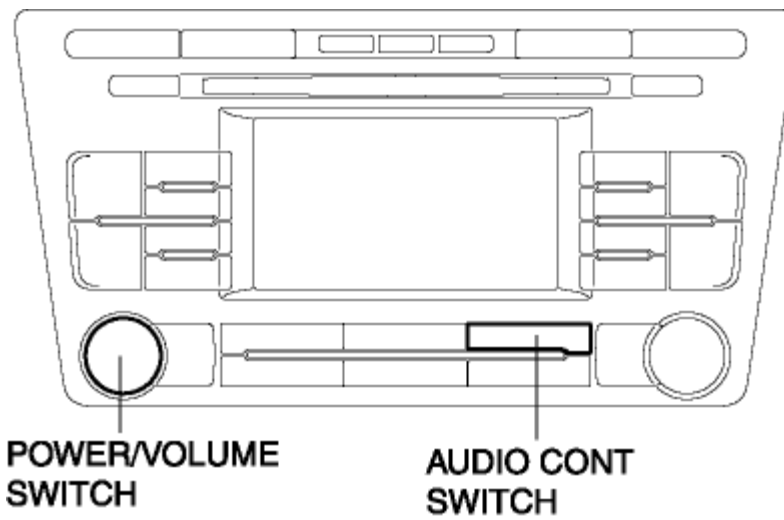

3. To stop the on-board diagnostic test mode, ignition is switched to off.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.

2012 - Mazda6 - Body and Accessories


CLEARING DTC [AUDIO]

CAUTION:

- Before clearing the DTCs, be sure to enter all of the DTCs displayed in the DTC inspection in the Audio Repair Order Form.

Without Display


1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[AUDIO\]](#).)
2. While pressing the POWER/VOLUME switch, simultaneously press the AUDIO CONT switch for **2 s or more**.

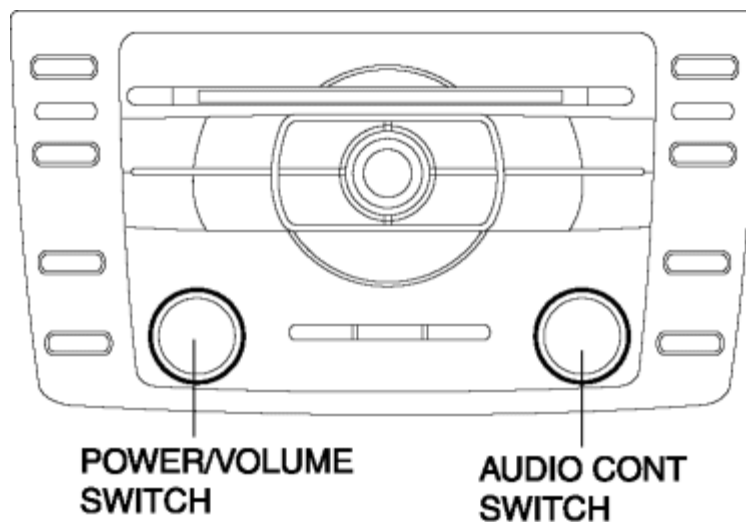

3. To stop the on-board diagnostic test mode, ignition is switched to off.

With Display

1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[AUDIO\]](#).)
2. While pressing the POWER/VOLUME switch, simultaneously press the AUDIO CONT switch for **3 s or more**.

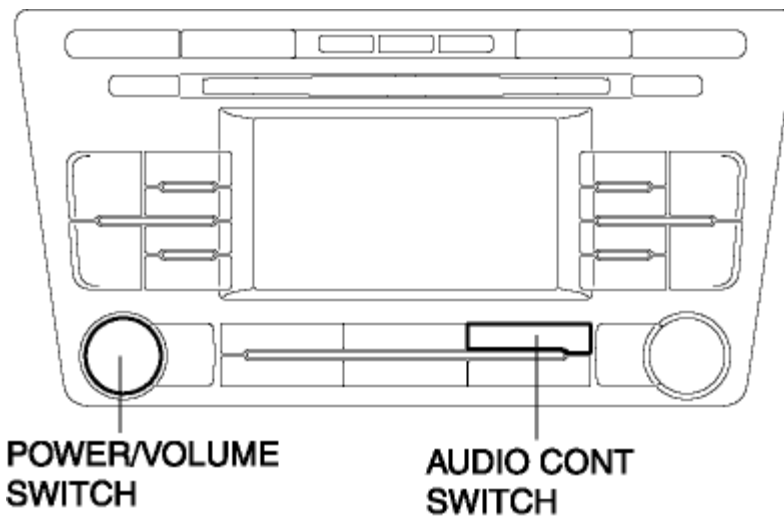

3. To stop the on-board diagnostic test mode, ignition is switched to off.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.