



2012 - Mazda6 - Body and Accessories

STARTING PROCEDURE FOR DIAGNOSTIC MODE [CAR-NAVIGATION SYSTEM]


1. Switch the ignition to ACC or ON.
2. Press the MENU switch (panel switch).

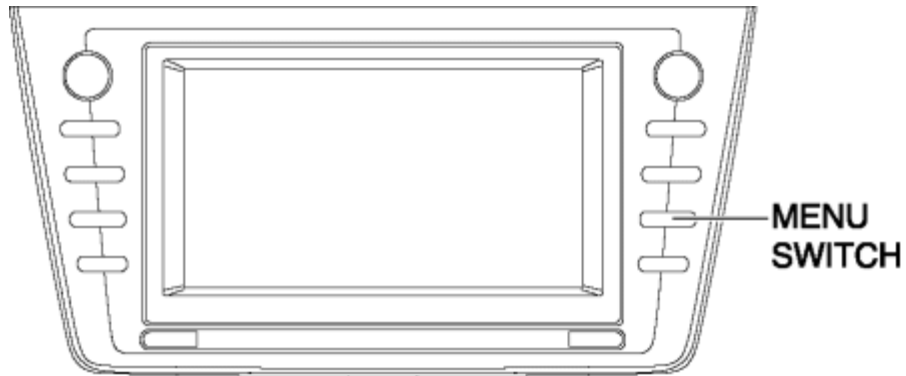


3. Select "Navigation Setup".

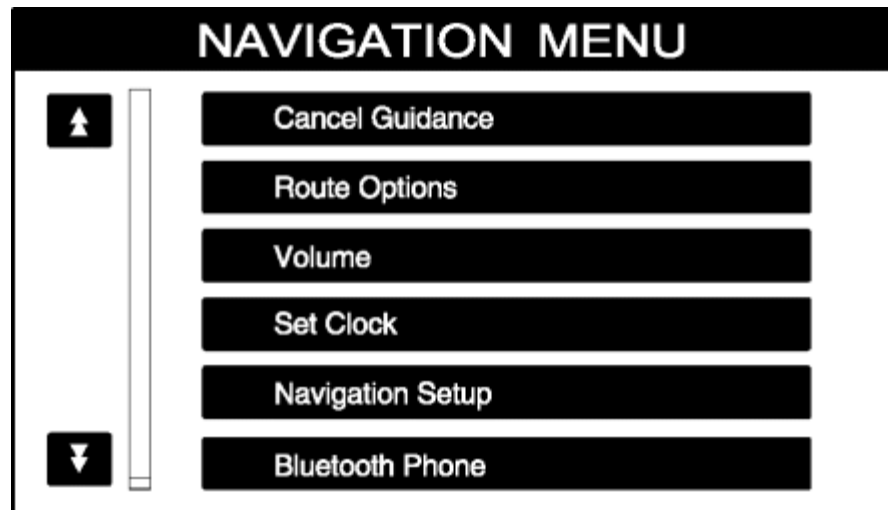


4. Select "Calibration".

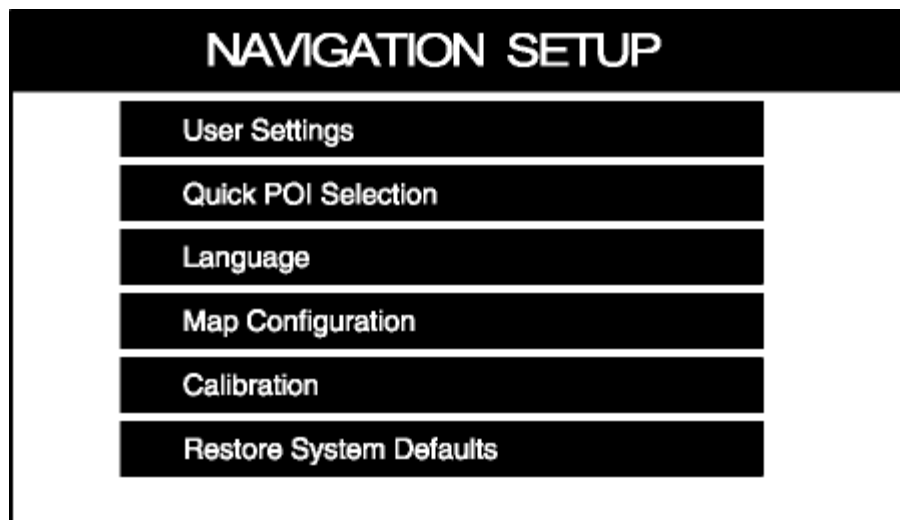

5. Select "Map Version".

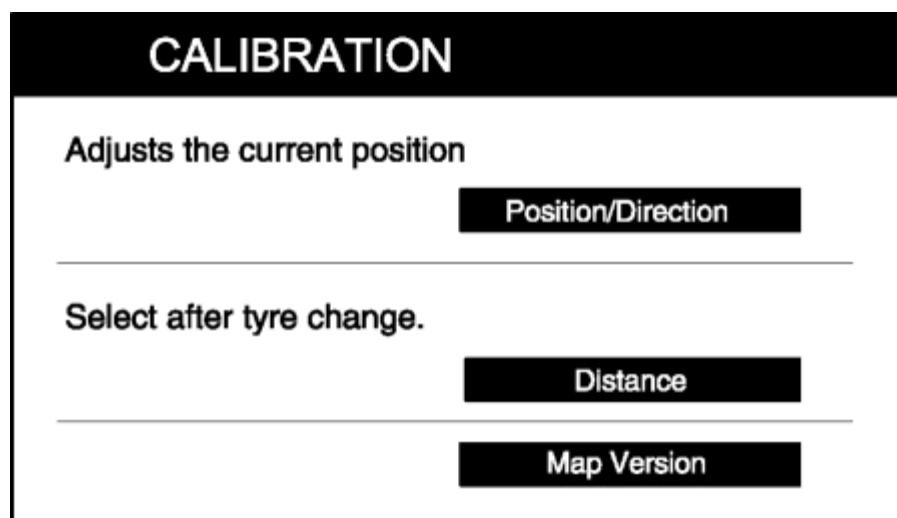

6. Press the A portion of the MAP VERSION screen two times.

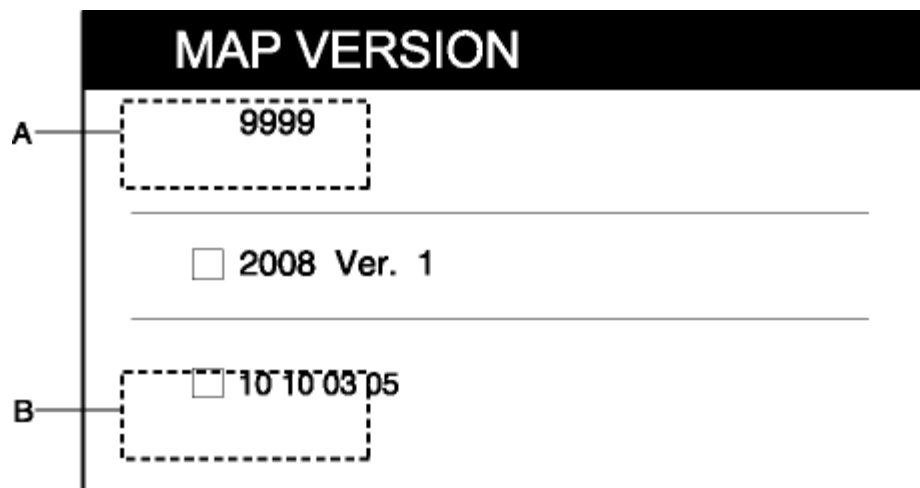

7. Press the B portion of the MAP VERSION screen two times.

8. Select "Menu".

Diagnosis Check				Menu
PKB	ON	TNS	ON	
REV	OFF	GPS Antenna	OK	
Microphone	NCON	Traffic System	TMC	
SPEED	Kph	150		
	mph	100		

9. Select the items to be inspected from the diagnosis menu. (See [DIAGNOSTIC CHECK \[CAR-NAVIGATION SYSTEM\]](#).)

10. To stop the diagnostic mode, ignition is switched to off.

[< Previous](#) [Next >](#)


[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.


2012 - Mazda6 - Body and Accessories

STARTING PROCEDURE FOR DIAGNOSTIC MODE [CAR-NAVIGATION SYSTEM]


1. Switch the ignition to ACC or ON.
2. Press the MENU switch (panel switch).

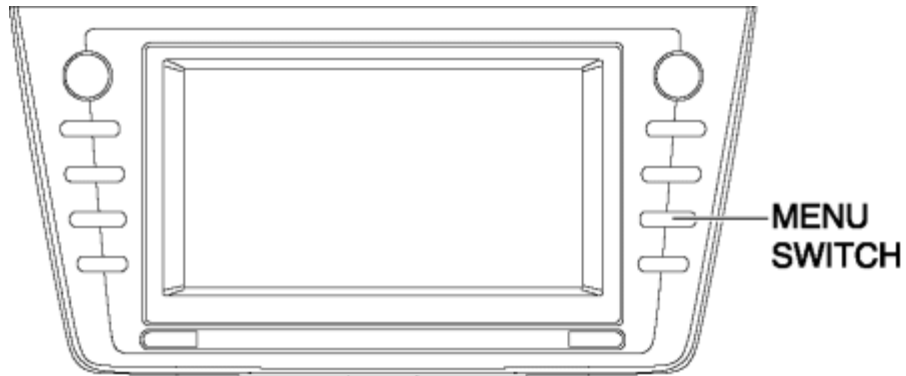


3. Select "Navigation Setup".

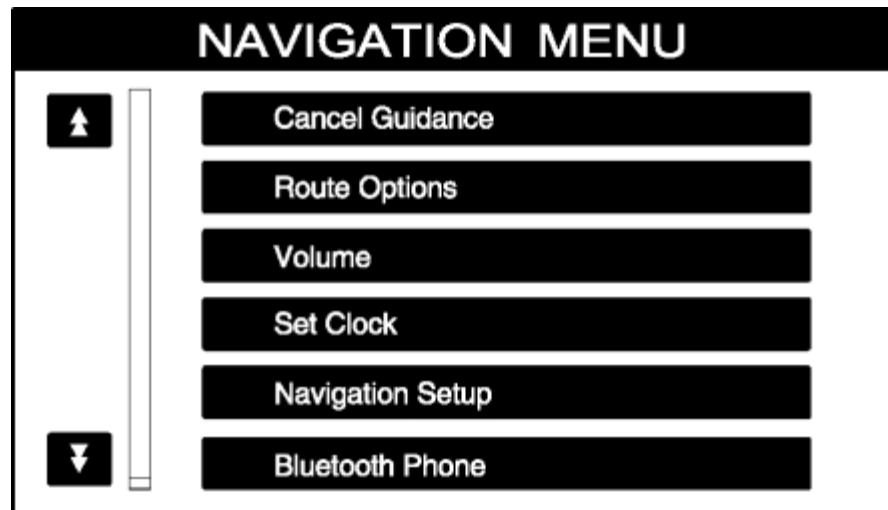


4. Select "Calibration".

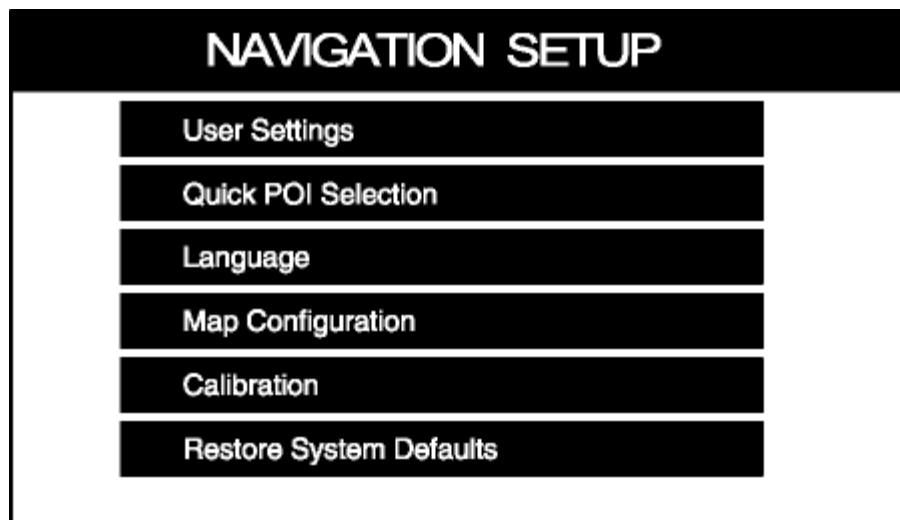

5. Select "Map Version".

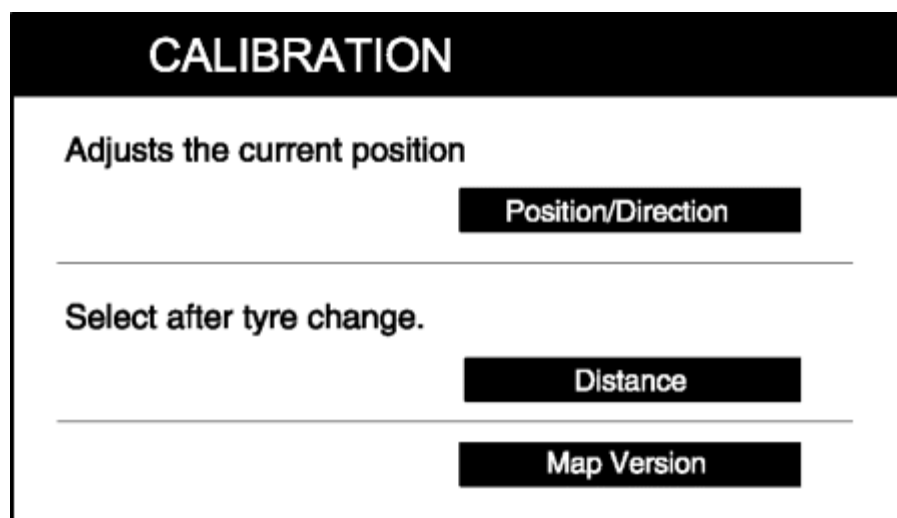

6. Press the A portion of the MAP VERSION screen two times.

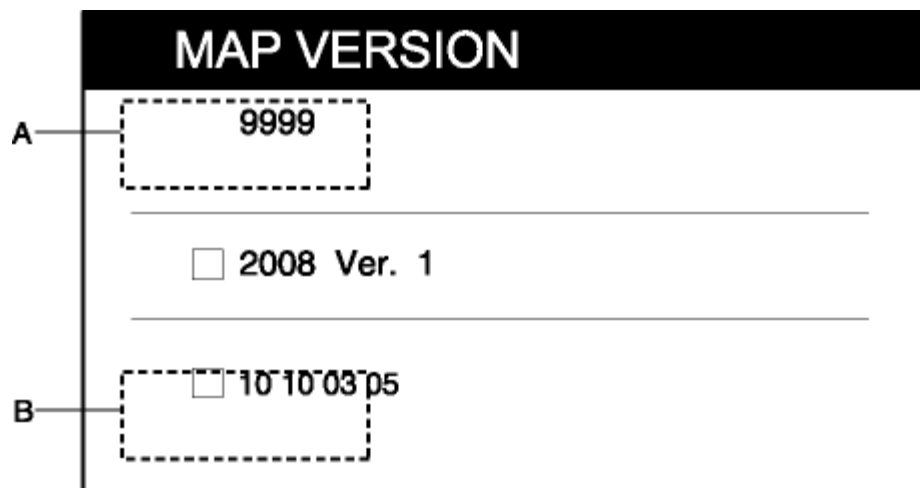

7. Press the B portion of the MAP VERSION screen two times.

8. Select "Menu".

Diagnosis Check				Menu
PKB	ON	TNS	ON	
REV	OFF	GPS Antenna	OK	
Microphone	NCON	Traffic System	TMC	
SPEED	Kph	150		
	mph	100		

9. Select the items to be inspected from the diagnosis menu. (See [DIAGNOSTIC CHECK \[CAR-NAVIGATION SYSTEM\]](#).)

10. To stop the diagnostic mode, ignition is switched to off.

[< Previous](#) [Next >](#)

[Back to Top](#)

© 2012 Mazda North American Operations, U.S.A.