

2012 - Mazda6 - Body and Accessories

CLEARING DTC [Bluetooth SYSTEM (HANDS-FREE TELEPHONE (HF/ TEL) SYSTEM)]


CAUTION:

- Before clearing the DTCs, be sure to enter all of the DTCs displayed in the DTC inspection in the Audio Repair Order Form.

With Audio Unit

Without display


1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[Bluetooth SYSTEM \(HANDS-FREE TELEPHONE \(HF/ TEL\) SYSTEM\)\]](#).)
2. While pressing the AUTO-M switch, simultaneously press the PRESET switch 4 for **2 s or more**.

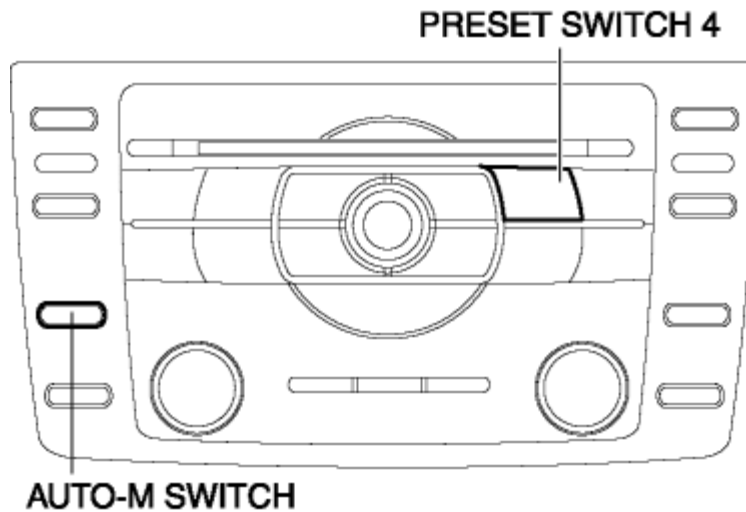

3. To stop the on-board diagnostic test mode, ignition is switched to off.

With display

1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[Bluetooth SYSTEM \(HANDS-FREE TELEPHONE \(HF/ TEL\) SYSTEM\)\]](#).)
2. Press the Selection switch 3 or Selection switch 4.

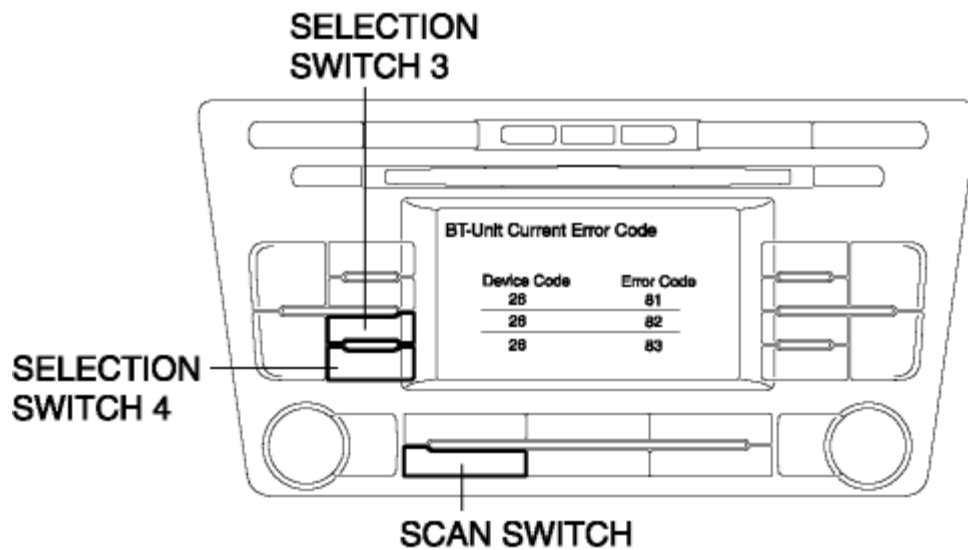


3. While pressing the SCAN switch, simultaneously press the Selection switch 4 for **3 s or more**.

4. To stop the on-board diagnostic test mode, ignition is switched to off.

With Car-navigation Unit

1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[Bluetooth SYSTEM \(HANDS-FREE TELEPHONE \(HF/ TEL\) SYSTEM\)\]](#).)

2. While pressing the POWER/VOLUME switch, simultaneously press the DISPLAY switch for **2 s or more**.

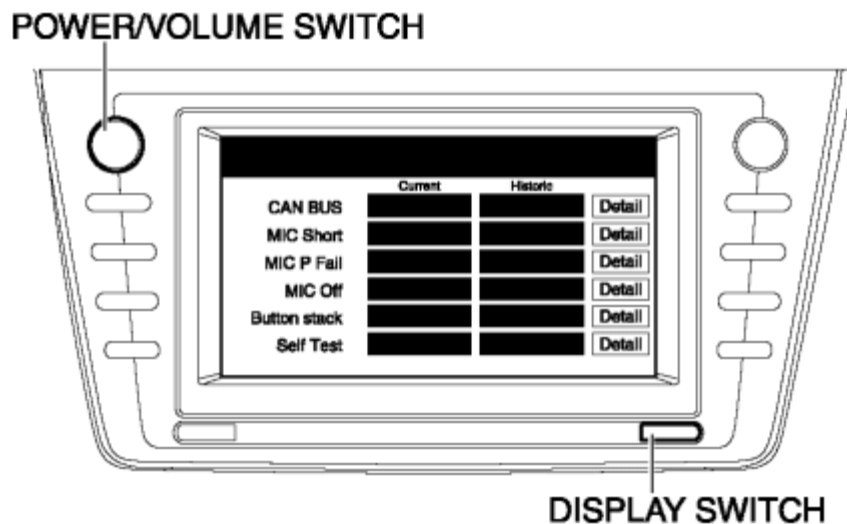

3. To stop the on-board diagnostic test mode, ignition is switched to off.

2012 - Mazda6 - Body and Accessories

CLEARING DTC [Bluetooth SYSTEM (HANDS-FREE TELEPHONE (HF/ TEL) SYSTEM)]


CAUTION:

- Before clearing the DTCs, be sure to enter all of the DTCs displayed in the DTC inspection in the Audio Repair Order Form.

With Audio Unit

Without display


1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[Bluetooth SYSTEM \(HANDS-FREE TELEPHONE \(HF/ TEL\) SYSTEM\)\]](#).)
2. While pressing the AUTO-M switch, simultaneously press the PRESET switch 4 for **2 s or more**.

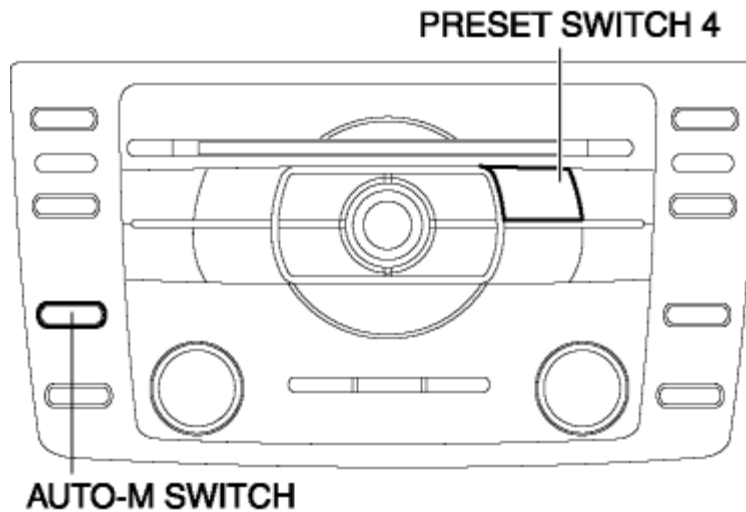

3. To stop the on-board diagnostic test mode, ignition is switched to off.

With display


1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[Bluetooth SYSTEM \(HANDS-FREE TELEPHONE \(HF/ TEL\) SYSTEM\)\]](#).)
2. Press the Selection switch 3 or Selection switch 4.

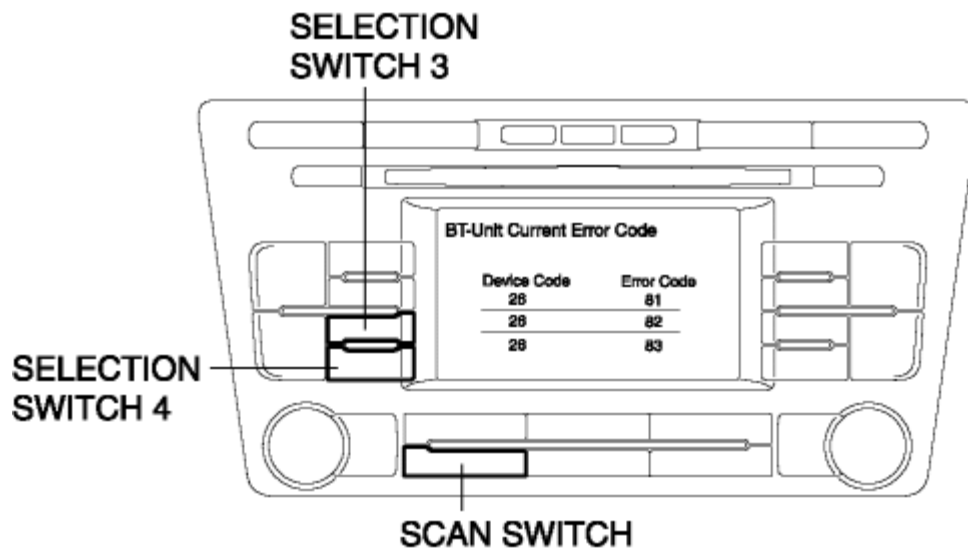

3. While pressing the SCAN switch, simultaneously press the Selection switch 4 for **3 s or more**.
4. To stop the on-board diagnostic test mode, ignition is switched to off.

With Car-navigation Unit

1. Launch the on-board diagnostic test mode. (See [DTC INSPECTION \[Bluetooth SYSTEM \(HANDS-FREE TELEPHONE \(HF/ TEL\) SYSTEM\)\]](#).)
2. While pressing the POWER/VOLUME switch, simultaneously press the DISPLAY switch for **2 s or more**.

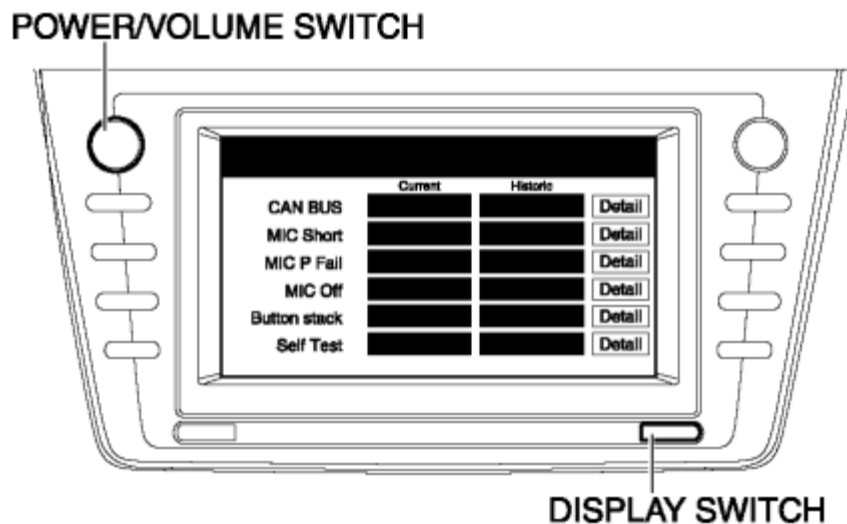

3. To stop the on-board diagnostic test mode, ignition is switched to off.