


2012 - Mazda6 - Body and Accessories

DTC INSPECTION [BLIND SPOT MONITORING (BSM)]

1. Connect the M-MDS (IDS) to the DLC-2.

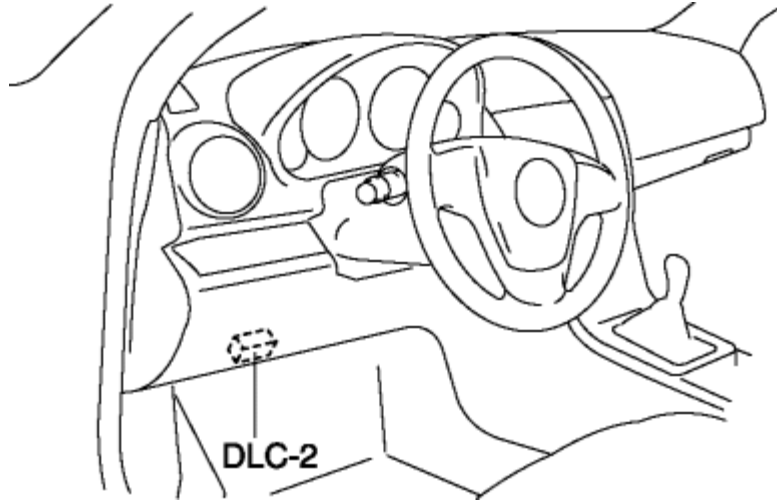

2. After the vehicle is identified, select the following items from the initialization screen of the IDS.

- Select "Self Test".
- Select "Modules".
- Select "BSML" or "BSMR".

3. Verify the DTC according to the directions on the screen.


- If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.

4. After completion of repairs, clear all DTCs stored in the BSM control module. (See [CLEARING DTC \[BLIND SPOT MONITORING \(BSM\)\]](#).)

2012 - Mazda6 - Body and Accessories

DTC INSPECTION [BLIND SPOT MONITORING (BSM)]

1. Connect the M-MDS (IDS) to the DLC-2.

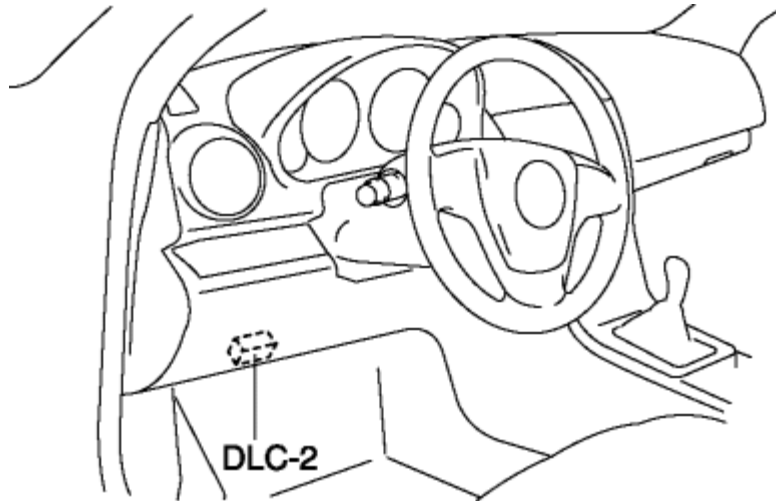

2. After the vehicle is identified, select the following items from the initialization screen of the IDS.

- Select "Self Test".
- Select "Modules".
- Select "BSML" or "BSMR".

3. Verify the DTC according to the directions on the screen.

- If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.

4. After completion of repairs, clear all DTCs stored in the BSM control module. (See [CLEARING DTC \[BLIND SPOT MONITORING \(BSM\)\]](#).)