


2012 - Mazda6 - Body and Accessories

CLEARING DTC [BLIND SPOT MONITORING (BSM)]

1. Connect the M-MDS (IDS) to the DLC-2.

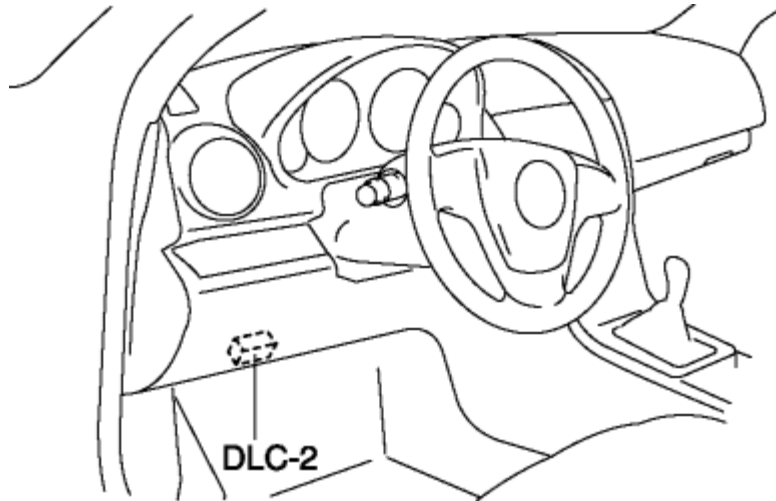


2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - Select "Self Test".
 - Select "Modules".
 - Select "BSML" or "BSMR".
3. Verify the DTC according to the directions on the screen.
4. Press the clear button on the DTC screen to clear the DTC.
5. Switch the ignition to off.
6. Switch the ignition to ON and wait for **5 s or more**.
7. Perform DTC inspection. (See [DTC INSPECTION \[BLIND SPOT MONITORING \(BSM\)\]](#).)
8. Verify that no DTCs are displayed.

2012 - Mazda6 - Body and Accessories

CLEARING DTC [BLIND SPOT MONITORING (BSM)]

1. Connect the M-MDS (IDS) to the DLC-2.

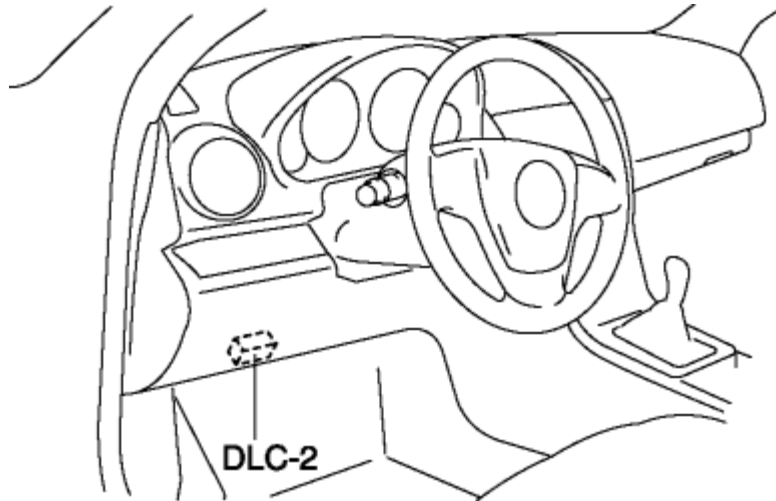

2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - Select "Self Test".
 - Select "Modules".
 - Select "BSML" or "BSMR".
3. Verify the DTC according to the directions on the screen.
4. Press the clear button on the DTC screen to clear the DTC.
5. Switch the ignition to off.
6. Switch the ignition to ON and wait for **5 s or more**.
7. Perform DTC inspection. (See [DTC INSPECTION \[BLIND SPOT MONITORING \(BSM\)\]](#).)
8. Verify that no DTCs are displayed.