

2012 - Mazda6 - Body and Accessories

ACTIVE COMMAND MODES TABLE [BLIND SPOT MONITORING (BSM)]

Command name	Operation Condition	Unit/Operation	Output part name	Terminal
BSM_OFF_IL*1	On : BSM OFF indicator light illuminates	On/Off	BSM OFF Indicator light	—
BUZZER*1	On : BSM buzzer sounds	On/Off	BSM beeper	—
WRN_IND_L*2	On : BSM indicator light (LH) illuminates	On/Off	BSM indicator light (LH)	D
WRN_IND_R*1	On : BSM indicator light (RH) illuminates	On/Off	BSM indicator light (RH)	D
VSPD	Input vehicle speed of 34 km/ h { 21 mph}	On/Off	Vehicle speed	—

*1
BSM control module (RH) only

*2
BSM control module (LH) only

2012 - Mazda6 - Body and Accessories

ACTIVE COMMAND MODES TABLE [BLIND SPOT MONITORING (BSM)]

Command name	Operation Condition	Unit/Operation	Output part name	Terminal
BSM_OFF_IL*1	On : BSM OFF indicator light illuminates	On/Off	BSM OFF Indicator light	—
BUZZER*1	On : BSM buzzer sounds	On/Off	BSM beeper	—
WRN_IND_L*2	On : BSM indicator light (LH) illuminates	On/Off	BSM indicator light (LH)	D
WRN_IND_R*1	On : BSM indicator light (RH) illuminates	On/Off	BSM indicator light (RH)	D
VSPD	Input vehicle speed of 34 km/ h { 21 mph}	On/Off	Vehicle speed	—

*1
BSM control module (RH) only

*2
BSM control module (LH) only