

2012 - Mazda6 - Body and Accessories

AUDIO UNIT RESET PROCEDURE [ENTIRE AUDIO SYSTEM]

CAUTION:


- If the audio unit reset procedure is performed, the audio will be reset to the manufacturer settings and the preset memory set by the customers will be erased. Only perform the audio unit reset if the all of the following conditions have been met.
 - Malfunction cannot be verified or reproduced.
 - DTC is not recorded.
 - Audio unit reset has not been performed in the past.
 - Received consent from the customer that preset memory and other settings set by the customer are to be erased and that the audio system can continue to be used after the audio unit reset is performed.

Without Display Type

1. Switch the ignition to off.
2. Remove the knob.
3. Press the audio unit reset switch.
4. Verify that the preset memory is erased (audio unit is reset).


NOTE:

- If the preset memory is not erased, press the audio unit reset switch again.
5. Install the knob.

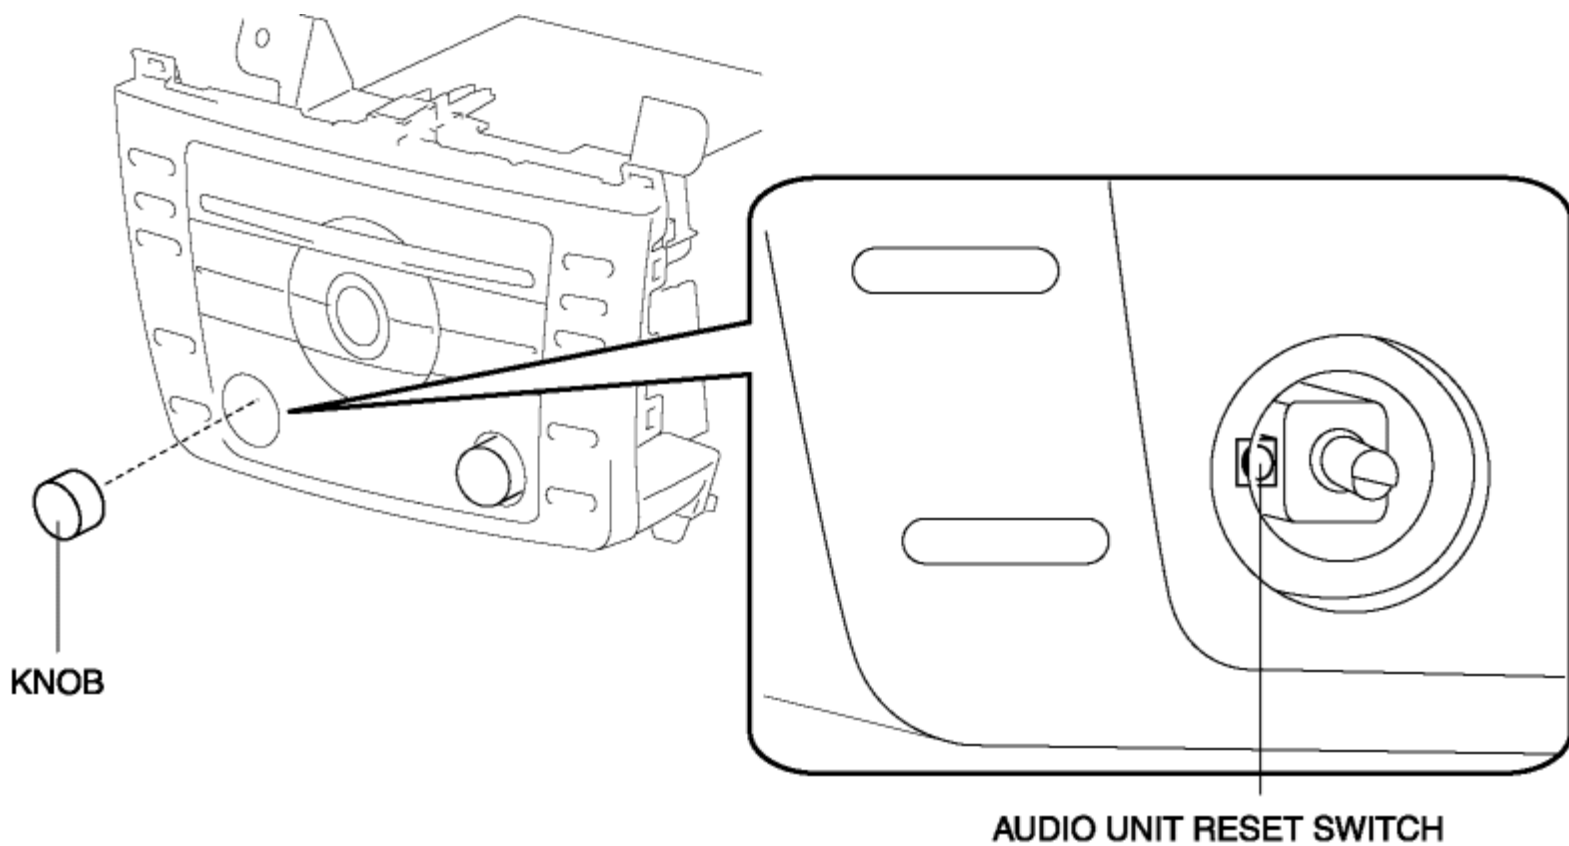

With Display Type

1. Switch the ignition to ACC or ON.
2. While pressing the POWER/VOLUME switch, simultaneously press the UP FOLDER switch and DOWN SEEK switch for **3 s or more**.

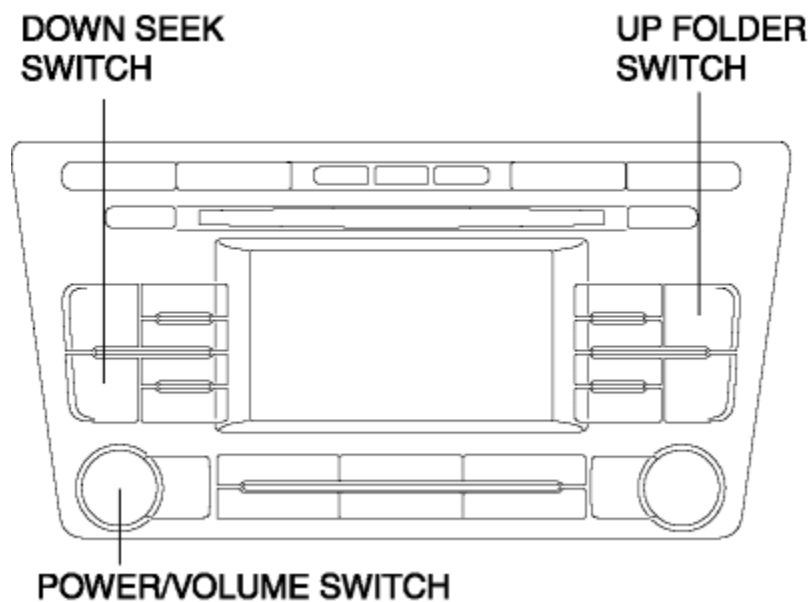

3. Verify that the preset memory is erased (audio unit is reset).

2012 - Mazda6 - Body and Accessories

AUDIO UNIT RESET PROCEDURE [ENTIRE AUDIO SYSTEM]

CAUTION:


- If the audio unit reset procedure is performed, the audio will be reset to the manufacturer settings and the preset memory set by the customers will be erased. Only perform the audio unit reset if the all of the following conditions have been met.
 - Malfunction cannot be verified or reproduced.
 - DTC is not recorded.
 - Audio unit reset has not been performed in the past.
 - Received consent from the customer that preset memory and other settings set by the customer are to be erased and that the audio system can continue to be used after the audio unit reset is performed.

Without Display Type

1. Switch the ignition to off.
2. Remove the knob.
3. Press the audio unit reset switch.
4. Verify that the preset memory is erased (audio unit is reset).


NOTE:

- If the preset memory is not erased, press the audio unit reset switch again.
5. Install the knob.

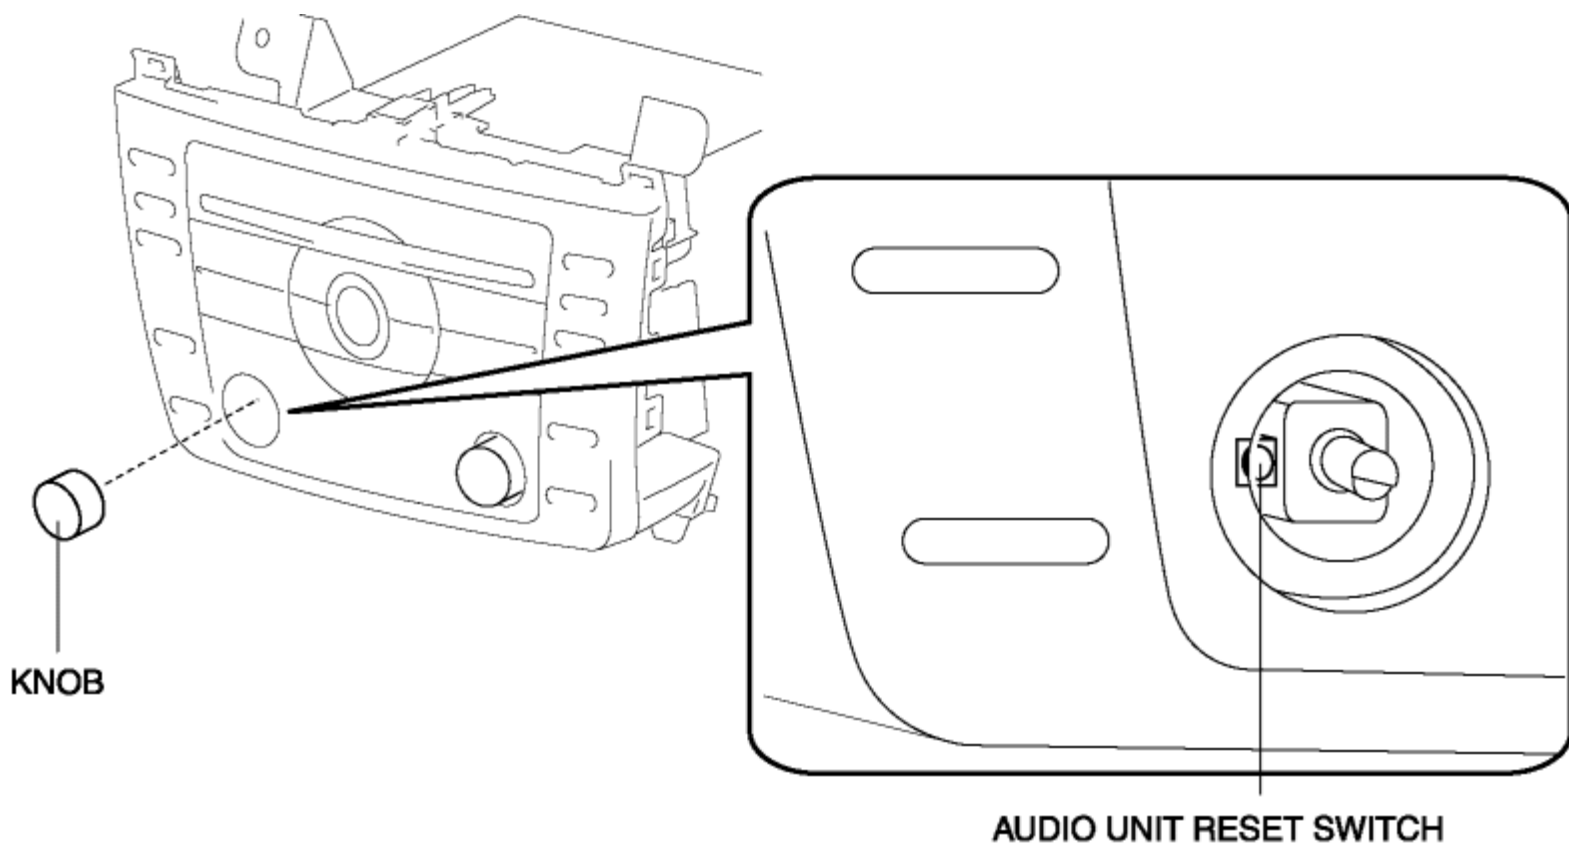

With Display Type

1. Switch the ignition to ACC or ON.
2. While pressing the POWER/VOLUME switch, simultaneously press the UP FOLDER switch and DOWN SEEK switch for **3 s or more**.

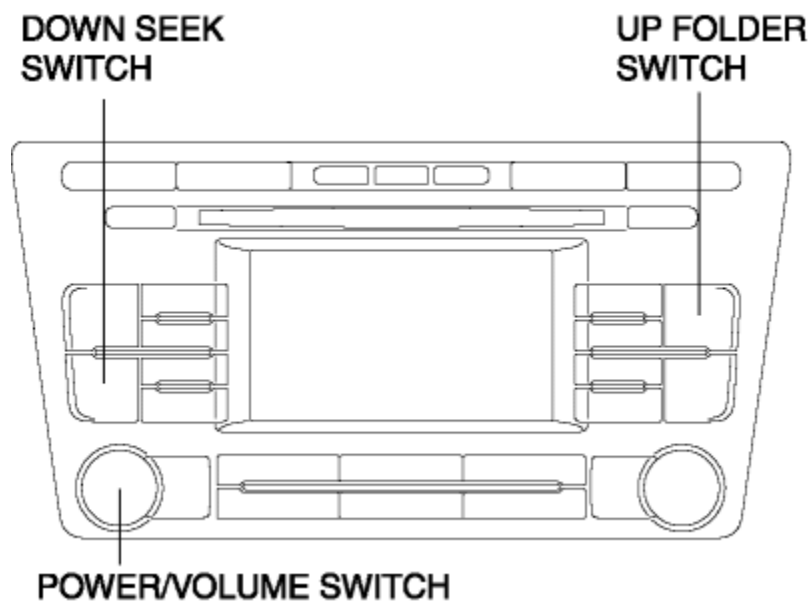

3. Verify that the preset memory is erased (audio unit is reset).

