

2012 - Mazda6 - Body and Accessories

No.4 ALL POWER WINDOWS OTHER THAN DRIVER'S SIDE DO NOT OPERATE USING THE POWER WINDOW MAIN SWITCH [POWER WINDOW SYSTEMS (WITHOUT EXTERIOR OPEN FUNCTION)]

4	All power windows other than driver's side do not operate using the power window main switch
POSSIBLE CAUSE	• Open or short circuit in wiring harness between ignition switch (IG1) and power window main switch (IG1). • Power window main switch malfunction

Diagnostic procedure

STEP	INSPECTION	ACTION
1	• Turn the ignition switch to the ON position. • Set the power cut-switch to the UNLOCK position. • Operate all power windows other than the driver's side using the power window main switch. • Do any power windows operate?	Yes Replace the power window main switch. (See POWER WINDOW MAIN SWITCH REMOVAL/ INSTALLATION.)
		No Inspect for an open or short circuit in the power window main switch wiring harness (battery power supply). Inspect the power window main switch connector connection. (damage/pulled-out pins, corrosion) Repair or replace if necessary.

2012 - Mazda6 - Body and Accessories

No.4 ALL POWER WINDOWS OTHER THAN DRIVER'S SIDE DO NOT OPERATE USING THE POWER WINDOW MAIN SWITCH [POWER WINDOW SYSTEMS (WITHOUT EXTERIOR OPEN FUNCTION)]

4	All power windows other than driver's side do not operate using the power window main switch
POSSIBLE CAUSE	• Open or short circuit in wiring harness between ignition switch (IG1) and power window main switch (IG1). • Power window main switch malfunction

Diagnostic procedure

STEP	INSPECTION	ACTION
1	• Turn the ignition switch to the ON position. • Set the power cut-switch to the UNLOCK position. • Operate all power windows other than the driver's side using the power window main switch. • Do any power windows operate?	Yes Replace the power window main switch. (See POWER WINDOW MAIN SWITCH REMOVAL/ INSTALLATION.)
		No Inspect for an open or short circuit in the power window main switch wiring harness (battery power supply). Inspect the power window main switch connector connection. (damage/pulled-out pins, corrosion) Repair or replace if necessary.