


2012 - Mazda6 - Body and Accessories

DTC INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

1. Connect the M-MDS (IDS) to the DLC-2.

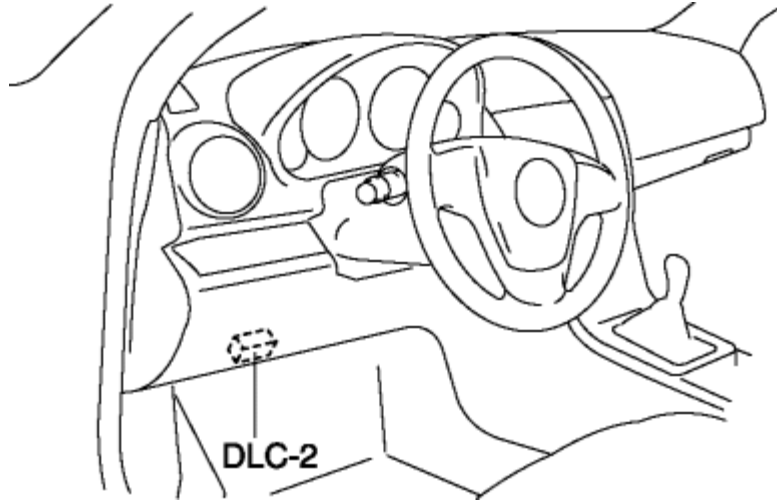


2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - a. Select "Self Test".
 - b. Select "Modules".
 - c. Select "RKE".
3. Verify the DTC according to the directions on the screen.
 - If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.
4. After completion of repairs, clear all DTCs stored in the keyless control module.
(See [CLEARING DTC \[ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)

2012 - Mazda6 - Body and Accessories

DTC INSPECTION [ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM]

1. Connect the M-MDS (IDS) to the DLC-2.

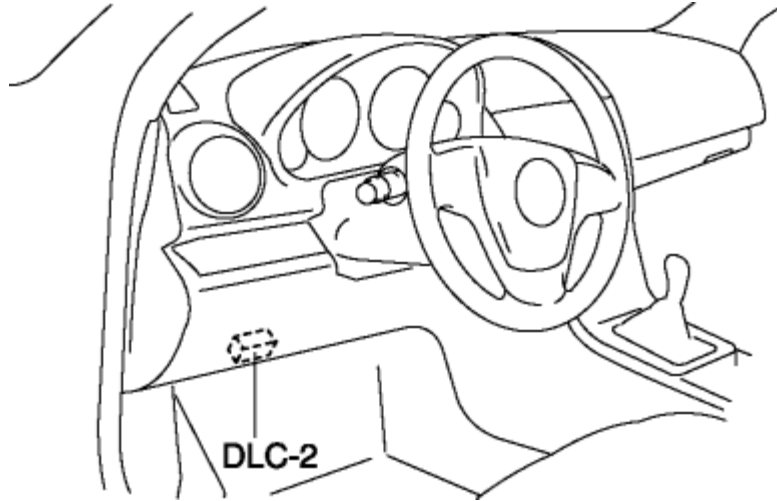

2. After the vehicle is identified, select the following items from the initialization screen of the IDS.
 - a. Select "Self Test".
 - b. Select "Modules".
 - c. Select "RKE".
3. Verify the DTC according to the directions on the screen.
 - If any DTCs are displayed, perform troubleshooting according to the corresponding DTC inspection.
4. After completion of repairs, clear all DTCs stored in the keyless control module.
(See [CLEARING DTC \[ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM\]](#) .)