


2012 - Mazda6 - Body and Accessories

CLEARING DTC [IMMOBILIZER SYSTEM (ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM)]

1. Connect the M-MDS to the DLC-2.

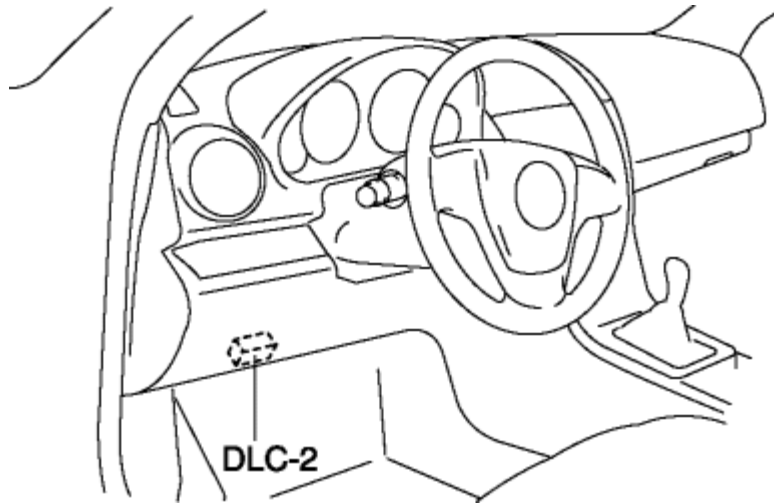

2. After the vehicle is identified, select the following items from the initialization screen of the M-MDS.

- When using the IDS (laptop PC)


1. Select "Self Test".
2. Select "Modules".
3. Select "RKE".

3. Verify the DTC according to the directions on the screen.
4. Press the clear button on the DTC screen to clear the DTC.
5. Switch the ignition to off.
6. Switch the ignition to ON and wait for **5 s more**.
7. Perform DTC inspection. (See **DTC INSPECTION [IMMOBILIZER SYSTEM (ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM)]**.)
8. Verify that no DTCs are displayed.

2012 - Mazda6 - Body and Accessories

CLEARING DTC [IMMOBILIZER SYSTEM (ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM)]

1. Connect the M-MDS to the DLC-2.

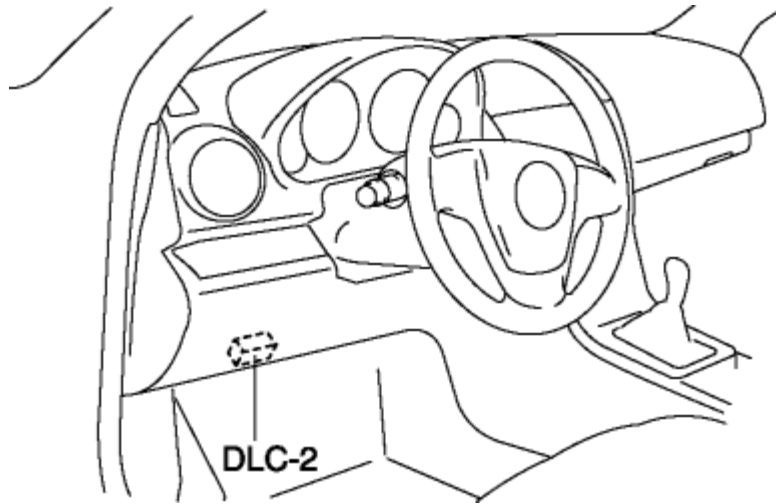

2. After the vehicle is identified, select the following items from the initialization screen of the M-MDS.

- When using the IDS (laptop PC)

1. Select "Self Test".
2. Select "Modules".
3. Select "RKE".

3. Verify the DTC according to the directions on the screen.
4. Press the clear button on the DTC screen to clear the DTC.
5. Switch the ignition to off.
6. Switch the ignition to ON and wait for **5 s more**.
7. Perform DTC inspection. (See **DTC INSPECTION [IMMOBILIZER SYSTEM (ADVANCED KEYLESS ENTRY AND PUSH BUTTON START SYSTEM)]**.)
8. Verify that no DTCs are displayed.